

Philips
Smart All-in-One display

Android
22 (21.5" / 54.6 cm diag.)

S221C3AFD



Smart All-in-One

The world at your fingertips!

Open up a new world of opportunities with the Philips Smart All-in-One powered by Android™. The expansive 21.5-inch multi-touch display is perfect for streaming HD videos, music, e-Learning and web surfing to the next level.

Android with a big view

- Pre-loaded apps get you started right away
- Fast internet access with Wi-Fi or Ethernet port
- App downloads from Google Play™ Store
- 16:9 Widescreen Full HD display for best viewing experience
- Large optical multi-touch display for easy navigation

Prime multimedia experience

- Play movies, photos & music directly from USB & SDHC drives
- Webcam and mic keeps you connected with family and friends
- Superb stereo sound for multimedia

Easy to connect and enjoy

- Connect your own keyboard and mouse and explore the world
- USB Hub with 4 ports for easy connections
- SmartStand design features one-touch adjustment for easy use
- Expand your storage with SDHC media

PHILIPS

Highlights

Big multi-touch screen

Open up a new world of opportunities with the Philips Smart All-in-One powered by Android. Thanks to its built in advanced optical multi-touch technology, you can now manipulate your content with pinch, zoom, rotate, swipe or scroll. Its generous, large screen frees you from squinting on a small size smart display. Reading e-books or newspapers is easy on your eyes thanks to its large font and picture capabilities. Its large touch screen is just the right tool to enable young children to express their creativity with e-painting, learn their ABC's, or use interactive educational apps.

16:9 Widescreen Full HD



The Smart All-in-One features a 16:9 Full HD (1920 x 1080 resolution) screen for a fully-immersive entertainment experience. It's fully future-proof as it supports 1080p signals from all sources, including the most recent Blu-ray and advanced HD game consoles. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

Google Play™ Store


Enjoy great applications from the Google Play™ Store. A single touch on the app icon will take you to the store via Wi-Fi or Ethernet connection. Download and install apps for entertainment, games, utilities, office, photos, video, news, social network, etc., which are

available and updated from the store. The clear, easy-to-use interface helps you to browse intuitively which can be sorted by rating, category or popularity.

Socialize with webcam

The integrated webcam, with superb, bright and crisp images, enables you to socialize with your family and friends just like face to face. The Smart All-in-One's ultra-sensitive microphone ensures that your voice carries through crisp and clear. You can hear clear audio either from its built in stereo speakers, or attach your own headphones for private conversation. This simple built-in solution is easy and ready to go at any time.

Superb stereo sound

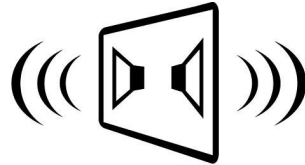

Built-in Speakers

Immerse yourself with the high quality built-in stereo speakers.

Expand your storage

Accommodate your ever growing library. You can expand your storage capacity by adding external SDHC card or USB flash using the built-in expansion slot.

4 Ports USB 2.0 HUB

A USB Hub allows you to conveniently connect and play multimedia devices such as USB memory devices, camera, portable HDD, web camera, PDA, printer and many other devices. The conveniently located USB 2.0 Hub

on the monitor allows USB 2.0 signals to pass thru to the computer for more ease-of-use. Note that many devices like cameras and HDD may need to be powered independently, as they have higher power requirements than the monitor USB Hub can provide.

SmartStand



The Philips Smart All-in-One features a SmartStand with maximum recline adjustability and easy-one-touch-adjustment. The easy adjustment of the SmartStand enables you to use it in various ergonomic positions. With just under 60 degree recline position, you can now interact with the display naturally to touch and type, or you can use it in an upright position to sit and do some serious work.

Fast internet access

CDMA or code division multiple access is a spread-spectrum digital cellular radio system that uses discrete codes to distinguish users.

Pre-loaded apps

Pre-loaded apps get you started right away

Connect your own keyboard and

Connect your own keyboard and mouse and explore the world

USB and SDHC memory drives

Play movies, photos & music directly from USB & SDHC drives



Touch



Google Play



Webcam



USB 4x



SmartStand



Google Play



Built-in Audio



HDMI

Specifications

Connectivity

- Signal Input: VGA (Analog), HDMI, RJ 45
- USB: USB 2.0 x 4
- Audio (In/Out): PC audio-in, Headphone jack
- Wireless connection: Wi-Fi (Built-in), Wireless LAN (802.11 b/g/n)
- SDHC card slot
- Mic in
- Webcam: 1 MP

Picture/Display

- Panel Size: 21.5 inch / 54.6 cm
- Aspect ratio: 16:9
- LCD panel type: ADS-LCD
- Backlight type: W-LED system
- Optimum resolution: Android: 1280 x 720, PC: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m²
- Display colors: 16.7 M
- Contrast ratio (typical): 1,000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 14 ms
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Effective viewing area: 476.64 (H) x 268.11 (V)
- SmartResponse (typical): 5 ms (Gray to Gray)
- Multi-touch optical panel: 2-point touch

Preloaded applications

- Music Player
- Web Browser
- Gallery
- Camera
- Email
- Google Play
- Setting
- Youtube

Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7, Windows 8
- User convenience: Power On/Off, Menu/OK, Volume/Up, Input/Down, SmartImage/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Russian, Portuguese, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (75x75mm)

Sound

- Built-in Audio: 2.0 watts x 2

Video/Audio Playback

- Audio format: MPEG1, MPEG2, MP3, WMA, WAV,

- Ogg Vorbis, AAC
- Photo format: JPEG, BMP, PNG, GIF
- Video format: MPEG4, H.264, WMV

Stand

- Tilt: 12~54 degree

Power

- Power supply: External, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 27.17 W (typ.) (EnergyStar 5.2 test method)
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Android standby mode: 6.42 W (typ.)

Dimensions

- Product with stand (mm): 524 x 373 x 78 mm
- Packaging in mm (WxHxD): 580 x 446 x 137 mm
- Product without stand (mm): 524 x 337 x 51 mm

Weight

- Product with packaging (kg): 6.4 kg
- Product with stand (kg): 4.76 kg

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: CCC, CECP, cETLus, CE Mark, CEL, FCC Class B, WEEE

Cabinet

- Color: Black Cherry
- Finish: Glossy

System Specifications

- Operating system: Android 4.1
- Built-in memory capacity: 1GB DDR3, 8GB EMMC Flash
- External memory expansion: Optional external SDHC card, or USB flash drive upto 64GB, or external HDD
- Processor: Dual-core, ARM-based, Amlogic, 1.5GHz



Issue date 2024-03-24

Version: 2.0.1

EAN: 87 12581 69603 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Requires external keyboard and mouse for Android (Not included in the offer)

* External HDD may require additional power supply.

* Google and Android are trademarks of Google, Inc. Corporate names, trademarks stated here are the property of their respective companies