



Philips  
Curved LCD monitor with  
Ultra Wide-Color

**E Line**  
32 (31.5"/80 cm diag.)  
2560 x 1440 (QHD)

**325E1C**

## Simply immersive

The 32" curved E line display offers a truly immersive experience in a stylish design. Crystal-clear QHD with Ultra Wide-Color and AMD FreeSync technology brings your images to life!

### Features designed for you

- DisplayPort connection for maximum visuals
- HDMI ensures universal digital connectivity
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity
- Cable management reduces cable clutter for a neat workspace

### Curved design inspired by the world around us

- Curved display design for a more immersive experience

### Superb Picture Quality

- SmartContrast for rich black details
- VA display delivers awesome images with wide viewing angles
- Crystal clear images with Quad HD 2560 x 1440 pixels
- Ultra Wide-Color wider range of colours for a vivid picture
- SmartImage game mode optimised for gamers
- Effortlessly smooth gameplay with AMD FreeSync™ technology

# PHILIPS

# Highlights

## Curved display design



Desktop monitors offer a personal user experience, which suits a curved design very well. The curved screen provides a pleasant yet subtle immersion effect, which focuses on you at the centre of your desk.

## Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colours for a more brilliant picture. The Ultra Wide-Color wider "colour gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring media entertainment, images and even productivity more alive with vivid colours from Ultra Wide-Color Technology.

## VA display



The Philips VA LED display uses an advanced multi-domain vertical alignment technology


that gives you super-high static contrast ratios for extra-vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web browsing, films, gaming and demanding graphical applications. Its optimised pixel management technology gives you a 178/178 degree extra-wide viewing angle, resulting in crisp images.

## CrystalClear images



These Philips screens deliver Crystal Clear, Quad HD 2560 x 1440 or 2560 x 1080 pixel images. Utilising high-performance panels with a high-density pixel count, enabled by high bandwidth sources like USB-C, Displayport and HDMI, these new displays will make your images and graphics come alive. Whether you are a demanding professional who requires extremely detailed information for CAD-CAM solutions and uses 3D graphic applications, or a financial wizard working on huge spreadsheets, Philips displays will give you Crystal Clear images.

## Ultra-smooth gaming

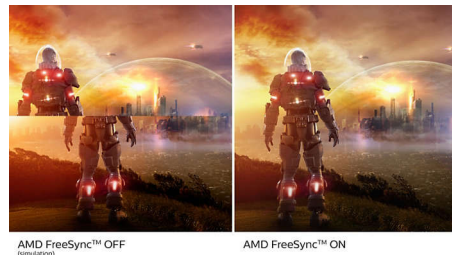

Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid,

artefact-free performance at virtually any frame rate with AMD FreeSync™ technology, smooth, quick refresh and ultra-fast response time.

## SmartContrast



SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## SmartImage Game mode



The new Philips gaming display has quick-access OSD fine-tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts the display with the fastest response time and high colour, along with image adjustments. "RTS" mode (Real-time strategy) has a special SmartFrame mode that enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customised settings based on different games, ensuring best performance.



# Specifications

## Connectivity

- Signal Input: VGA (Analogue), HDMI 1.4, DisplayPort 1.2
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out

## Picture/Display

- Panel Size: 31.5 inch/80 cm
- Aspect ratio: 16:9
- LCD panel type: VA LCD
- Backlight type: W-LED system
- Pixel pitch: 0.272 x 0.272 mm
- Brightness: 250 cd/m<sup>2</sup>
- Display colours: 16.7 M
- Colour gamut (typical): NTSC 102%\*, sRGB 123%\*
- Contrast ratio (typical): 3000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (Grey to Grey)\*
- Viewing angle: 178° (H)/178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Maximum resolution: 2560 x 1440 @ 75 Hz\*
- Effective viewing area: 697.3 (H) x 392.3 (V) mm - at a 1500R curvature\*
- Scanning Frequency: 70-115 kHz (H) / 48-75 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 93 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- AMD FreeSync™ technology

## Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu, Brightness, Input, SmartImage Game
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: Internal, 100–240 VAC, 50–60 Hz
- Off mode: <math>0.3\text{ W}</math> (typ.)
- On mode: 47.3 W (typ.)
- Standby mode: <math>0.5\text{ W}</math> (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: F

## Dimensions

- Product with stand (mm): 709 x 523 x 281 mm
- Packaging in mm (W x H x D): 800 x 625 x 236 mm
- Product without stand (mm): 709 x 425 x 88 mm

## Weight

- Product with packaging (kg): 10.25 kg
- Product with stand (kg): 7.34 kg
- Product without stand (kg): 6.52 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

## Sustainability

- Environmental and energy: RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, CU-EAC, CB, UKRAINIAN

## Cabinet

- Colour: Black
- Finish: Textured

## What's in the box?

- Cables: HDMI cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-04-26

Version: 7.0.1

EAN: 87 12581 75850 9

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Radius of the arc of the display curvature in mm

\* The maximum resolution works for either HDMI input or DP input.

\* Response time value equal to SmartResponse

\* NTSC Area based on CIE 1976

\* sRGB Area based on CIE1931

\* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

\* The monitor may look different from feature images.