



Philips
LCD monitor

19"

SXGA

190B8CS



High-productivity display, great convenience

With a full range of handy features that boost productivity, the easy-to-operate Philips 190B8 delivers outstanding convenience for mainstream business applications at an attractive total cost of ownership.

Best total cost of ownership solution

- SmartManage compatibility enables LAN-based asset management
- PerfectTune ensures top-quality LCD display delivered to you
- Zero Bright Dot™ eliminates LCD bright dot defects
- Empowered for Windows Vista

Outstanding front of screen performance

- SmartImage: For an optimised display experience
- SmartContrast: Dynamic, optimised contrast for visual clarity
- 5 ms fast response time

Maximum comfort for maximum productivity

- Tilt, swivel and height-adjust for an ideal viewing position

Great convenience

- Dual input accepts both analogue VGA and digital DVI signals
- Hassle-free display performance tuning with SmartControl II
- Built-in speakers for audio without desktop clutter

PHILIPS
sense and simplicity

Highlights

SmartManage enabled

SmartManage is a system for monitoring, managing and checking the status of display devices as well as delivering remote support to users who experience difficulties - all accomplished over a LAN.

PerfectTune

PerfectTune is industry-leading, proprietary Philips testing and algorithm technology for monitor adjustment and fine tuning, an extensive process that ensures ultimate display performance in compliance with a standard four times more stringent than Microsoft's Vista requirements from each and every monitor that leaves the factory - not just a few review samples. Only Philips goes to these lengths to deliver this exacting level of colour accuracy and display quality in every new monitor.

Zero Bright Dot™




Bright dots are defects in an LCD panel once thought to be an inevitable part of the manufacturing process. With Zero Bright Dot™, Philips monitors are guaranteed to be without bright dot defects.

Windows Vista-ready

Philips Vista-ready monitors are empowered for vibrant, exciting display of this new, visually sophisticated and demanding Windows operating system, designed to enhance your entertainment experience, make you more productive and help you control your computing experience at home and in the office, making viewing, finding and organising

information for work or play quick, efficient and easy.

SmartImage

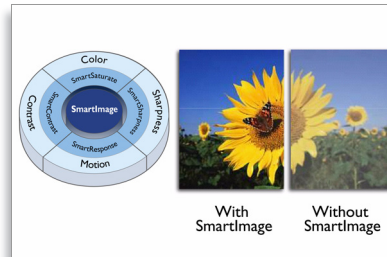

SmartImage is an exclusive leading-edge Philips technology that analyses the content displayed on your screen. Based on a scenario you select, SmartImage dynamically enhances the contrast, colour saturation and sharpness of images and videos for ultimate display performance - all in real time and at the press of a single button.

SmartContrast



SmartContrast is Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and optimum contrast for better entertainment when viewing videos or playing games where dark hues are displayed; when you select the Economy mode, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

5 ms on/off response time


On-Off response time is the period required for a liquid crystal cell to go from active (black)

to inactive (white) and back to active (black) again. It is measured in milliseconds. Faster is better: lower response time means faster transitions and, therefore, results in fewer visible image artefacts in the display of transition of texts and graphics. On-Off response time is a more important measure in the display of business content like documents, graphs and photos.

Compact Ergo Base

The Compact Ergo Base is a 'people-friendly' Philips monitor base that tilts, swivels and height-adjusts so each user can position the monitor for maximum viewing comfort and efficiency.

Dual input

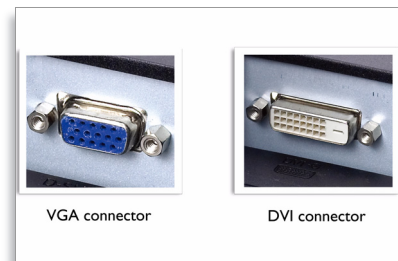

Dual input provides connectors to accommodate input of both analogue VGA and digital DVI signals.

SmartControl II

SmartControl II is monitor-based software with an easy-to-use on-screen graphic interface that guides you through fine-tuning resolution, colour calibration and other display settings including brightness, contrast, clock & phase, position, RGB, white point and - on models with onboard speakers - volume adjustments.

Built-in speakers

Audio speakers built into a display device.



Specifications

Picture/Display

- LCD panel type: 1280 x 1024 pixels, Anti-glare polariser, RGB vertical stripe
- Panel Size: 19"/48 cm
- Effective viewing area: 376.3 x 301.1 mm
- Pixel pitch: 0.294 x 0.294 mm
- Brightness: 300 cd/m²
- Contrast ratio (typical): 800:1
- SmartContrast ratio (dynamic): 3000:1
- Display colours: 16.7 M
- Viewing angle: 176° (H)/170° (V), @ C/R > 5
- Response time (typical): 5 ms
- White Chromaticity, 6500K: $x = 0.313/y = 0.329$
- White Chromaticity, 9300K: $x = 0.283/y = 0.297$
- Maximum Resolution: 1280 x 1024 @ 75 Hz
- Recommended Resolution: 1280 x 1024 @ 60 Hz
- Video Dot Rate: 140 MHz
- Horizontal Scanning Frequency: 30 - 83 kHz
- Vertical Scanning Frequency: 56 - 75 Hz
- Picture enhancement: SmartImage
- sRGB

Connectivity

- Signal Input: Analogue (VGA), DVI-D, PC Audio in
- Audio output: Stereo Audio (3.5 mm jack) 1x
- USB: 1 x USB 2.0
- Video Sync Input Signal: Composite Sync, Separate Sync, Sync on Green
- Video input impedance: 75 ohm
- Sync input impedance: 2.2k ohm
- Video input signal levels: 0.7 Vpp

Convenience

- Built-in Audio: 1.5 W RMS x 2 stereo speakers
- Convenience Enhancements: On-screen Display, SmartManage enabled, SmartControl II
- Monitor Controls: SmartImage, Volume control, Auto (Back), Power On/Off, Input (Down), Brightness (Up), Menu (OK)
- OSD Languages: English, French, German, Italian, Russian, Portuguese, Simplified Chinese, Spanish
- Other convenience: Kensington lock compatible
- Plug & Play Compatibility: DDC/CI, sRGB, Windows 98/ME/2000/XP/Vista
- Regulatory Approvals: CE Mark, EMC, Energy Star,

- FCC-B, UL, CSA, SEMKO, TCO '03, TÜV/GS, TÜV Ergo
- Swivel: +/- 60°
- Tilt: -5° to 25°
- VESA Mount: 100 x 100 mm

Accessories

- Included Accessories: AC Power Lead, Audio Cable, VGA cable
- Optional accessories: Super Ergo Base
- User manual

Dimensions

- Box dimensions (W x H x D): 503 x 507 x 198 mm
- Box dimensions in inch (W x H x D): 19.8 x 20 x 7.8 inch
- Set dimensions (W x H x D): 422 x 374.2 x 68.7 mm
- Set dimensions in inch (W x H x D): 16.6 x 14.7 x 2.7 inch
- Set dimensions with stand (W x H x D): 422 x 411.2 x 198.8 mm
- Set dimensions with stand in inch (W x H x D): 16.6 x 16.2 x 7.8 inch
- Height adjustment range: 60 mm
- Height adjustment range (inch): 2.4 inch
- MTBF: 50,000 hrs
- Relative humidity: 20% - 80%
- Temperature range (operation): 0°C to 40°C
- Temperature range (storage): -20°C to 60°C
- Product weight (+stand): 5.86 kg
- Product weight (+stand) (lb): 12.9 lb
- Weight incl. Packaging: 6.77 kg
- Weight incl. Packaging (lb): 14.9

Electricity

- Complies with: Energy Star
- Consumption: < 36 W
- Consumption (economy mode): 28 W
- Off Mode: < 1 W
- Power LED indicator: Operation - green, Standby/sleep - Amber
- Power supply: Built-in, 100-240 VAC, 50/60 Hz



Issue date 2009-04-11

Version: 3.0.3

12 NC: 8670 000 34246
EAN: 87 12581 36637 7

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com