



Philips
LCD monitor with LED
backlight

V Line
22" (55.9 cm)

220V3LSB

Enjoy great LED pictures in vivid colours

This attractive, slim display is a delight to use. Essential features like SmartContrast that ensure rich, bright images make it a great choice!

Great picture quality

- SmartContrast 10,000,000:1 for incredibly rich black details
- LED technology for natural colours

Design that complements any interior

- Attractive slim, glossy design
- Small footprint to blend into any lifestyle

Greener every day

- Energy Star for energy efficiency and low power consumption
- Mercury Free eco-friendly display

Great convenience

- Easy display performance tuning with SmartControl Lite


PHILIPS

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content, which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of the LCD backlight, resulting in a super high contrast ratio. It also gives superior colour reproduction thanks to consistent brightness across the screen.

SmartContrast ratio 10,000,000:1

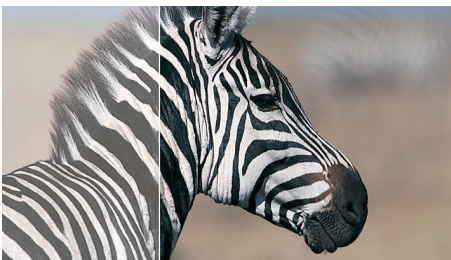

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with

unique extreme dimming and backlight-boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent black level and accurate rendition of dark shades and colours. It gives a bright, lifelike picture with high contrast and vibrant colours.

SmartControl Lite

SmartControl Lite is the next generation 3D icon-based GUI monitor control software. This allows the user to fine-tune most parameters of the monitor like Colour, Brightness, screen calibration, Multimedia, ID management etc. with the mouse.

Mercury Free

Philips monitors with LED backlighting are free from Mercury, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its lifecycle, from manufacturing to disposal.

Attractive slim, glossy design

Attractive slim, glossy design

Small footprint

Small footprint to blend into any lifestyle

Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency programme also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards and which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1 Watt power consumption, whereas Philips monitors consume less than 0.5 Watts. Further details can be obtained from www.energystar.gov



Specifications

Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

Picture/Display

- Panel Size: 22 inch/55.87 cm
- Aspect ratio: 16:10
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.282 x 0.282 mm
- Optimum resolution: 1680 x 1050 @ 60 Hz
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H)/160° (V), @ C/R > 10
- Effective viewing area: 473.76 (H) x 296.1 (V)
- Scanning Frequency: 30–83 kHz (H)/56–75 Hz (V)
- sRGB

Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7
- User convenience: Auto/Down, 4:3 Wide/Up, Brightness/Back, Menu/OK, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese, Turkish
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

Stand

- Tilt: -5/+20 degree

Power

- Power supply: Built-in, 100–240 VAC, 50–60 Hz
- Off mode: 0.5 W
- On mode: 16.72 W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode - White (flashing)

Dimensions

- Product with stand (mm): 530 x 425 x 213 mm
- Packaging in mm (W x H x D): 574 x 438 x 104 mm
- Product without stand (mm): 530 x 364 x 53 mm

Weight

- Product with packaging (kg): 5.4 kg
- Product with stand (kg): 4.15 kg
- Product without stand (kg): 3.65 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%–80% %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TCO 5.2, TUV Ergo, TUV/GS, UL/cUL, WEEE

Cabinet

- Colour: Black
- Finish: Glossy (front bezel)/Textured (rear cover)



Issue date 2024-03-24

Version: 3.0.1

EAN: 87 12581 62308 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com