

PHILIPS

LCD monitor

Monitor

5000 series

24 (23.8" / 60.5 cm diag.)

1920 x 1080 (Full HD)

24E1N5300HE



Collaboration simplified

with built-in webcam

This Philips monitor is designed for the remote work environment. The integrated 5 MP webcam delivers sharp images and the noise-cancelling mic helps people hear you loud and clear.

Features designed for you

- Secure sign-in with pop-up webcam
- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- Cable management reduces cable clutter for a neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing
- Tilt, pivot and adjust the height for an ideal viewing position
- Collaboration-ready webcam with noise-cancelling mic.
- Connect your notebook with one USB-C cable

Superb Picture Quality

- 16:9 Full HD display for crisp, detailed images
- IPS LED wide view technology for image and colour accuracy
- Effortlessly smooth gameplay with AMD FreeSync™ technology

Monitor

LCD monitor

24E1N5300HE/01


Highlights

USB-C connection




This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high-resolution video and transfer data at super speed, while powering up and recharging your compatible device at the same time.

IPS technology

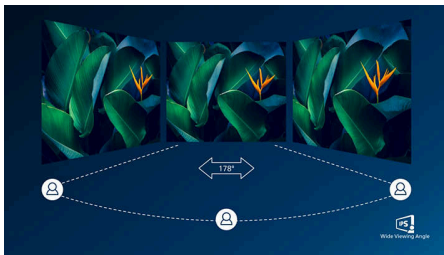

IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

Ultra-smooth gaming

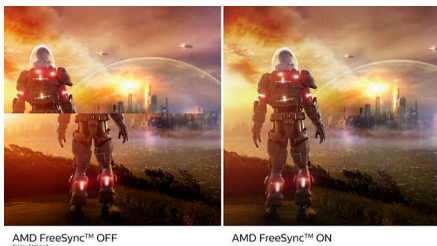

Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid,

artefact-free performance at virtually any frame rate with AMD FreeSync™ technology, smooth, quick refresh and ultra-fast response time.

Webcam and noise-cancelling mic



This Philips monitor comes with a built-in 5 MP webcam, noise-cancelling microphone and speakers, making it perfect for working from home and collaborating remotely. It is equipped with advanced sensors that work seamlessly with Windows Hello facial recognition, allowing you to log into your Windows devices in less than 2 seconds. For added privacy, a physical camera switch lets you disable the webcam when not in use. The noise-cancelling microphone and dual 5 watt integrated speakers ensure clear communication.

Built-in stereo speakers



A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.

LowBlue Mode and Flicker-free




Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

Pop-up webcam



Philips' innovative and secure webcam pops up when you need it and securely tucks back into the monitor when you are not using it. The webcam is also equipped with advanced sensors for Windows Hello facial recognition, which conveniently logs you into your Windows devices in less than 2 seconds, 3 times faster than a password.

Compact Ergo Base

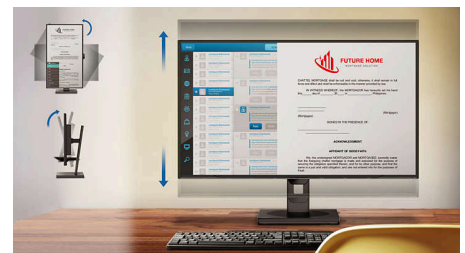

The Compact Ergo Base is a people-friendly Philips monitor base that tilts, pivot and height-adjusts so each user can position the monitor for maximum viewing comfort and efficiency.



AMD FreeSync



Monitor

LCD monitor

24E1N5300HE/01

Highlights

EasySelect Menu Toggle Key



The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

Cable management



Cable management is an intimate design that maintains a tidy workspace by organising the cables and wires required for the operation of a display device.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colours, expect a true-to-life picture.



Monitor

LCD monitor

24E1N5300HE/01

Specifications

Picture/Display

Panel Size: 23.8 inch/60.5 cm
Aspect ratio: 16:9
LCD panel type: IPS technology
Backlight type: W-LED system
Pixel pitch: 0.2745 x 0.2745 mm
Brightness: 300 cd/m²
Display colours: 16.7 M
Colour gamut (typical): NTSC 104.8%*, sRGB 120.9%*
Contrast ratio (typical): 1000:1
SmartContrast: Mega Infinity DCR
Response time (typical): 4 ms (Grey to Grey)*
Viewing angle: 178° (H)/178° (V), @ C/R > 10
Picture enhancement: SmartImage game
Maximum resolution: 1920 x 1080 @ 75 Hz*
Effective viewing area: 527.04 (H) x 296.46 (V)
Scanning Frequency: 30–85 kHz (H) / 48–75 Hz (V)
sRGB
Flicker-free
Pixel Density: 92.56 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
MPRT: 1 ms
EasyRead
AMD FreeSync™ technology

Connectivity

Signal Input: HDMI 1.4 x 1, DisplayPort 1.2 x 1, USB-C 3.2 Gen 1 x 1 (upstream, Power Delivery up to 65 W)
Sync Input: Separate Sync
Audio (In/Out): Audio out
USB:: USB 3.2 x 4 (downstream with 1 fast charge B.C 1.2)

USB

Power delivery: USB PD version 3.0
Super speed: Data and Video transfer
DP: Built-in Display Port Alt mode
USB-C max. power delivery: Up to 65 W (5V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/3.25A)
USB-C: Reversible plug connector

Convenience

Built-in Speakers: 5 W x 2
Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10/8.1/8/7
User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game

OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
Other convenience: Kensington lock, VESA mount (100 x 100 mm)
Built-in webcam: 5.0 megapixel camera with microphone and LED indicator
Noise cancellation

Stand

Height adjustment: 130 mm
Pivot: -/+ 90 degree
Tilt: -5/20 degree

Power

Power supply: External, 100–240 VAC, 50–60 Hz
Off mode: 0.3 W (typ.)
On mode: 24.2 W (typ.)
Standby mode: 0.5 W (typ.)
Power LED indicator: Operation - White, Standby mode - White (flashing)
Energy Label Class: E

Dimensions

Packaging in mm (W x H x D): 600 x 526 x 143 mm
Product without stand (mm): 540 x 336 x 43 mm
Product with stand (max height): 540 x 494 x 198 mm

Weight

Product with packaging (kg): 7.65 kg
Product with stand (kg): 4.37 kg
Product without stand (kg): 2.71 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
Temperature range (operation): 0 to 40 °C
MTBF: 50,000 hrs (excluding backlight) hour(s)
Relative humidity: 20%-80 %
Temperature range (storage): -20 to 60 °C

Sustainability

Environmental and energy: RoHS
Recyclable packaging material: 100 %
Specific Substances: Mercury free, PVC/BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, CU-EAC, EAEU RoHS, FCC Class B, ICES-003, TUV/ISO9241-307, TUV-BAUART

Cabinet

Colour: Black
Finish: Textured

What's in the box?

Cables: HDMI cable, USB-C to USB-A/C Y cable, Power cable
Monitor with stand
User Documentation

- * "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
- * The maximum resolution works for either HDMI input or DP input.
- * For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
- * Response time value equal to SmartResponse
- * MPRT adjusts the brightness for blur reduction, so the brightness cannot be adjusted while MPRT is turned on. To reduce motion blur, the LED backlight will strobe in time with the screen refresh rate, which may cause a noticeable change in brightness.
- * MPRT is a gaming-optimised mode. Turning on MPRT may cause noticeable screen flickering. It is recommended to turn this mode off when you are not using the gaming function.
- * NTSC Area based on CIE 1976
- * sRGB Area based on CIE1931
- * 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.
- * For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- * For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- * The monitor may look different from feature images.

