



Philips Signage Solutions  
D-Line Display

65"

UHD (3840 x 2160)  
500cd/m<sup>2</sup>



65BDL4510D

## Say more

Smart, fast 24/7 display.

Make it stand out with a fast Philips D-Line Professional 4K UHD display. Philips superb picture quality ensures true colors and intense contrast. You can effortlessly display content from multiple sources on a single screen.

### Brilliant picture. Blazing processor speed.

- Place in landscape or portrait orientation
- 4K UHD. Rich, deep images. Stunning contrast
- ADS wide-view panel display

### Operational flexibility

- SmartPower for energy saving

### Cost-effective system solution

- Energy-saving automatic backlight control
- FailOver ensures content is always playing


### Effortless setup. Total control.

- Operate, monitor and maintain with CMND & Control
- Schedule what you want, when you want with SmartPlayer

# PHILIPS


# Highlights

## FailOver

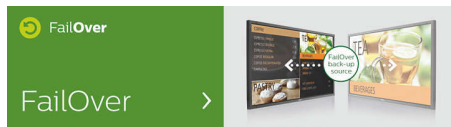

From waiting room to meeting room, never show a blank screen. FailOver lets your Philips Professional Display switch automatically between primary and secondary inputs ensuring content keeps playing even if the primary source goes down. Simply set a list of alternate inputs to be sure your business is always on.


## SmartPower

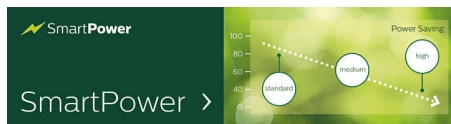

The backlight intensity can be controlled and pre-set by the system to reduce the power

consumption by up to 50%, which saves substantially on energy costs.

## CMND & Control



Run your display network over a local (LAN) connection. CMND & Control allows you to perform vital functions like controlling inputs and monitoring display status. Whether you're in charge of one screen or 100.

## SmartPlayer



Turn your USB into a true cost effective digital signage device. Simply save your content (video, audio, pictures) on your USB and plug into your display. Create your playlist and

schedule your content via the on screen menu, and enjoy your own created playlists anytime, anywhere.

## Energy-saving

Energy-saving automatic backlight control

## Place in landscape

Place in landscape or portrait orientation

## 4K UHD. Rich, deep images

4K UHD. Rich, deep images. Stunning contrast

## ADS wide-view panel display

Be seen from any angle with ADS wide-view technology. Advanced Super Dimension Switch delivers faster on-display picture processing for smoother content transitions, remarkable image accuracy, and superior colour reproduction with 180 degree viewing.

# Specifications

## Connectivity

- Audio output: 3.5mm jack
- Video input: Display Port 1.2 (x1), DVI-I (x 1), HDMI 2.0 (x3), USB 2.0 (x2)
- Audio input: 3.5 mm jack
- Other connections: OPS
- Video output: DisplayPort 1.2 (x1), HDMI 2.0 (x1)
- External control: RJ45, RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack

## Picture/Display

- Diagonal screen size (metric): 163.8 cm
- Diagonal screen size (inch): 64.5 inch
- Aspect ratio: 16:9
- Panel resolution: 3840 x 2160
- Pixel pitch: 0.372 x 0.372 mm
- Optimum resolution: 3840 x 2160 @60Hz
- Brightness: 500 cd/m<sup>2</sup>
- Display colors: 1.07 G Billion
- Contrast ratio (typical): 1200:1
- Dynamic contrast ratio: 500,000:1
- Response time (typical): 8 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Dynamic contrast enhancement, Motion compens. deinterlacing, Progressive scan
- Panel technology: ADS

## Convenience

- Placement: Landscape (24/7), Portrait (24/7)
- Screen saving functions: Pixel Shift, Low Bright
- Keyboard control: Hidden, Lockable
- Signal loop through: IR Loopthrough, DisplayPort, HDMI, RS232
- Energy saving functions: Smart Power
- Network controllable: RJ45, RS232

## Sound

- Built-in speakers: 2 x 10W RMS

## Power

- Mains power: 100 ~ 240 VAC, 50 ~ 60 Hz
- Consumption (Typical): 135 W
- Consumption (Max): 290 W
- Standby power consumption: <0.5 W
- Energy Label Class: G

## Supported Display Resolution

- Computer formats: 1920 x 1080, 60Hz, 1680 x 1050, 60Hz, 1600 x 900, 60Hz, 1024 x 768, 60Hz, 1280 x 1024, 60Hz, 1280 x 720, 60Hz, 1440 x 900, 60 Hz, 3840 x 2160, 30, 60Hz, 640 x 480, 60Hz, 800 x 600, 60Hz
- Video formats: 1080i, 50, 60Hz, 576p, 50Hz, 576i, 50Hz, 480p, 60Hz, 480i, 60Hz, 1080p, 50, 60Hz, 2160p, 24, 30, 60Hz, 720p, 50, 60 Hz

## Dimensions

- Set Width: 1462.3 mm
- Product weight: 27.8 kg
- Set Height: 837.3 mm
- Set Depth: 68.9 (@Wall mount)/ 89.9 (@Handle) mm
- Set Width (inch): 57.57 inch
- Set Height (inch): 32.96 inch
- Wall Mount: 400 (H) x 400(V) mm, M6
- Set Depth (inch): 2.71 inch(wall mount)/3.54 (@Handle) inch
- Bezel width: 14.9 mm (Even bezel)
- Product weight (lb): 61.29 lb

## Operating conditions

- Altitude: 0 ~ 3000 m
- Temperature range (operation): 0 ~ 40 °C
- MTBF: 50,000 hour(s)
- Temperature range (storage): -20 ~ 60 °C
- Humidity range (operation)[RH]: 20 - 80% RH (No condensation)
- Humidity range (storage) [RH]: 5 - 95% RH (No condensation)


## Multimedia Applications

- USB Playback Video: MPEG, H.263, H.264, H.265, VP8
- USB Playback Picture: BMP, JPEG, PNG
- USB Playback Audio: AAC, HEAAC, MPEG

## Accessories

- Included accessories: AC Power Cord, RS232 cable, Quick start guide, IR sensor cable (1.8M), Remote Control & AAA Batteries
- Included Accessories: RS232 daisy-chain cable, Philips logo (x1), Screws, USB Cover (x1), AC Switch Cover

PHILIPS 65BDL4510D  
Version 1.1  
Revision Date 20200803

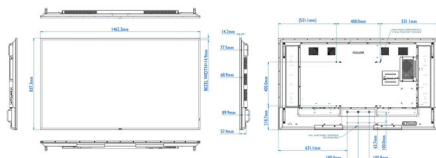

Issue date 2024-03-23

Version: 3.0.1

EAN: 87 12581 76897 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)