

Philips Brilliance
4K Ultra HD LCD display
with MultiView

P Line

43 (42.51" / 108 cm diag.)
3840 x 2160 (4K UHD)

438P1



Master every task in a crisp view

This Philips Brilliance 43" 4K display delivers expansive and crisp visuals. Productivity enhancing features like MultiView and multiple connection for performance and convenience.

Expand your viewing experience

- Expansive 43-inch class brilliant display
- SmartImage presets for easy optimized image settings
- UltraClear 4K UHD (3840x2160) resolution for precision
- IPS LED wide view technology for image and color accuracy
- MultiView 4K for 4 systems on one screen
- SmartUniformity for consistent images

Designed for the way you work

- VESA mount allows for the perfect setup
- DisplayPort connection for maximum visuals
- HDMI ensures universal digital connectivity
- Less eye fatigue with Flicker-free technology

PHILIPS

Highlights

UltraClear 4K UHD Resolution




These Philips displays utilize high performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are demanding professional requiring extremely detailed images for CAD solutions, using 3D graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

IPS technology



IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.


MultiView technology for 4K

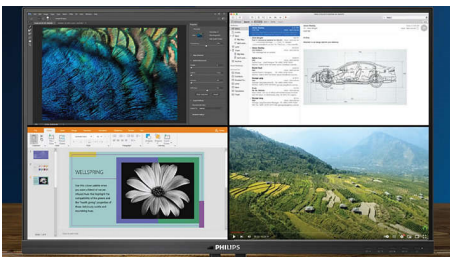

Philips MultiView feature on this expansive 4K UHD display enables you to have up to four

systems each shown in Full HD on one screen. You can use the Picture-by-Picture (PbP) for monitoring four systems on one screen for control rooms or security. Or for multiple devices like two notebooks side-by-side simultaneously, making collaboration more productive. Or Picture-in-Picture mode (PiP) watching a live football feed from your set-top box, while working on your PC.

SmartUniformity

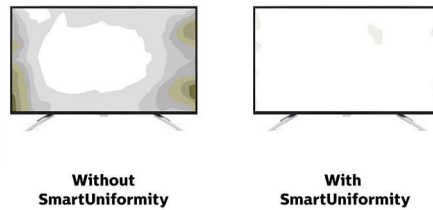

Fluctuations in brightness and color on LCD screens are a common phenomenon. Philips SmartUniformity mode delivers accurate images in terms of brightness; which is crucial for photography, design, and printing. With a color metric to assess color accuracy, this mode is calibrated to meet average luminance uniformity is greater than 95%. Selecting this mode will produce uniform and accurate images.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display

performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



Specifications

Connectivity

- Signal Input: VGA (Analog), DisplayPort 1.2 x 2, HDMI 2.0 x 2
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Audio out
- USB:: USB-B x 1 (upstream), USB 3.2 x 4 (downstream with 1 fast charge B.C 1.2)
- HDCP: HDCP 2.2 (HDMI / DP)

Picture/Display

- Panel Size: 42.51 inch / 108 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.2451 x 0.2451 mm
- Brightness: 400 cd/m²
- Display colors: Color support 1.07 billion colors
- Color gamut (typical): NTSC 88%*, sRGB 102%*
- Contrast ratio (typical): 1200:1
- SmartContrast: 50,000,000:1
- Response time (typical): 5 ms (Gray to Gray)*
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Maximum resolution: 3840 x 2160 @ 60 Hz*
- Effective viewing area: 941.184 (H) x 529.416 (V) mm
- Scanning Frequency: 30 - 140 kHz (H) / 23 - 75 Hz (V)
- sRGB
- Delta E: 3
- Flicker-free
- Pixel Density: 103.46 PPI
- Display Screen Coating: 3H, Haze 1%
- SmartUniformity: 96 ~ 105%

Convenience

- Built-in Speakers: 5 W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: SmartImage, Input, User, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (200x200mm)

- Control software: SmartControl
- MultiView: PIP (2x devices), PBP (4x devices)

Power

- ECO mode: 53.3 W (typ.)
- Power supply: Built-in, 100-240VAC, 50-60Hz
- Off mode: Zero watts with Zero switch
- On mode: 100 W (typ.)
- Standby mode: 0.3 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Packaging in mm (WxHxD): 1070 x 680 x 186 mm
- Product without stand (mm): 973 x 561 x 64 mm
- Product with stand(max height): 973 x 633 x 259 mm

Weight

- Product with packaging (kg): 14.74 kg
- Product with stand (kg): 11.78 kg
- Product without stand (kg): 11.06 kg

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C
- MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: PVC / BFR free housing, Mercury free

Compliance and standards

- Regulatory Approvals: CB, SEMKO, CE Mark, PSB

Cabinet

- Finish: Texture
- Foot: Dark Grey
- Front bezel: Black
- Rear cover: Black

What's in the box?

- Accessory: Remote control



Issue date 2024-03-24

Version: 4.0.1

EAN: 87 12581 76841 6

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The maximum resolution works for either USB-C, DP or HDMI input.

* Response time value equal to SmartResponse

* NTSC Area based on CIE1976

* sRGB Area based on CIE1931

* The monitor may look different from feature images.