

Philips Signage Solutions  
D-Line Display

86"

Powered by Android  
500cd/m<sup>2</sup>

65BDL4150D



# Chasing innovation

powered by Android

Impress with a large diameter display. Designed to run Android Apps, the Philips D-Line is the high-performance powerhouse for corporate, educational and similar environments that need to go bigger.

## Optimized for public viewing

- 4K Ultra HD: resolution like you've never seen it before

## Innovative solutions for any signage application

- Save and play content with internal memory
- Android: Run your own app or choose your favorite app to run

## Maximizing the impact of your message

- Connect and control your content via the cloud
- Manage settings of multiple displays with CMND & Control
- Create and update content with CMND & Create

## Care about you, your business and your audience

- SmartPower for energy saving
- Keep your content up and running with FailOver
- Ensure your content is running with automatic screenshots
- Simplify meetings with FailOver for conferencing
- Mini PCI Express Slot

# PHILIPS

D-Line Display  
86" Powered by Android, 500cd/m²

# Highlights

## Powered by Android

With Android OS integrated into the display, you can work with the most developed OS on the planet and save your own app directly into the display. Or, choose from the large library of Android apps and play content from there. With the built-in scheduler, you can daypart your apps and content based on your customer and time of day and with the auto orientation feature, showing content in portrait or landscape is as simple as turning the display.

## 4K Ultra HD Resolution

See your Signage Solutions like never before thanks to four times the resolution of a conventional Full HD display. 3840 x 2160 pixels provide an image so refined, so lifelike, it's a window to a new world.

## Mini PCI Slot

With a mini PCI express slot built in, you can easily extend display connectivity to include 4G LTE modules. This is also a great way to enhance machine to machine communication. Result: a world of configuration possibilities, such as adding product features or expanding signal-handling capabilities.

## Internal Memory



Save and play content with internal memory. Upload your media into the display and playback content immediately. Working in conjunction with the internal browser, it also serves as a memory cache when streaming online content. If the network ever fails, the internal memory keeps content running by playing a cached version of the content, ensuring that your media stays up even if the network goes down.

## Proof of Play

Content is king, and with the automatic screenshot feature, you can make sure that

your content is up and running at all times. Screenshots are taken throughout the day, which are then stored in the FTP server. From there, the screenshots can be viewed no matter when, or where you are.

## FailOver




Keeping your content up and running is critical for demanding commercial applications. While it is unlikely you will face a content disaster, FailOver provides content protection with a revolutionary technology that plays back-up content on screen in the event of a media player failure. FailOver automatically kicks in when the primary input fails. Simply select a primary input connection and a FailOver connection and you're ready for instant protection.

## FailOver for Meeting Rooms

Using FailOver, simplify your presentations and videoconferencing. When a meeting or conference room is not in use, background content can run from whatever input source you choose. When the meeting starts and you need to share a presentation or your screen, simply connect your computer and the display automatically switches inputs and shows what's on your screen, with no need to manually switch inputs.

## SmartPower

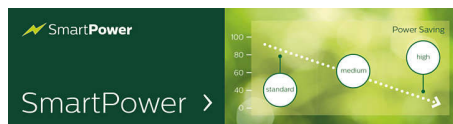


The backlight intensity can be controlled and pre-set by the system to reduce the power

65BDL4150D/75

consumption by up to 50%, which saves substantially on energy costs.

## CMND & Control



With CMND & Control, easily manage multiple displays in a central location. With real time display monitoring, setting and software updates from a remote location, and the ability to customize and configure multiple displays at once, such as video wall or menu board displays, controlling your suite of displays has never been easier.

## CMND & Create



Design and create compelling content with CMND & Create, a powerful authoring tool. With a drag and drop interface, preloaded templates, and integrated widgets, you'll be able to amaze your customers with compelling content. Available in portrait and landscape mode.

## SmartBrowser



Connect and control your content via the cloud with the integrated HTML5 browser. Using the Chromium based browser, design your content online and connect a single display, or your complete network. Show content in both landscape and portrait mode, with fullHD resolution. Streaming content can also be shown in a PIP (picture-in-picture) window. Simply connect the display to the internet using WiFi or with an RJ45 cable, and enjoy your own created playlists



# Specifications

## Picture/Display

- Diagonal screen size (metric): 163.83 cm
- Diagonal screen size (inch): 64.5 inch
- Aspect ratio: 16:9
- Panel resolution: 3840 x 2160
- Pixel pitch: 0.429 (H) x 0.429 (V) [mm]
- Optimum resolution: 3840 x 2160 @60Hz
- Brightness: 500 cd/m<sup>2</sup>
- Display colors: 1.07 Billion
- Contrast ratio (typical): 1100:1
- Dynamic contrast ratio: 500,000:1
- Response time (typical): 8 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Motion compens. deinterlacing, 3D MA deinterlacing, Dynamic contrast enhancement, Progressive scan
- Operating system: Android 7.1.2

## Connectivity

- Audio output: Audio Left/Right (RCA), SPDIF, Speakers Connection
- Video input: DisplayPort, DVI-D, VGA (Analog D-Sub), HDMI (x4)
- Audio input: Audio Left/Right (RCA)
- Other connections: mPCIe, OPS, USB 2.0, USB 3.0
- Video output: DisplayPort
- External control: RJ45, RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack

## Convenience

- Placement: Landscape, Portrait
- Picture in picture: PIP
- Tiled Matrix: Up to 15 x 15
- Screen saving functions: Pixel Shift, Low Bright
- Keyboard control: Hidden, Lockable
- Signal loop through: IR Loophthrough
- Ease of installation: Smart Insert
- Energy saving functions: Smart Power
- Network controllable: RJ45, RS232, WiFi

## Sound

- Built-in speakers: 2 x 10W RMS

## Power

- Mains power: 100 ~ 240 VAC, 50 ~ 60 Hz
- Consumption (Typical): 150 W
- Consumption (Max): 267 W
- Standby power consumption: <0.5 W

## Supported Display Resolution

- Computer formats: 3840 x 2160, 60Hz, 1920 x 1080, 60Hz, 1600 x 1200, 60Hz, 1360 x 768, 60Hz, 1280 x 1024, 60Hz, 1280 x 800, 60Hz, 1280 x 768, 60Hz, 1024 x 768, 60, 75Hz, 640 x 480, 60, 72,

- 75Hz, 720 x 400, 70Hz, 800 x 600, 60, 75Hz
- Video formats: 2160p, 30,50, 60Hz, 1080p, 50, 60Hz, 1080i, 25, 30Hz, 720p, 50, 60Hz, 576i, 25, 50Hz, 576p, 25, 50Hz, 480i, 30, 60Hz, 480p, 30, 60Hz

## Dimensions

- Smart Insert mount: 100 x 200 mm
- Set Width: 1457.8 mm
- Product weight: 36.5 kg
- Set Height: 835.6 mm
- Set Depth: 66.9 (@Wall mount) mm
- Set Width (inch): 57.39 inch
- Set Height (inch): 32.90 inch
- Wall Mount: 400mm(H) x 400mm(V), M6
- Set Depth (inch): 2.63 inch
- Bezel width: 12.2 (L/R), 15.3 (B), 11.7(Top)
- Product weight (lb): 80.47 lb

## Operating conditions

- Altitude: 0 ~ 3000 m
- Temperature range (operation): 0 ~ 40 °C
- MTBF: 50,000 hour(s)
- Relative humidity: 20 %~ 80%(operation), 10%-90%(storage) %
- Temperature range (storage): -20 ~ 60 °C

## Multimedia Applications

- USB Playback Video: ASF, AVI, DAT, FLV, MKV, MP4, MPEG, MPG, TS, VOB, WEBM, WMV
- USB Playback Picture: BMP, JPEG, JPG, PNG
- USB Playback Audio: AAC, M4A, MP3, WMA

## Internal Player

- CPU: Dual-Core Cortex-A72 @2GHz, Quad-Core Cortex-A53 @ 1.5GHz
- GPU: ARM Mali-T860 MP4
- Memory: 4GB RAM
- Storage: 32 GB eMMC

## Accessories

- Included accessories: Remote Control, Batteries for remote control, RS232 cable, AC Power Cord, VGA cable
- Included Accessories: RS232 daisy-chain cable
- Stand: BM09522 (Universal Stand-L)

## Miscellaneous

- On-Screen Display Languages: English, French, German, Spanish, Polish, Turkish, Russian, Italian, Simplified Chinese, Traditional Chinese, Arabic, Japanese, Danish, Dutch, Finnish, Norwegian, Portuguese, Swedish
- Warranty: 3 year warranty
- Regulatory approvals: CE, FCC, Class B, CB



Issue date 2024-11-20

Version: 1.0.1

EAN: 87 12581 75613 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)