

Philips  
Professional TV

**55" Signature**  
powered by Android™  
4K Ultra HD

**55HFL7011T**



## Chasing innovation

powered by Android™ and Ambilight

Amaze your guests with a smarter, sexier, faster Professional TV. Catch their eye with Ambilight, speed up the interaction with Android™, and enjoy state of the art connectivity and remote management features.

### **Exhilarating. Limitless. Powered by Android**

- Advanced apps with many dedicated services for hospitality
- AppControl to add, sort, and delete apps with minimal effort

### **Take control with CMND**

- CMND & Control: effortless maintenance of your TV's
- CMND & Create: Show the information you want, when you want

### **Differentiating guest experience**

- Miracast & DirectShare to share movies and music on your TV
- 4K UltraHD: a stunning, vibrant viewing experience awaits
- Ambilight: an immersive, eye catching viewing experience
- Android: a faster, richer, more enjoyable TV experience

### **Advanced hotel features and future proof**

- Integrated IPTV system for optimal customized interactivity
- MyChoice compatibility for recurring revenues
- Wi-Fi and Bluetooth for wireless control and interaction

# PHILIPS

# Highlights

## 4K UltraHD

An ultra clear, stunning viewing experience awaits with 4K UltraHD. Featuring an astounding level of clarity, vibrant colors, and four times the resolution of Full HD, it's truly a window into a new world.

## Ambilight 3-Sided

This patented Philips technology makes your screen seem wider—and your viewing experience more immersive—by projecting a soft ambient glow from the sides of the TV screen onto the surrounding wall. The color automatically adjusts to match the TV picture. Thanks to a wall-adaptive function, the color of the light is perfectly aligned with the TV picture, regardless of the wall color. Customize your Ambilight experience by adapting the Ambilight settings to your preference.

## Android

With Android on your Professional TV you'll enjoy a faster, richer and guest-friendly interface. It's your launch control to a wealth of dedicated hospitality services, applications, and so much more. There's an easy to navigate menu with direct links to your favorite apps.

## AppControl

App control ensures your TVs get the apps you want. With the ability to add, delete, and sort apps, plus the ability to configure apps to specific rooms, it's a truly personalized guest experience that you can control from a centralized location, without having to enter the room. For ease of use and security, load your custom app on our private, cloud based server and be secure in the fact that only you can access it.

## Advanced Apps

Advanced apps consist of an ever growing library of applications. With the power of Android, apps run smoother, faster, and are more advanced than ever. Tailored for

hospitality, guest information is securely deleted after use and access to illegal content that can harm your business is prevented.

## Integrated IPTV

Safe costs and clutter. With our new Smart TVs you can build your hotel system directly on the TV. Interactive channels, video-on-demand, interactive hotel menus and information as well as online ordering systems are all possible without an external box attached to the TV. Next to delivery of the content over coax TV cables, you can now also use your internet network to deliver your TV channels or VOD directly to the TV. Our partner network can make sure you get the customized portal you want.

## MyChoice compatible



MyChoice offers a simple and low-cost way to offer your guests premium TV channels. At the same time it delivers an additional revenue stream which allows you to recover your initial TV investment.

## Miracast & DirectShare



Our TVs give your guests the freedom to enjoy their content on the big TV wirelessly and without hassle. With our open system

approach we serve iOS as well as Android users and continuously extend our compatibility. Our secure sharing protects your guests. Pictures, movies, music, all can be shared and enjoyed on our TVs via Miracast & DirectShare!

## Wi-Fi and Bluetooth


Wi-Fi and Bluetooth for wireless control and interaction

## CMND & Control



CMND & Control allows for remote configuration and installation of your TV's from a central location, without having to visit any rooms. Update and manage all your displays, with minimal effort, all without having to disturb your guests.

## CMND & Create



CMND & Create allows you to provide the information you want, when you want. The content management module of CMND, it allows for easy creation and distribution of interactive, branded hotel web pages. Tailor your TV's to give guests the most up to date information with the latest developments in your hotel, all in real time.

# Specifications

## Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 55 inch
- Diagonal screen size (metric): 139 cm
- Display: 4K Ultra HD LED
- Panel resolution: 3840x2160p
- Brightness: 400 cd/m<sup>2</sup>
- Picture enhancement: Pixel Precise UltraHD, Perfect Natural Motion, 800 Hz Perfect Motion Rate, Micro Dimming Pro
- Viewing angle: 178° (H) / 178° (V)
- Wide Color Gamut display: 85% NTSC Colour

## Gamut

### Supported Display Resolution

- Tuner: Others: up to 1920x1080p@60Hz, T2 HEVC: up to 3840x2160@60Hz
- USB, LAN: HEVC: up to 3840x2160@60Hz, Others: up to 1920x1080p@60Hz
- HDMI 1/2: Up to 3840x2160p @60Hz
- HDMI 3/4: Up to 3840x2160p @30Hz

### Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/C, HEVC UHD (up to

2160p60)


- Video Playback: NTSC, PAL
- Analog TV: PAL
- IP Playback: Multicast, Unicast

## Android TV

- OS: Android™ 5.1 (Lollipop)
- Memory size(Flash): 16GB\*

## Features

- Ease of use: Picture Style, Sound Style
- Digital services: 8d EPG, Now&Next, MHEG,

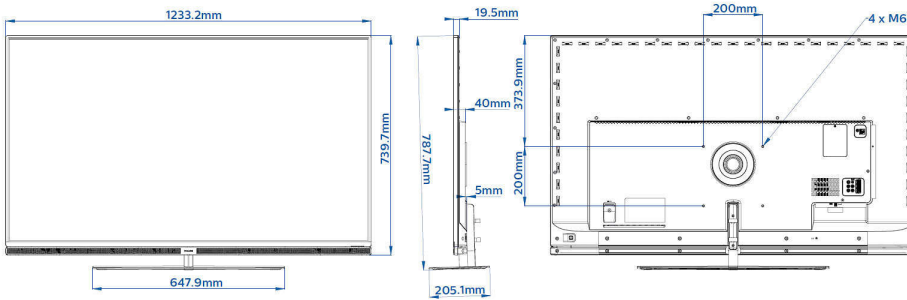

# Specifications

- Teletext, HbbTV, Subtitles
- Local control: Joystick

## Hospitality Features

- Hotel mode: Joystick Control Lock, Menu lock, Installation Menu Lock, Volume limitation
- Prison mode: high security mode, TXT/MHEG/USB/EPG/Subtitle Lock
- Timer: Sleep Timer, Wake Up Alarm
- Switch On control: Channel, Feature, Picture Format, Volume, Picture Style
- Anti-Theft: Battery Anti-theft Protection, Kensington Lock
- Power control: Auto Power ON, Green/fast startup, WoLAN, WoWLAN
- Apps: AppControl, Cloud-based Apps, Android Apps, Philips TV Remote App
- Your brand: SmartInfo, Welcome Logo, Customizable Dashboard (HTML), IPTV System, Custom Apps, Location Name (Geonames ID)
- Clock: Clock in Standby Mode, Glow-in-the-Dark RC button, On-screen Clock
- SmartInfo: HTML5 Browser, Interactive Templates
- Cloning and Firmware update: Instant Initial Cloning, Via USB/RF/IP
- CMND&Control: Off-Line Channel Editor, Off-Line Settings Editor, Real-time TV Status (IP), Remote Management over IP/RF, CMND&Create, TV Group management
- Control: Block Automatic Channel Update, Serial Xpress Protocol, JSON API for TV Control-JAPIT
- Integrated services: 5 Day Weather Forecast
- Interactive DRM: VSecure, Playready Smoothstreaming, Securemedia
- Revenue generation: MyChoice
- Languages: Guest language control
- Remote Control: Cable Strap Ready, Low Battery Detection, RC Battery Door Lock
- Channels: Combined List, Themed lists

## Healthcare features

- Control: Multi-Remote Control, Healthcare RC compatible, Nurse call system compatible
- Convenience: Headphone out, Independent main speaker mute
- Safety: Double isolation class II, Flame retardant

## Multimedia

- Video playback supported: Formats: H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, HEVC, VP9, Containers: AVI, MKV
- Music formats supported: MP3, AAC, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10)
- Subtitle formats supported: SRT, SMI, SSA SUB, TXT, ASS
- Picture formats supported: JPG

## Audio

- Sound output Power: 45 W
- Bathroom speaker out: 1.5W Mono 8Ohm
- Speakers: 2.1, Front + Back Firing
- Sound Features: DTS Premium Sound, DTS Studio Sound, AVL, Incredible surround, Dynamic Bass, Dolby MS10

## Power

- Mains power: AC 220-240V; 50-60Hz
- Ambient temperature: 0 °C to 40 °C
- Standby power consumption: <math>0.4W</math>
- Energy Label Class: A
- Eu Energy Label power: 97 W
- Power Saving Features: Eco mode
- Annual energy consumption: 141 kWh

## Accessories

- Included: Tabletop Swivel stand, 2x AAA batteries, Warranty Leaflet, Legal and Safety brochure, Power Cord, Remote Control 22AV1505B/12
- Optional: Healthcare RC 22AV1109H/12, Setup RC 22AV9573A, Bluetooth RC 22AV1507A/12

## Wireless Connectivity

- Wireless LAN: 802.11 ac
- Bluetooth: 4.0, Wireless Audio (Headphone)
- Wifi-Direct: DirectShare, Miracast

## Connectivity Bottom

- HDMI1: HDMI 2.0
- Antenna: IEC-75
- HDMI2: HDMI 2.0
- Digital Audio out: Optical
- USB1: USB 2.0
- Ethernet (LAN): RJ-45

## Connectivity Side

- USB2: USB 2.0
- Common Interface Slot: CI+ 1.3.2
- USB3: USB 3.0
- HDMI3: HDMI 1.4
- HDMI4: HDMI 1.4 (MHL 2.0)
- Headphone out: Mini-Jack

## Connectivity Rear

- Scart: RGB, CVBS
- Bathroom speaker out: Mini-Jack
- Component: YPbPr + L/R cinch
- DVI audio in: Mini-Jack
- External power: 12V/15W, Mini-Jack
- External Control: RJ-48

## Connectivity Enhancements

- RJ48: IR-In/Out, Serial Xpress interface
- EasyLink (HDMI CEC): One touch play, System Standby, RC pass through, system audio control
- HDMI: ARC (all ports), DVI (all ports), MHL 2.0 (HDMI4)

## Design

- Colour: Dark Grey
- Features: Aluminum bezel, Ambilight 3-Sided

## Dimensions

- Set Width: 1233 mm
- Set Height: 740 mm
- Set Depth: 20/40/45 mm
- Product weight: 21,5 kg
- Set width (with stand): 1233 mm
- Set height (with stand): 788 mm
- Set depth (with stand): 205 mm
- Product weight (+stand): 25,5 kg
- Wall mount compatible: 200 x 200 mm, M6



Issue date 2023-10-05

Version: 3.1.1

EAN: 87 18863 00842 3

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Availability of features will depend on implementation chosen by integrator.  
\* Philips does not guarantee the availability or continuity of correct functioning of apps.  
\* Actual free memory may be less due to device pre-configuration  
\* Typical on-mode power consumption measured according to IEC62087 Ed 2. The actual energy consumption will depend on how the television is used.  
\* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.