




Philips 8500 series  
Ultra Slim 4K UHD LED  
Android TV

123 cm (49") Ambilight TV  
2800 Picture Performance Index  
HDR premium WCG 90%  
P5 Perfect Picture Engine

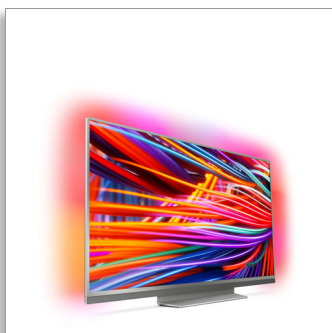

49PUS8503

## Ultra Slim 4K UHD LED Android TV with Ambilight 3-sided

Enjoy more of the content you love with the Philips 8500 TV. With a wide angle of view and a front-facing soundbar, this smart TV delivers vibrant, lifelike colour, a sharp 4K UHD picture and clear audio. You won't miss a beat.

### Refined design. Beautiful light.

- Ambilight. Take the emotion beyond the screen.
- Ultra-slim minimalist frame with brushed aluminium finish
- Wide colour gamut. More colours. More vibrancy.

### Incredible moments.

- IPS Nano Color. Rich colour. No matter where you sit.
- Philips P5 Engine. Whatever the source, always perfection.
- HDR Premium. Enhanced colour, depth, and dimension

### Android TV-all the content you love

- Google Assistant built in. Content and more at your command
- Google Play store and Philips app gallery. More to love.

### Slim TV. Full sound.

- Front-facing 45 W soundbar
- Philips Triple Ring technology. More space for sound

# PHILIPS


Ultra Slim 4K UHD LED Android TV  
123 cm (49") Ambilight TV 2800 Picture Performance Index, HDR premium WCG 90%, P5 Perfect Picture Engine

# Highlights

## Ultra-slim minimalist frame

Ultra-slim minimalist frame with brushed aluminium finish

## Ambilight 3-sided

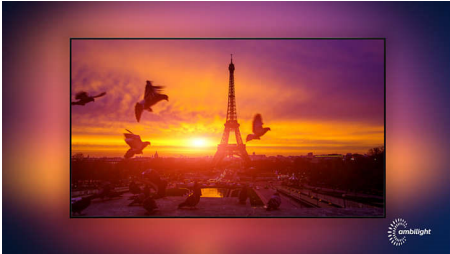

With Philips Ambilight, movies and games feel more immersive. Music gets a light show. And your screen will feel bigger than it is. Intelligent LEDs around the edges of the TV cast on-screen colours onto the walls and into the room, in real time. You get perfectly tuned ambient lighting. And one more reason to love your TV.

## Wide Colour Gamut

Wide Colour Gamut increases the standard colour gamut from 72% to 90%–99%, resulting in more vivid and brilliant colours. The greenest green, the bluest blue and the reddest red, the expanded colour reproduction abilities of a 4K Ultra HD TV are closer than ever to what we see in a digital cinema.

## IPS Nano Color

From movie night to the big match or gaming, IPS Nano Color technology delivers vibrant colour and a wide viewing angle. Uniform, nanometre-sized particles absorb any excess light created by the screen. Reds stay red, green grass looks green, and blue is always blue. Even if you're facing the TV at an angle of up to 60 degrees.

## P5 Perfect Picture Engine



The Philips P5 Perfect Picture Engine delivers an image as brilliant as the content you love. Details have noticeably more depth. Colours are vivid, while skin tones look natural. Contrast is so crisp you'll feel every detail. And motion is so smooth that you'll never lose sight of the ball, no matter how fast the play.


## High Dynamic Range Premium



High Dynamic Range Premium is a new video standard. It redefines in-home entertainment through advances in our application of contrast and colour. Enjoy a sensory experience that captures the original richness and liveliness, yet accurately reflects the director's intent. The end result? Highlights with excellent brightness, richer contrast and colour and vivid details like you've never seen before.

49PUS8503/12

## TV Content

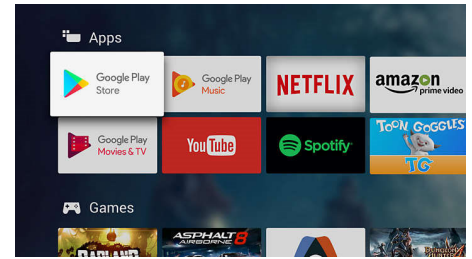

Go beyond traditional TV programming with Google Play Store and Philips App Gallery. Experience endless movies, TV, music, apps and games online. More to love.

## Google Assistant built in



Control your Philips Android TV with your voice. Want to play a game, watch Netflix or find content and apps in the Google Play store? Just tell your TV. You can even command all Google Assistant-compatible smart home devices, like dimming the lights and setting the thermostat on movie night. Without leaving the sofa.

## 45 W soundbar

Front-facing 45 W soundbar

## Triple Ring technology

With enhanced Philips Triple Ring technology, we have even more powerful speaker movement in our subwoofers. More movement means more punch-so you will enjoy powerful sound even in our thin Philips TV design.

Ultra Slim 4K UHD LED Android TV  
123 cm (49") Ambilight TV 2800 Picture Performance Index, HDR premium WCG 90%, P5 Perfect Picture Engine

49PUS8503/12

# Specifications

## Ambilight

- Ambilight Features: Built-in Ambilight+hue, Ambilight Music, Game Mode, Wall colour adaptive, Lounge mode
- Ambilight Version: 3 sided

## Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 49 inch
- Diagonal screen size (metric): 123 cm
- Display: 4K Ultra HD LED
- Panel resolution: 3840 x 2160
- Picture engine: P5 Perfect Picture Engine
- Picture enhancement: Micro Dimming Pro, Ultra Resolution, Wide Colour Gamut 90% DCI/P3, HDR Premium, 2800 PPI

## Supported Display Resolution

- Computer inputs on HDMI 1/2: up to 4K UHD 3840 x 2160 @60 Hz, HDR supported, HDR10/HLG
- Computer inputs on HDMI 3/4: up to 4K UHD 3840 x 2160 @60 Hz
- Video inputs on HDMI 1/2: up to 4K UHD 3840 x 2160 @60 Hz, HDR supported, HDR10/HLG
- Video inputs on HDMI 3/4: up to 4K UHD 3840 x 2160 @60 Hz

## Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/T2-HD/C/S/S2
- Video Playback: NTSC, PAL, SECAM
- MPEG Support: MPEG2, MPEG4
- TV Programme guide\*: 8-day Electronic Programme Guide
- Signal strength indication
- Teletext: 1000 page Hypertext
- HEVC support

## Android TV

- OS: Android TV™ 8 (Oreo)
- Pre-installed apps: Google Play Movies\*, Google Play Music\*, Google Search, YouTube
- Memory size (Flash): 16 GB\*

## Smart TV Features

- User Interaction: SimplyShare
- Interactive TV: HbbTV
- Programme: Pause TV, USB recording\*
- SmartTV apps\*: Online video stores, Open Internet browser, Social TV, TV on demand, YouTube
- Ease of Installation: Auto detect Philips devices, Device connection wizard, Network installation wizard, Settings assistant wizard
- Ease of Use: One-stop smart menu button, On-screen

- user manual
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade
- Screen Format Adjustments: Basic - Fill Screen, Fit to screen, Advance - Shift, Zoom, stretch
- Philips TV Remote app\*: Apps, Channels, Control, NowOnTV, TV Guide, Video On Demand
- Remote Control: with Keyboard, with Voice

## Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1, HEVC (H.265), VP9
- Music Playback Formats: AAC, MP3, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10)
- Subtitles Formats Support: .SRT, .SUB, .TXT, .SMI
- Picture Playback Formats: JPEG, BMP, GIF, PNG

## Processing

- Processing Power: Quad Core

## Sound

- Output power (RMS): 45 W
- Speaker configuration: 2 x 7.5 W mid-high speaker, 30 W woofer
- Sound Enhancement: Smart Sound, DTS-HD Premium Sound, DTS Studio Sound, DTS TruSurround
- Sound Features: Triple ring technology

## Connectivity

- Number of HDMI connections: 4
- HDMI features: 4K, Audio Return Channel
- Number of components in (YPbPr): 1
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- Number of USBs: 2
- Wireless connection: Dual Band, Wi-Fi 802.11ac 2 x 2 integrated
- Other connections: Common Interface Plus (CI+), Digital audio out (optical), Antenna IEC75, Satellite Connector, Ethernet-LAN RJ-45, Audio L/R in, Headphone out
- HDCP 2.2: Yes on HDMI1, Yes on HDMI2

## Power

- Mains power: AC 220 - 240 V 50/60 Hz
- Ambient temperature: 5°C to 35°C
- Standby power consumption: <math>\leq 0.3\text{ W}</math>
- Energy Label Class: A
- EU Energy Label power: 89 W
- Power Saving Features: Auto switch-off timer, Light sensor, Picture mute (for radio)

- Off mode power consumption: N/A
- Annual energy consumption: 130 kWh
- Presence of lead: Yes\*
- Mercury content: 0 mg

## Accessories

- Included accessories: Remote Control, 2 x AA Batteries, Power cord, Mini-jack to L/R cable, Mini-jack to YPbPr cable, Quick start guide, Legal and safety brochure, Tabletop stand

## Colour & Finish

- TV Front: Metallic Silver


## Dimensions

- Set Width: 1098.4 mm
- Set Height: 664.9 mm
- Set Depth: 48.3 mm
- Product weight: 17.2 kg
- Set width (with stand): 1098.4 mm
- Set height (with stand): 711.1 mm
- Set depth (with stand): 251.6 mm
- Product weight (+stand): 19.6 kg
- Box width: 1205 mm
- Box height: 810 mm
- Box depth: 150 mm
- Weight incl. Packaging: 23.5 kg
- Wall-mount compatible: 200 x 200 mm
- TV stand width distance: 517.7 mm



## Connections

### Side

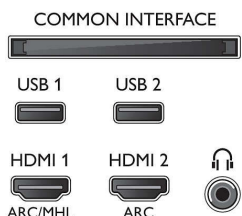

### Bottom



Issue date 2023-07-13

Version: 11.0.1

EAN: 87 18863 01523 0

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

- \* EPG and actual visibility (up to 8 days) is country- and operator-dependent.
- \* Android App offerings vary per country. For more details please visit your local Google Play Store.
- \* Energy consumption in kWh per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.
- \* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.
- \* Philips TV Remote app and related functionalities vary per TV model, operator and country, as well as smart device model and OS. For more details please visit: [www.philips.com/TVRemoteapp](http://www.philips.com/TVRemoteapp).
- \* Smart TV app availability varies per TV model and country. For more details please visit: [www.philips.com/smarttv](http://www.philips.com/smarttv).
- \* USB recording for digital channels only, recordings may be limited by broadcast copy protection (CI+). Country and channel restrictions may apply.
- \* Please note that your Amazon Apps may not always be available in your country. (Currently Amazon apps works only in the UK, Germany and Austria)
- \* (Philips) only compatible with specific Philips player device.
- \* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.
- \* Cloud Gaming offering depends on game providers.
- \* HDMI connection is required for soundbar, speaker and other audio device.
- \* Its functionality is subject to ChromeCast built-in apps and smart devices. For more details, please visit ChromeCast built-in product pages.
- \* Google Assistant built in will come as a software update for 2018 Android TVs.