



Philips
Flat TV

26"
LCD
HD Ready

26PF4310



Turn up your viewing experience

with Crystal Clear III

Here is an LCD TV that not only enhances the decor of your home with its European styling and slim design, but also provides a great audio-visual experience with Active Control and Virtual Dolby Surround.

Leading interface for digital quality audio/video

- DVI-I provides the best picture and flexible connectivity

Superb sound reproduction

- Virtual Dolby Surround for a cinema-like audio experience

Better quality images that reveal more detail

- High-definition LCD WXGA display, 1280 x 768p
- HD Ready for the highest quality display of HD signals
- Crystal Clear III for natural images with enhanced quality
- 2D Combfilter sharpens images for finer detail

Stylish design

- Compact design

Multi-purpose convenience

- View PC content in a second window on your TV
- PC input lets you also use your TV as a PC monitor

PHILIPS

Highlights

LCD WXGA display, 1280 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you an HD resolution of 1280 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colours. This sharp and vibrant image will provide you with an enhanced viewing experience.

HD Ready



Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV set-top boxes and Blu-ray discs. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer an HD screen that displays the benefits of the resolution and picture quality of a High

Definition signal. It has a universal connection for both analogue YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60 Hz.

Crystal Clear III

Crystal Clear III combines a whole range of enhancements to provide a better picture. They include a 2D Comb filter, Dynamic contrast, Blue stretch and Green enhancement so that you always get the most natural looking colours.

2D Combfilter

The 2D combfilter separates chrominance (colour) from luminance (brightness) information in the video signal for independent processing to improve picture resolution and minimise distortion.

Virtual Dolby Surround

Virtual Dolby Surround is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic without the necessity of additional rear speakers. You become totally immersed in your television experience.

Compact design

Compact design

Picture in Graphics

Picture-in-Graphics is a small window in the main picture, allowing you to watch data/graphics on your main TV screen. It provides the ability to simultaneously watch data/graphics and the TV.

DVI-I Input

A DVI-I input connects the non-compressed high-bandwidth digital RGB signal from source to screen. By eliminating the conversion of the digital signals to analogue, it delivers an unblemished and noise-free image that is clear and flicker-free. The DVI input supports HDCP copy protection that allows viewing of copy protected programmes from Digital Set-top boxes, DVD players and HD recorders. DVI-I is future proof as it can be connected to all HDMI devices (a converter cable is required). The DVI-I input also supports analogue PC-VGA signals.

PC input

With PC input you can connect your TV to a computer and use the TV as a PC monitor.

Specifications

Picture/Display

- Aspect ratio: Widescreen, 15:9
- Diagonal screen size (inch): 26 inch
- Diagonal screen size (metric): 66 cm
- Panel resolution: 1280 x 768p
- Brightness: 400 cd/m²
- Picture enhancement: Crystal Clear III, Contrast Plus, 3/2 - 2/2 motion pull down, 2D Combfilter, Digital Noise Reduction, Jagged Line Suppression, Progressive scan
- Contrast ratio (typical): 500:1
- Display screen type: LCD WXGA Active Matrix TFT
- Response time (typical): 16 ms
- Viewing angle (horizontal): 176 degree
- Viewing angle (vertical): 176 degree
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

- Computer formats: 640 x 480, 60, 67, 72, 75 Hz, 800 x 600, 56, 60, 72, 75 Hz, 1024 x 768, 60, 70, 75 Hz
- Video Formats: 1280 x 720p - 3Fh, 1920 x 1080i - 2Fh, 640 x 480i - 1Fh, 640 x 480p - 2Fh, 720 x 576i - 1Fh, 720 x 576p - 2Fh

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL, SECAM
- Number of Pre-set Channels: 100
- Video Playback: NTSC, SECAM, PAL
- Tuner Display: PLL

Convenience

- Ease of Installation: Auto Programme Naming, Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, Plug and Play, Programme Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), Graphical User Interface, Programme List, Smart Picture, Smart Sound
- Clock: Sleep Timer
- Screen Format Adjustments: 4:3, Full screen, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Remote Control: TV, Amp, DVD, Multi-functional
- Remote control type: RCFE05SPS00

- Teletext: 10-page Smart Text
- VESA Mount: 100 x 100 mm
- Picture in Picture: Picture in graphics, Twin page text
- Teletext enhancements: Programme information Line

Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 5 W
- Sound System: Stereo, Virtual Dolby Surround
- Sound Enhancement: Dynamic Bass Enhancement

Loudspeakers

- Built-in speakers: 2
- Number of Loudspeakers: 0

Connectivity

- Number of Scarts: 2
- AV 3: Audio-in mini jack 3.5 mm, DVI-I with HDCP
- Front/Side connections: Audio L/R in, CVBS in, Headphones Out, S-video in
- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, S-video in
- Other connections: Antenna IEC75

Power


- Ambient temperature: 5°C to 40°C
- Power consumption: Normal Operation 110 W
- Standby power consumption: < 1 W

Accessories

- Included accessories: Tabletop stand, DVI-I to YPbPr cable, Power cord, Quick start guide, User Manual, Registration card, Remote Control, Batteries for remote control

Dimensions

- Set Width: 792 mm
- Set Height: 431 mm
- Set Depth: 109 mm
- Product weight: 15 kg
- Box width: 863 mm
- Box height: 207 mm
- Box depth: 242 mm
- Weight incl. Packaging: 18.75 kg
- Width (with base): 792 mm
- Height (with base): 483 mm
- Depth (with base): 241 mm

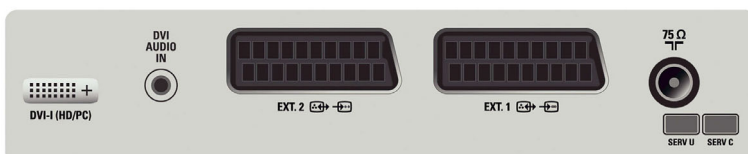

Issue date 2023-07-13

Version: 8.0.10

EAN: 87 10895 89242 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com