

Philips Cineos  
widescreen flat TV

**32"**  
LCD  
HD Ready

**32PF9551**



## Turn up your viewing experience

with Pixel Plus 2 HD

Enjoy the ultimate viewing experience with this Philips Cineos Flat TV with Pixel Plus 2 HD, Ambilight 2 Channel and the latest LCD technology. The USB Digital Media Reader gives you full access to multimedia content.

### **Superb sound reproduction**

- Virtual Dolby Digital for a true life audio experience

### **True beauty lies in the details**

- Matching TV stand included

### **Immersive viewing experience**

- HD LCD WXGA display, with a 1366 x 768p resolution
- HD Ready for the highest quality display of HD signals
- Pixel Plus 2 HD for great details, depth and clarity
- Dynamic contrast enhancer delivering rich black details
- 2-channel active Ambilight enhances the viewing experience

### **For advanced performance**

- HDMI input for full digital HD connection in one cable

### **Perfect picture quality from your digital photos**

- USB Connector for easy, instant multimedia playing

# PHILIPS

widescreen flat TV  
32" LCD, HD Ready

# Highlights

## LCD WXGA display, 1366 x 768p


This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colours. This vibrant and sharp image will provide you with an enhanced viewing experience.

## HD Ready



Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV set-top boxes and Blu-ray discs. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer an HD screen that displays the benefits of the resolution and picture quality of a High Definition signal. It has a universal connection for both analogue YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60 Hz.

## Pixel Plus 2 HD

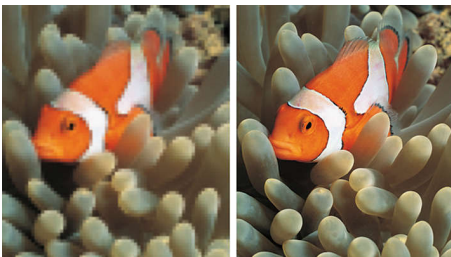

Pixel Plus 2 HD offers the unique combination of ultimate sharpness, natural detail, increased depth, vivid colours and smooth and natural motion from standard TV, High Definition signals and multimedia sources. Each pixel of

the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artefacts in compressed multimedia content are detected and reduced, ensuring that the picture is clean and razor sharp. Digital noise reduction ensures that the picture is perfectly smooth yet razor sharp.

## Dynamic contrast enhancer

You want the LCD flat display with the highest contrast and most vibrant images even at a wide viewing angle. The Philips dynamic contrast enhancer uses video processing and unique dimming backlight technology. This delivers deep rich black levels with increased detail. The dimming backlight increases the contrast up to 5 times\* and at the same time improves the viewing angle. It gives a bright, lifelike picture with high contrast and vibrant colours (\* factor between 2 and 5, depending on screen type and picture content).

## Ambilight 2 channel



Ambilight makes an impressive contribution to the overall viewing experience by producing ambient light to complement the colours and light intensity of the on-screen image. It adds a new dimension to the viewing experience, completely immersing you into the content you are watching. It creates ambience, stimulates more relaxed viewing and improves perceived picture detail, contrast and colour. Ambilight automatically and independently adapts its colours according to the changing content on the screen.

## Virtual Dolby Digital

Virtual Dolby Digital is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic

32PF9551/10

without the necessity of additional rear speakers. You become totally immersed in your television experience.

## Matching TV stand

High quality TV stand that is designed specifically for the TV. Its seamless design compliments the overall look. Comes with the TV for greater value.

## USB Multimedia Connector



The USB connector allows access to multimedia jpg, mp3 and alb files of most USB sticks and most digital cameras (USB 1.1 memory-class device). Plug the USB into the slot at the side of the TV and access your photos or music files. This makes it easy to view and share your photos and music.

## HDMI input



HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analogue signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backwards-compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection.

# Specifications

## Ambilight

- Ambilight Features: Ambilight 2 Channel, Auto adaptive to video content, Efficient low energy lamp
- Colour Settings: Full Multi-Colour
- Dimming Function: Manual and via Light Sensor

## Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 32 inch
- Diagonal screen size (metric): 80 cm
- Panel resolution: 1366 x 768p
- Brightness: 550 cd/m<sup>2</sup>
- Picture enhancement: Pixel Plus 2 HD, Digital Natural Motion, Dynamic contrast enhancement, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Active Control, Jagged Line Suppression, Progressive scan, Widescreen Plus
- Display screen type: LCD WXGA Active Matrix TFT
- Dynamic screen contrast: 6000:1
- Response time (typical): 6 ms
- Viewing angle: 176° (H)/176° (V)
- Screen enhancement: Anti-Reflection coated screen

## Supported Display Resolution

- Computer formats: 640 x 480, 60 Hz, 800 x 600, 60 Hz, 1024 x 768, 60 Hz
- Video Formats: 640 x 480i - 1Fh, 640 x 480p - 2Fh, 720 x 576i - 1Fh, 720 x 576p - 2Fh, 1280 x 720p - 3Fh, 1920 x 1080i - 2Fh

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Video Playback: NTSC, SECAM, PAL

## Multimedia Applications

- Digital Content Management: Digital Media Reader
- Multimedia connections: USB (streaming video capable)
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures, MPEG2

## Convenience

- Child Protection: Child Lock+Parental Control
- Ease of Installation: Auto Programme Naming,

- Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, PLL Digital Tuning, Plug and Play
- Ease of Use: 4 favourite lists, Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On-Screen Display, Programme List, Side Control
- Clock: Smart Clock
- Screen Format Adjustments: 4:3, 6 Widescreen Modes, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle and Heading Shift, Super Zoom, Widescreen
- Remote Control: Amp, DVD, Sat, STB (Set-Top Box), VCR, Multi-functional
- Remote control type: RC4401
- Teletext: 1200-page Hypertext
- Picture in Picture: Text dual screen
- Teletext enhancements: Habit Watch, Programme information Line

## Sound

- Output power (RMS): 2 x 8 W
- Sound System: Virtual Dolby Digital
- Sound Enhancement: Digital Signal Processing, Dynamic Bass Enhancement, Graphic Equalizer

## Loudspeakers

- Built-in speakers: 4
- Loudspeaker types: Integrated woofers with wOOx, Dome tweeter

## Connectivity

- Front/Side connections: Audio L/R in, CVBS in, Headphones Out, S-video in, USB
- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, RGB, S-video in
- Other connections: Analogue audio Left/Right out, S/PDIF in (coaxial), S/PDIF out (coaxial)
- Ext 3: YPbPr
- Ext 4: HDMI
- Ext 5: HDMI

## Power


- Mains power: AC 220-240 V +/- 10%
- Ambient temperature: 5°C to 40°C
- Power consumption: 128 W
- Standby power consumption: 0.9

## Accessories

- Included accessories: Tabletop stand, RF antenna cable
- Optional accessories: Floor stand

## Dimensions

- Set Width: 875 mm
- Set Height: 610 mm
- Set Depth: 107 mm
- Product weight: 22 kg
- Set height (with stand): 662 mm
- Set depth (with stand): 230 mm
- Box width: 935 mm
- Box height: 902 mm
- Box depth: 234 mm
- Weight incl. Packaging: 35 kg

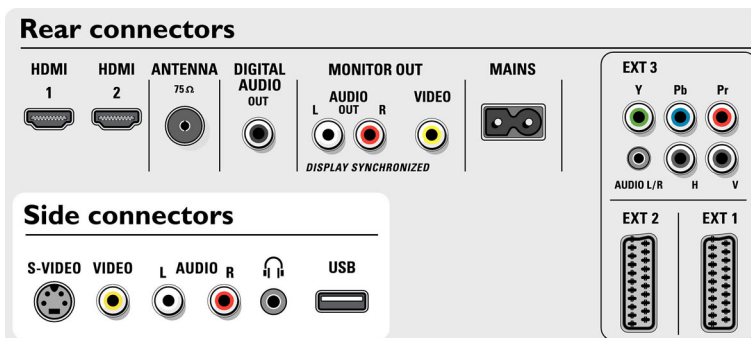

Issue date 2023-07-13

Version: 6.0.11

EAN: 87 12581 30746 2

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)