



Philips EasyCare
Steam iron

Steam 40g/min; 130g steam boost

Anodilium soleplate
Safety Auto Off
2300 Watts

GC3550/02

2300 W Power for great performance

With scratch-proof Anodilium soleplate

This powerful Philips iron comes with the most robust soleplate of all irons. Nothing can scratch this iron while it glides smoothly over your garment. The powerful steam boost helps you to blast all creases away easily.

Comfortable ironing

- Vertical steam for crease removal in hanging fabrics
- Soft grip for lasting ironing comfort

Easy gliding on all fabrics

- Scratch-resistant, highly durable Anodilium soleplate

Safe ironing

- Drip-stop system keeps your garments spotless while ironing
- 3 Safety Auto Off triggers

Reaches into tricky areas

- Steam tip allows you to have steam in hard-to-reach areas

Easily removes creases

- Continuous steam output up to 40 g/min
- 130 g steam boost to remove stubborn creases easily

PHILIPS

Steam iron

Steam 40g/min; 130g steam boost Anodilium soleplate, Safety Auto Off, 2300 Watts

GC3550/02

Highlights

Anodilium soleplate



Excellent gliding, excellent scratch resistance, excellent to clean, excellent durability!

Safety Auto Off

Auto off

Iron shuts off automatically when the iron is held still for 30s on its soleplate, lying on its side for 30s or standing on its heel rest for 8 minutes.

Up to 40 g/min of steam



0-40 g vario

The Philips steam iron with continuous steam output of up to 40 g/min gives you the perfect


amount of steam to efficiently remove all creases.

Steam boost up to 130 g




The steam boost can be used for vertical steaming and tough creases.

Steam tip

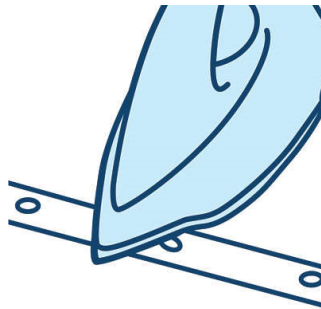

The unique steam tip of this Philips iron combines a particularly pointed front of the soleplate with special elongated steam slots in the tip to reach right into the smallest and most difficult areas for the best ironing results.

Vertical steam

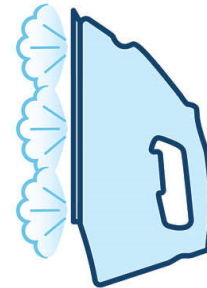

This Philips iron has a vertical steam function, for crease removal in hanging fabrics.

Soft grip

The soft handgrip of this Philips iron allows for comfortable ironing even during longer sessions.

Drip-stop system



Your Philips steam iron's Drip-Stop system lets you iron delicate fabrics at low temperatures without having to worry about stains from water droplets.

Specifications

Calc management

- Calc clean solution: Double active calc clean
- Suitable for tap water

Technical specifications

- Voltage: 220 - 240 V

Weight and dimensions

- Weight of iron: 1.64 kg
- Product dimensions (W x H x D): 32.8 x 12.9 x 16.3 cm

Easy to use

- Water tank capacity: 300 ml
- Filling and emptying water: Extra-large filling hole
- Safety auto off

- Drip-stop
- Soft grip
- Cord freedom (swivel): 360 degree cord freedom
- Cord storage: Cord clip
- Power cord length: 2.5 m

Fast and powerful crease removal

- Soleplate: Anodilium
- Continuous steam output: 40 g/min
- Power: 2300 W
- Spray
- Steam boost: 130 g
- Vertical steaming
- Variable steam settings
- Steam tip



Issue date 2023-07-13

Version: 1.0.1

EAN: 87 10103 58754 5

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com