



Philips InstantCare
Pressurised steam
generator

120 g/min steam
260 g steam boost
ECO



GC7541/02

Fast and powerful ironing

Two minute quick start, refill any time

Created to speed up ironing from start to finish, the Philips InstantCare is ready to use in 2 minutes. The power of the pressurised steam speeds up ironing by penetrating deeper into the fabrics to remove the creases.

Fast and powerful ironing

- Continuous steam up to 120 g/min
- Max 5.2 bar pump pressure
- Steam boost up to 260 g

Easy to use

- Start quickly: less than 2 minutes start-up time
- Refill the water tank at any time, even during ironing
- Permanent anti-calc tablets inside delay scale build up
- Save 30% energy and 40% water consumption

Comfortable ironing

- SteamGlide soleplate is Philips premium soleplate
- Lightweight iron for effortless ironing
- 3 types of automatic shut-off

PHILIPS

Pressurised steam generator
120 g/min steam 260 g steam boost, ECO

GC7541/02

Highlights

Continuous steam



120g/min

The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.

Max 5.2 bar pump pressure

Up to
5.2 bar


The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

SteamGlide soleplate



The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.

Lightweight

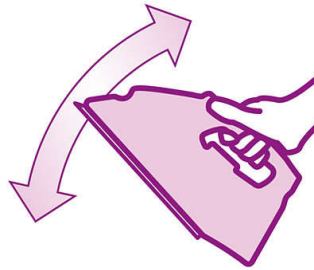

The iron is only 1.2 kg making ironing easy and effortless.

Anti-calc Tablets



Permanent anti-calc tablets delay the formation of scale build up ensuring better protection for your system iron

Quick start: < 2 minutes



2 mins start

This system iron is ready to use in less than 2 minutes.

ECO setting

ECO

Save 30% energy and 40% water consumption by selecting the eco-setting. The eco-setting offers the most energy efficient way to obtain perfect ironing results.

Refill the water tank any time



The separate water tank allows you to re-fill the water tank any time, even during ironing, without waiting.

Automatic shut-off

**Safety
auto
off**

Iron shuts off automatically when the iron is held still for 30s on its soleplate, lying on its side for 30s or standing on its heel rest for 8 minutes.

Pressurised steam generator
120 g/min steam 260 g steam boost, ECO

GC7541/02

Specifications

Calc management

- Calc clean solution: Anti-calc tablets and rinsing
- Suitable for tap water

Technical specifications

- Weight of iron + base: 4.5 kg
- Product dimensions: 42.9 x 40 x 20.6 cm
- Weight of iron: 1.2 kg
- Voltage: 220 - 240 V

Easy to use

- Water tank capacity: 1000 ml
- Refill any time
- Filling and emptying water: Extra-large filling hole
- Heat-up time: 2 min
- Safety auto off
- Cord freedom (swivel): 180 degree cord freedom

- Power cord length: 1.8 m
- Hose length: 1.7 m
- Hose storage: Hose clip

Sustainability

- ECO setting: 30% energy reduction

Fast and powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output: 120 g/min
- Power: 2400 W
- Steam output
- Pressure: Up to 5.2
- Vertical steaming
- Steam boost: Up to 260 g
- Variable steam settings
- Steam tip



Issue date 2023-07-13

Version: 1.0.1

EAN: 87 10103 64608 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com