



Philips
Pressurised steam
generator

270 g steam boost
5.5 bar
ECO

GC8375/02

Great results, minimum effort

Endless, powerful steam with 1.4 litre water tank

Powerful yet surprisingly compact iron, this Philips ironing system produces non-stop high steam with high pressure, making ironing fast and easy. Thanks to the 1.4 litre detachable water tank, you can iron for hours without interruption.

Fast and powerful ironing

- Continuous steam up to 120 g/min
- Vertical steam for crease removal in hanging fabrics
- Max 5.5 bar pump pressure
- 270 g steam boost to remove stubborn creases easily

Easy to use

- Permanent anti-calc tablets inside delay scale build up
- Save 20% energy and 40% water consumption

Comfortable ironing

- Lightweight iron for effortless ironing
- SteamGlide soleplate is Philips premium soleplate
- 3 Safety Auto Off triggers

Iron up to 3 hours without refilling

- Extra-large detachable 1.4 litre water tank

PHILIPS


Highlights

Max 5.5 bar pump pressure

Up to
5.5 bar

The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.


Detachable water tank

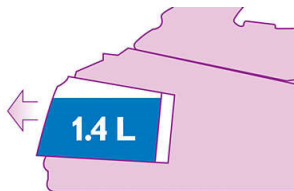

Xtra Large detachable water tank

To make ironing effortless you need a lot of steam. High steam output means a lot of refilling. The extra-large 1.4 l water tank reduces the need for refilling.

Lightweight

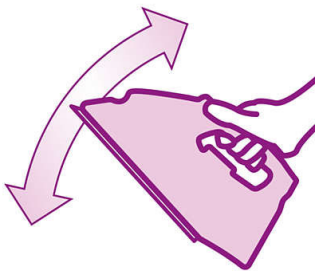

The iron is only 1.2 kg making ironing easy and effortless.

Eco-setting

ECO


Save 20% energy and 40% water consumption by selecting the eco-setting on your Philips Iron. The eco-setting offers the most energy efficient way to obtain perfect ironing results.

Continuous steam



The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.

Anti-calc Tablets

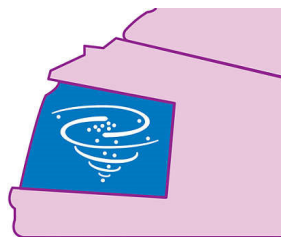

Permanent anti-calc tablets delay the formation of scale build up ensuring better protection for your system iron

Steam boost up to 270 g


The iron's 270 g steam boost enables you to easily remove even the most stubborn creases.

SteamGlide soleplate



The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.

Vertical steam

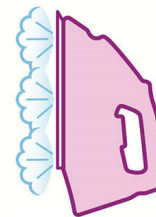

This Philips iron has a vertical steam function, for crease removal in hanging fabrics.

Safety Auto Off

**Safety
auto
off**

Iron shuts off automatically when the iron is held still for 30s on its soleplate, lying on its side for 30s or standing on its heel rest for 8 minutes.

Specifications

Calc management

- Calc clean solution: Anti-calc tablets and rinsing

Technical specifications

- Weight of iron + base: 5 kg
- Weight of iron: 1.2 kg
- Product dimensions: 35 x 35 x 25 cm
- Voltage: 220 - 240 V

Easy to use

- Water tank capacity: 1400 ml
- Refill any time
- Filling and emptying water: Detachable water tank
- Heat-up time: 2 min
- Safety auto off
- Power cord length: 1.8 m

- Hose length: 1.7 m

- Hose storage: Hose clip

Sustainability

- ECO setting: 20% energy reduction

Fast and powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output: 120 g/min
- Power: 2400 W
- Pressure: Up to 5.5
- Steam boost: 270 g
- Vertical steaming
- Variable steam settings
- Steam tip



Issue date 2023-07-13

Version: 1.0.1

EAN: 87 10103 66559 5

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com