

Philips
Hospitality TV

32" MediaSuite
powered by Android™

32HFL5011T



Game changing experience

powered by Android™

Give your guests the viewing experience they deserve. They will enjoy a quicker, more responsive TV with a wealth of dedicated hospitality applications, while you will enjoy easy remote installation and management at your convenience.

Exhilarating. Limitless. Powered by Android

- Android: a faster, richer, more enjoyable TV experience
- Advanced apps with many dedicated services for hospitality
- AppControl to add, sort, and delete apps with minimal effort

Take control with CMND

- CMND & Control: effortless maintenance of your TV's
- CMND & Create: Show the information you want, when you want

Differentiating guest experience

- Miracast & DirectShare to share movies and music on your TV
- Philips TV Remote App for greater guest control


Advanced hotel features and future proof

- Integrated IPTV system for optimal customized interactivity
- Serial Xpress Protocol for interactive systems
- MyChoice compatibility for recurring revenues
- Wi-Fi and Bluetooth for wireless control and interaction

PHILIPS


Highlights

CMND & Create



CMND & Create allows you to provide the information you want, when you want. The content management module of CMND, it allows for easy creation and distribution of interactive, branded hotel web pages. Tailor your TV's to give guests the most up to date information with the latest developments in your hotel, all in real time.

CMND & Control



CMND & Control allows for remote configuration and installation of your TV's from a central location, without having to visit any rooms. Update and manage all your displays, with minimal effort, all without having to disturb your guests.

Android

With Android on your Hospitality TV you'll enjoy a faster, richer and guest-friendly interface. It's your launch control to a wealth of dedicated hospitality services, applications, and so much more. There's an easy to navigate menu with direct links to your favorite apps.

AppControl

App control ensures your TVs get the apps you want. With the ability to add, delete, and sort apps, plus the ability to configure apps to specific rooms, it's a truly personalized guest experience that you can control from a centralized location, without having to enter

the room. For ease of use and security, load your custom app on our private, cloud based server and be secure in the fact that only you can access it.

Advanced Apps

Advanced apps consist of an ever growing library of applications. With the power of Android, apps run smoother, faster, and are more advanced than ever. Tailored for hospitality, guest information is securely deleted after use and access to illegal content that can harm your business is prevented.

Miracast & DirectShare



Our TVs give your guests the freedom to enjoy their content on the big TV wirelessly and without hassle. With our open system approach we serve iOS as well as Android users and continuously extend our compatibility. Our secure sharing protects your guests. Pictures, movies, music, all can be shared and enjoyed on our TVs via Miracast & DirectShare!

Integrated IPTV

Safe costs and clutter. With our new Smart TVs you can build your hotel system directly on the TV. Interactive channels, video-on-demand, interactive hotel menus and information as well as online ordering systems are all possible without an external box

32HFL5011T/12

attached to the TV. Next to delivery of the content over coax TV cables, you can now also use your internet network to deliver your TV channels or VOD directly to the TV. Our partner network can make sure you get the customized portal you want.

MyChoice compatible



MyChoice offers a simple and low-cost way to offer your guests premium TV channels. At the same time it delivers an additional revenue stream which allows you to recover your initial TV investment.

Serial Xpress Protocol (SXP)

The TV can be connected to external decoders and set-top boxes of all major interactive system providers, through the Serial Xpress Protocol (SXP).

Philips TV Remote App

Don't feel like using the remote control? Use the Philips TV Remote App on your smartphone or tablet to control your TV, pick and choose what apps to view, and access SmartInfo. Available for free download on iOS and Android devices.

Wi-Fi and Bluetooth

Wi-Fi and Bluetooth for wireless control and interaction



Specifications

Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 32 inch
- Diagonal screen size (metric): 80 cm
- Display: LED Full HD
- Panel resolution: 1920x1080p
- Brightness: 350 cd/m²
- Picture enhancement: 200Hz Perfect Motion Rate, Pixel Plus HD
- Viewing angle: 178° (H) / 178° (V)

Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/C, HEVC FHD (up to 1080p60)
- Video Playback: NTSC, PAL
- Analog TV: PAL
- IP Playback: Multicast, Unicast

Android TV

- OS: Android™ 5.1 (Lollipop)
- Memory size(Flash): 8GB

Features

- Ease of use: Picture Style, Sound Style
- Digital services: 8d EPG, Now&Next, MHEG, Teletext, HbbTV, Subtitles
- Local control: Joystick

Hospitality Features

- Hotel mode: Joystick Control Lock, Menu lock, Installation Menu Lock, Volume limitation
- Prison mode: high security mode, TXT/MHEG/USB/EPG/Subtitle Lock
- Timer: Sleep Timer, Wake Up Alarm, Wake Up On Channel, Wake up Sounds
- Switch On control: Channel, Feature, Picture Format, Volume, Picture Style
- Anti-Theft: Battery Anti-theft Protection, Kensington Lock
- Power control: Auto Power ON, Green/fast startup, WoLAN, WoWLAN
- Apps: AppControl, Cloud-based Apps, Android Apps
- Your brand: SmartInfo, Welcome Logo, Customizable Dashboard (HTML), IPTV System, Custom Apps, Location Name (Geonames ID)
- Clock: Clock in Standby Mode, Glow-in-the-Dark RC button, On-screen Clock, Optional External Clock
- SmartInfo: HTML5 Browser, Interactive Templates
- Cloning and Firmware update: Instant Initial Cloning, Via USB/RF/IP
- CMND&Control: Off-Line Channel Editor, Off-

- Line Settings Editor, Real-time TV Status (IP), Remote Management over IP/RF, CMND&Create, TV Group management
- Control: Block Automatic Channel Update, Serial Xpress Protocol, JSON API for TV Control-JAPIT
- Integrated services: 5 Day Weather Forecast
- Interactive DRM: VSecure, Playready
- Smoothstreaming, Securemedia
- Revenue generation: MyChoice
- Languages: Guest language control
- Remote Control: Cable Strap Ready, Low Battery Detection, RC Battery Door Lock
- Channels: Combined List, Themed lists

Healthcare features

- Control: Multi-Remote Control, Healthcare RC compatible, Nurse call system compatible
- Convenience: Headphone out, Independent main speaker mute
- Safety: Double isolation class II, Flame retardant

Multimedia

- Video playback supported: Formats: H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, HEVC, Containers: AVI, MKV
- Music formats supported: MP3, AAC, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10)
- Subtitle formats supported: SRT, SMI, SSA SUB, TXT, ASS
- Picture formats supported: JPG, BMP, GIF, PNG
- Supp. Video Resolution on USB: up to 1920x1080p@60Hz
- Multimedia connections: USB, LAN

Audio

- Sound output Power: 16 (2x8) W
- Bathroom speaker out: 1.5W Mono 8Ohm
- Speakers: 2.0, Down Firing
- Sound Features: AVL, Incredible surround, Dynamic Bass, Dolby MS10

Power

- Mains power: AC 220-240V; 50-60Hz
- Ambient temperature: 0 °C to 40 °C
- Standby power consumption: <0.4W
- Energy Label Class: A+
- Eu Energy Label power: 28 W
- Power Saving Features: Eco mode
- Annual energy consumption: 41 kW h

Accessories

- Included: Tabletop Swivel stand, 2x AAA batteries, Warranty Leaflet, Legal and Safety brochure,

- Power Cord, Remote Control 22AV1505B/12
- Optional: External Clock 22AV1120C/00, Healthcare RC 22AV1109H/12, Setup RC 22AV9573A, Bluetooth RC 22AV1507A/12

Wireless Connectivity

- Wireless LAN: 802.11 b/g/n
- Bluetooth: 4.0, HID Gamepad Ready, Multichannel, Wireless Audio (Headphone)
- Wifi-Direct: DirectShare, Miracast

Connectivity Bottom

- HDMI1: HDMI 1.4
- Antenna: IEC-75
- HDMI2: HDMI 1.4
- Digital Audio out: Optical
- USB1: USB 2.0
- Ethernet (LAN): RJ-45

Connectivity Side

- USB2: USB 3.0
- Common Interface Slot: CI+ 1.3.2
- HDMI3: HDMI 1.4
- HDMI4: HDMI 1.4 (MHL 2.0)
- Headphone out: Mini-Jack

Connectivity Rear

- Scart: RGB, CVBS
- Bathroom speaker out: Mini-Jack
- Component: YPbPr + L/R cinch
- DVI audio in: Mini-Jack
- External power: Mini-Jack, 12V, max 1.1A
- External Control: RJ-48

Connectivity Enhancements


- RJ48: IR-In/Out, Serial Xpress interface
- EasyLink (HDMI CEC): One touch play, System Standby, RC pass through, system audio control
- LAN: Wake up on LAN
- HDMI: ARC (all ports), DVI (all ports), MHL 2.0 (HDMI4)

Design

- Colour: Black
- Features: Illuminated wordmark

Dimensions

- Set Width: 727 mm
- Set Height: 425 mm
- Set Depth: 64/77 mm
- Product weight: 5 kg
- Set width (with stand): 727 mm
- Set height (with stand): 489 mm
- Set depth (with stand): 179 mm
- Product weight (+stand): 6.3 kg
- Wall mount compatible: M4, 100 x 100 mm

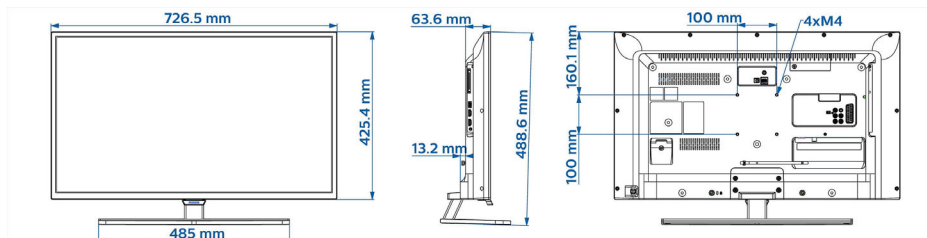

Issue date 2023-07-15

Version: 1.0.1

EAN: 87 18863 00673 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Availability of features will depend on implementation chosen by integrator.

* Philips does not guarantee the availability or continuity of correct functioning of apps.

* Actual free memory may be less due to device pre-configuration

* Typical on-mode power consumption measured according to IEC62087 Ed 2. The actual energy consumption will depend on how the television is used.

* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.