

Philips AquaTrio Cordless  
Cordless Wet & Dry  
Vacuum 7000 Series

Vacuum & thorough wet mopping

Flexible & easy-to-use design  
Automated self-cleaning  
Up to 25 min & 180m<sup>2</sup> cleaning\*\*

XW7110/01



## Advanced hygienic floor cleaning

Vacuum and actively mop your hard floors in one go

The innovative AquaTrio Cordless 7000 Series is our advanced wet & dry vacuum cleaner for ultimate cleaning performance. Advanced technologies in flexible design allows to actively mop even hard-to-reach areas between and under furniture.

### **Vacuum & mopping in one go for hygienic clean**

- AquaSpin nozzle allows to vacuum and wash a floor in one go
- Two high-speed brushes wet clean the floor hygienically
- Wash floor always with clean water
- Aqua Diffusion System allows to lock in dirty water

### **Get the most out of your clean**

- Enhanced cleaning of hard-to-reach areas
- Flexible cordless cleaning for effective performance
- 3 cleaning modes to adjust to different cleaning needs
- Automated self-cleaning of the appliance and Power Brushes
- Digital LCD smart screen for in- and after use guidance
- Floor Cleaning solution for hard floors


# PHILIPS

## Cordless Wet & Dry Vacuum 7000 Series

Vacuum & thorough wet mopping Flexible & easy-to-use design, Automated self-cleaning, Up to 25 min & 180m<sup>2</sup> cleaning\*\*


# Highlights

### AquaSpin technology

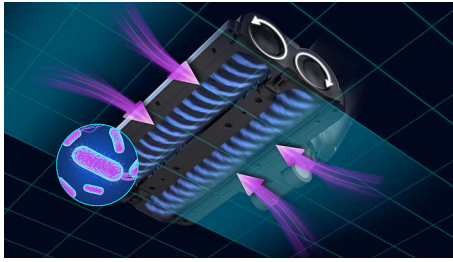

AquaSpin nozzle vacuums and actively mops hard floors effectively to remove dust, dirt, stains, spills, and up to 99.9% of bacteria\*, in one go. The unique nozzle is designed to pick up dirt at both the front and back of the nozzle to make every stroke count.

### High-speed rotating brushes

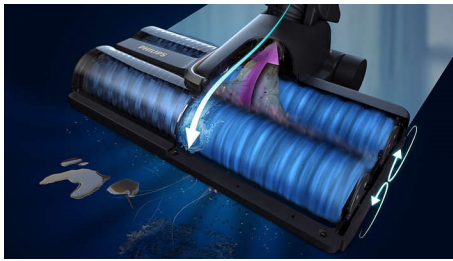

The innovative patented high-speed rotation brush technology with a constant flow of clean water enables self-cleaning power brushes and prevents spreading dirt over the floor. So you never need to rinse and wring out a dirty mop to clean with again!

### Always clean mopping water



A constant flow of clean water from the clean water tank is released onto the floor. This ensures that each part of your floor is cleaned with fresh, clean water. You'll never mop with dirty mopping water, unlike with a traditional manual mop!

### Aqua Diffusion System



All the picked-up wet & dry dirt is immediately separated and locked in the dirty water tank. You can empty tanks at any point, without having to touch the dirty mopping water.

### Exceptional manoeuvrability



Effortlessly clean areas around chairs and table legs for maximum comfort. You can maneuver the device against tricky spots like plinths and room edges where dirt accumulates.

### Flexible design



Flexible design lets you to vacuum and wash even hard-to-reach areas under furniture. The appliance can go into a fully flat position without raising the nozzle and losing contact with the floor.

XW7110/01

### Adjustable cleaning modes



The appliance has 3 cleaning modes. Normal wet mode intended for regular wet cleaning. The intense wet mode is for cleaning stubborn stains. Water absorption mode to pick up remaining moisture from the floor. Use the Digital LCD smart screen to switch power settings.

### After-clean & storage station



Once your cleaning session is complete, simply place the appliance on the After-Clean & Storage station for an automated self-cleaning cycle that fully rinses the appliance and the Power Brushes. Once done, you can keep the whole system including the Power Brushes stored together so that it is all clean and ready for the next use.

### Digital LCD smart screen



Digital LCD smart screen guides you with all information you need during and after the clean. Turn to the LCD screen to get live information on battery power status, cleaning modes, maintenance support and much more.

## Cordless Wet & Dry Vacuum 7000 Series

Vacuum & thorough wet mopping Flexible & easy-to-use design, Automated self-cleaning, Up to 25 min & 180m<sup>2</sup> cleaning\*\*

XW7110/01

# Specifications

### Performance

- Battery type: Lithium-ion battery
- Charging time: 4 hours
- Battery voltage: 25.9V
- Runtime: 25 minutes

### Usability

- Clean water tank capacity: 670 ml
- Dirty water tank capacity: 600 ml
- Usable detergents: Philips floor cleaning solution XV1792
- Dirt water tank full indicator
- Surface coverage per battery: Up to 180 m<sup>2</sup>

### Filtration

- Filter system: Aqua Diffusion system

### Nozzles and accessories

- Standard nozzles: AquaSpin nozzle
- Accessories included: After-clean & storage station, Cleaning brush, Floor cleaner

### Design

- Color: Charcoal Grey and Champagne

### Sustainability

- Packaging: > 90% recycled materials

### Weight & Dimensions

- Weight: 4.6 kg
- Dimensions in set-up: L26.5 x W22.5 x H110 cm
- Dimensions after-clean & storage station: L34.5 x W32 x H24.3 cm



Issue date 2024-01-27

Version: 10.10.1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Tested with bacteria Staphylococcus aureus using water only.

\*\* Runtime applies in normal mode with one full battery charge.  
Cleaning range calculated coverage based on IEC standard 0,5m/sec  
test speed.