



Philips  
Pressurised steam  
generator

**180 g steam boost**  
5 bar  
SteamGlide

**GC8330/02**

## Great results, minimum effort

Endless, powerful steam with 1.4 liter water tank

Powerful yet surprisingly compact iron, this Philips ironing system produces non-stop high steam with high pressure, making ironing fast and easy. Thanks to the 1.4 liter detachable water tank, you can iron for hours without interruption.

### **Fast and powerful ironing**

- Up to 5 bar pressure
- Ready to use in 2 minutes with unlimited refill
- Continuous steam up to 120 g/min
- Vertical steam for crease removal in hanging fabrics

### **Fast and powerful ironing**

- Steam boost up to 180 g

### **Comfortable ironing**

- Lightweight iron for effortless ironing
- SteamGlide soleplate is Philips premium soleplate

### **Save energy consumption**

- Save 20% energy and 40% water consumption

### **Iron up to 3 hours without refilling**

- Xtra large detachable 1.4 liter water tank

# PHILIPS


# Highlights

## Up to 5 bar pressure

Up to  
**5 bar**

The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing faster and better. Steam power can be regulated to fit your needs.

## Detachable water tank

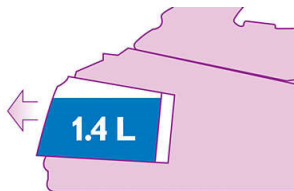

**Xtra Large detachable water tank**

To make ironing effortless you need a lot of steam. High steam output means a lot of refilling. The extra large 1.4 l water tank reduces the need of refilling.

## Lightweight

The iron is only 1.2 kg making ironing easy and effortless.

## Steam ready in 2 minutes



Steam is ready to use in 2min and can be refilled at anytime during ironing.

## Eco-setting



Save 20% energy and 40% water consumption by selecting the eco-setting on your Philips Iron. The eco-setting offers the most energy efficient way to obtain perfect ironing results.

## Continuous steam



The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.

## Steam boost up to 180 g




The steam boost can be used for vertical steaming and tough creases.

## SteamGlide soleplate



SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistancy, glides excellent and is easy to clean.

## Vertical steam

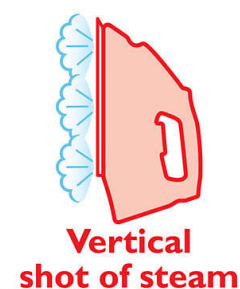

This Philips iron has a vertical steam function, for crease removal in hanging fabrics.

# Specifications

## Calc management

- Calc clean solution: Anti-calc tablets + rinsing

## Technical specifications

- Weight of iron: 1.2 kg
- Voltage: 220 - 240 V
- Product dimensions: 35 x 35 x 25 cm
- Weight of iron + base: 5 kg

## Easy to use

- Heat up time: 2 minute(s)
- Filling and emptying water: Detachable water tank
- Refill any time
- Water tank capacity: 1400 ml
- Power cord length: 1.8 m

- Hose length: 1.7 m

- Hose storage: Hose clip

## Sustainability

- ECO setting: 20% energy reduction

## Fast & powerful crease removal

- Continuous steam output: 120 g/min
- Soleplate: SteamGlide
- Power: 2400 W
- Pressure: Up to 5
- Steam boost: 180 g
- Vertical steaming
- Steam tip
- Variable steam settings



Issue date 2023-07-15

Version: 1.1.1

EAN: 87 10103 53871 4

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)