



Philips Easy6 Express  
Ironing board

## 6 clever solutions for easy ironing with ShoulderShape

Ironing board plays an important role in the ironing experience. This Philips ironing board is designed for steam irons. With 6 clever solutions, ironing will become easier and more efficient.



GC202/10

### Fast ironing

- Smoother gliding with multi-layered board cover
- ShoulderShape for easy shirt ironing

### Convenient ironing

- Convenient ironing for everyone: adjustable height


### Safe ironing

- Designed for safety: child and transport lock
- Safe iron tray
- Extra stability: anti-slip feet caps

**PHILIPS**

# Highlights

## Multi-layered board cover

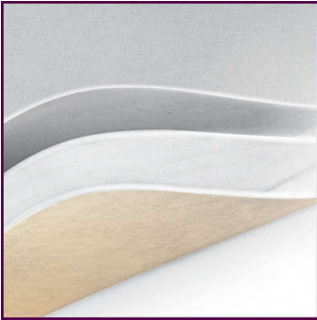

The board cover is made of 100% cotton and is supported by foam and felt layers. This combination provides a comfortable and smooth ironing surface.

## Adjustable height

The height of the ironing board is easy to adjust to your own height with a lever, located underneath the board surface. The height can be adjusted between 70 and 94 cm.

## Child and transport lock




Child and transport lock prevents the board from accidentally collapsing while ironing and also keeps the board closed during storage.

## Safe iron tray

The stable and safe iron tray is suitable for both left- and right-handed use.

## Stabilising feet caps

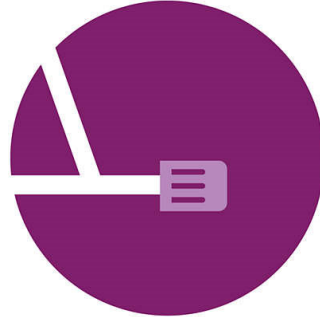

This ironing board was designed to provide extra stability. Special design of the legs with anti-slip feet caps makes the board stable and safe.

## ShoulderShape



With the unique ShoulderShape, shirt ironing is easier than ever. This innovative shape helps you iron shirts with little rearranging, saving you time and effort.

# Specifications

## Fast and convenient ironing

- Height adjustment: 70-95 cm
- Height setting: 6 setting(s)
- Suitable for: Steam irons
- ShoulderShape

## Design features

- Ironing surface: Expanded Metal Mesh
- Legs: Powder-coated metal tubes

## Board cover

- Top layer: 100% Cotton
- Second layer: Foam
- Third layer: Felt

## Technical specifications

- Board dimensions: 120 x 38 cm (at Shoulder Shape 45) cm
- Weight of board: 5.8 kg
- Packaging dimensions (1-in-1): 8 x 49 x 159 cm
- Packaging dimensions (2-in-1): 15 x 49 x 159 cm

## Safe ironing

- Child lock
- Transport lock
- Safe iron tray
- Stabilising feet caps



Issue date 2023-07-15

Version: 1.0.1

EAN: 87 10103 81558 7

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)