

Philips  
widescreen flat TV

42"  
plasma

42PF3321



# Turn up your viewing experience

with Digital Crystal Clear

The latest plasma display technology delivers razor sharp images and brilliant colours for extra viewing enjoyment in your home entertainment set-up.

#### **Vivid, natural and razor sharp images**

- Enhanced-definition plasma WVGA display, 852 x 480p
- Digital Crystal Clear provides vivid cinema-like images
- Progressive Scan component video for optimised image quality
- Active Control optimises picture quality whatever the source

#### **Superb sound reproduction**

- Virtual Dolby Surround for a cinema-like audio experience

#### **Slim, stylish design to complement your interior**

- Compact and slim design that fits in every room

#### **Designed for your convenience**

- Turn your TV screen into a mosaic of different channels

#### **For advanced performance**

- HDMI input for full digital HD connection in one cable

# PHILIPS

widescreen flat TV  
42" plasma

# Highlights


## Plasma WVGA panel, 852 x 480p

This WVGA display with state-of-the-art plasma screen technology has an enhanced widescreen resolution of 852 x 480p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colours. This vibrant and sharp image will provide you with an enhanced viewing experience.

## Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimises picture quality to optimal contrast, colour and sharpness levels. It's like watching vivid cinema-like images.

## Progressive Scan

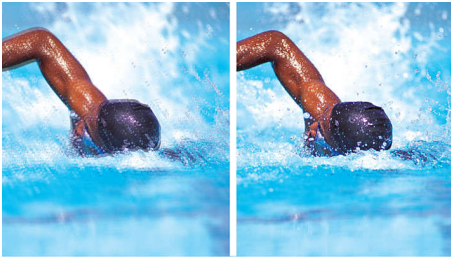

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first,

followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## Active Control

Active Control ensures that noise and sharpness improvements are continuously made at a rate of 60 times per second. By continually adjusting the picture setting over 3000 times per minute, Active Control Plus ensures that the viewing experience is optimised.

## Virtual Dolby Surround

Virtual Dolby Surround is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic without the necessity of additional rear speakers. You become totally immersed in your television experience.

## Compact and slim design

This design style emphasises a slim, compact look that saves space and fits in anywhere.

## Multiple PiP Modes

Multiple Picture-in-Picture modes allow you to simultaneously watch two video sources either

42PF3321/10

picture-in-picture, side by side or in a mosaic view with still images.

## HDMI input



HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analogue signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backwards-compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection.

# Specifications

## Picture/Display

- Aspect ratio: 15:9, Widescreen
- Diagonal screen size (inch): 42 inch
- Diagonal screen size (metric): 107 cm
- Panel resolution: 852 x 480p
- Brightness: 1000 cd/m<sup>2</sup>
- Picture enhancement: 3/2 - 2/2 motion pull down, Active Control, Colour Temperature Adjustment, Contrast Plus, Digital Crystal Clear, Digital Noise Reduction, Jagged Line Suppression, Progressive scan
- Contrast ratio (typical): 3000:1
- Display screen type: WVGA Plasma panel
- Viewing angle (horizontal): 160 degree
- Viewing angle (vertical): 160 degree
- Screen enhancement: Anti-ageing circuit, Anti-Reflection coated screen

## Supported Display Resolution

- Computer formats: 640 x 480, 60, 67, 72, 75 Hz, 800 x 600, 56, 60, 72, 75 Hz, 1024 x 768, 60, 70, 75 Hz
- Video Formats: 640 x 480p - 2Fh, 720 x 576p - 2Fh, 1280 x 720p - 3Fh, 1920 x 1080i - 2Fh

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL, SECAM
- Number of Pre-set Channels: 100
- Video Playback: NTSC, SECAM, PAL
- Tuner Display: PLL

## Convenience

- Ease of Installation: Auto Programme Naming, Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, Plug and Play, Programme Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), Programme List, Side Control, Smart Picture, Smart Sound
- Clock: Sleep Timer, Wake-up Clock
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Remote Control: TV, DVD, Multi-functional
- Remote control type: RCFE06SPS00
- Teletext: Smart Text
- VESA Mount: 800 x 400 mm

- Picture in Picture: Twin page text
- Teletext enhancements: 4 favourite pages, Programme information Line

## Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 15 W
- Sound System: Stereo, Virtual Dolby Surround
- Sound Enhancement: Auto Volume Leveller, Dynamic Bass Enhancement

## Loudspeakers

- Built-in speakers: 2

## Connectivity

- Number of Scarts: 2
- Front/Side connections: Audio L/R in, CVBS in, Headphones Out, S-video in
- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, S-video in
- Other connections: Antenna IEC75
- Ext 4: YPbPr
- Ext 5: HDMI

## Power


- Mains power: AC 220-240 V +/- 10%
- Ambient temperature: 5°C to 40°C
- Power consumption: 220 W Normal Operation W
- Standby power consumption: &lt; 2 W

## Accessories

- Included accessories: Tabletop stand, RF antenna cable, Power cord, Quick start guide, User Manual, Registration card, Warranty certificate, Remote Control, Batteries for remote control
- Optional accessories: Floor stand

## Dimensions

- Product weight: 39.2 kg
- Box width: 1328 mm
- Box height: 930 mm
- Box depth: 330 mm
- Weight incl. Packaging: 47 kg
- Wall-mount compatible: 0
- Width (with base): 1236 mm
- Height (with base): 720 mm
- Depth (with base): 280 mm
- Width (without base): 1236 mm
- Height (without base): 679 mm

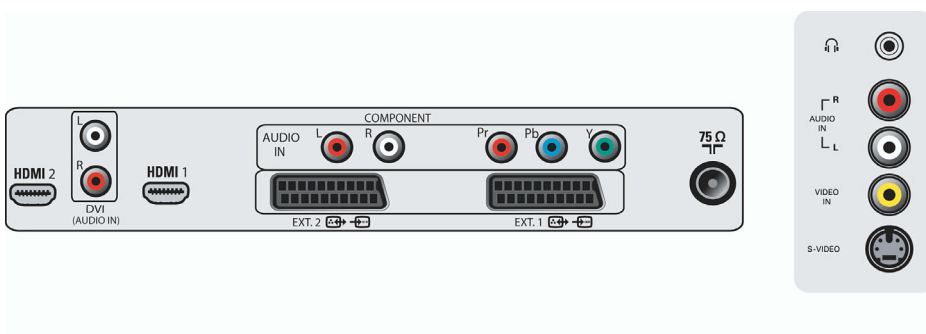

Issue date 2023-07-15

Version: 3.1.13

EAN: 87 10895 94285 0

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)