

Philips Series 3300
Fully automatic
espresso machine

- 6 Beverages
- LatteGo
- Black Chrome

EP3347/90



The easiest way to enjoy fresh bean coffees

LatteGo, the fastest to clean milk system ever*

Enjoy 6 hot and refreshing drinks with one touch, with the perfect crema, aroma and temperature. LatteGo automatically prepares silky-smooth milk froth for your milky coffees, is easy to set up and can be cleaned in as little as 10 seconds*.

Aromatic coffee from fresh beans

- Enjoy 6 hot and refreshing drinks with one touch
- Silky-smooth froth with LatteGo for various types of milk
- Enriched flavour with our hard-wearing ceramic grinder

Your coffee your way

- Easy coffee selection and customisation

Designed for effortless use

- LatteGo, the fastest milk system to clean: 2 parts, no tube
- Easy instructions and inspiration with the Coffee+ App
- Up to 5000 cups** without descaling thanks to Aquaclean
- 40% quieter with SilentBrew, same delicious coffee

PHILIPS

Fully automatic espresso machine
6 Beverages LatteGo, Black Chrome

Highlights

6 hot and refreshing drinks



Enjoy 5 popular coffee recipes, classic espresso, regular black coffee, cappuccino, latte macchiato and iced coffee, with the perfect crema, aroma and temperature. Hot water for tea is also available. Our unique brewing system perfectly extracts the beans' flavours with a slower flow rate and at a lower temperature. Add ice cubes to your drink and enjoy a delicious iced coffee, with no compromise on coffee intensity.

Easy coffee selection and customisation

Easily select your favourite drinks thanks to the modern touch-screen display with coloured icons. Adjust your coffee your way with the My Coffee Choice function: choose your preferred coffee strength, length and milk froth level, just to your taste.

LatteGo milk system

At the touch of a button, LatteGo automatically prepares silky-smooth milk froth for your milky coffees, thanks to its powerful cyclonic frothing technology, even with your favourite plant-based milk alternatives.

Fastest milk system to clean ever*



LatteGo is the fastest milk system to clean with only 2 parts, no tubes and can be cleaned in 10 seconds under the tap or in the dishwasher. Philips is not

offering automatic cleaning as it requires complementary cleaning.

Quiet coffee making with SilentBrew




Our patented SilentBrew technology reduces machine sounds so you can enjoy the experience of brewing aromatic coffee more. Using sound shielding and quiet grinding, our machines make 40% less noise than earlier models and come with a Quiet Mark certification.

100% ceramic grinders

Bring out the full flavour of your coffee with our hard-wearing ceramic grinder. The durable ceramic grinder can be adjusted in 12 steps, from fine to coarse grindings.

Effortless, inspired coffee with Coffee+ App

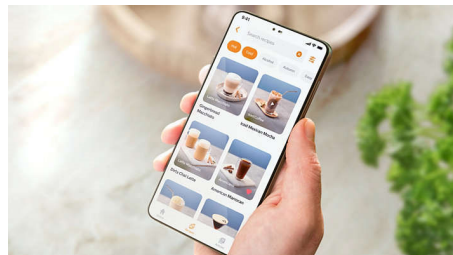

Discover all there is to know about your fully automatic espresso machine and unlock a world of unlimited inspiration with café-like recipes in the Coffee+ app.

AquaClean filter

By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups**, while enjoying clear and purified water.

EP3347/90

Specifications

Country of origin

- Designed in: Italy
- Made in: Romania

Customisation

- Aroma strength settings: 3
- Coffee and milk length: Adjustable
- Grinder settings: 12
- Pre-brew aroma control
- Temperature settings: 3

Variety

- Beverages: Espresso, Coffee, Cappuccino, Latte macchiato, Iced coffee, Hot water
- Coffee powder option
- Double cup
- Milk double cup: No

Other features

- Aroma seal
- Removable brew group
- Guided descaling
- AquaClean

Accessories

- Included: Measuring scoop, Water hardness strip test, AquaClean filter, Grease tube, LatteGo storage lid

Technical specifications

- Cord length: 100 cm
- Voltage: 230 V
- Frequency: 50 Hz
- Capacity milk carafe: 0.26 L
- Capacity waste container: 12 servings
- Capacity water tank: 1.8 L
- Weight of product: 8 kg
- Coffee bean capacity: 275 g
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Pump pressure: 15 Bar
- Colour and Finish: Black, Chrome
- Product dimensions: 246 x 371 x 433 mm
- Power consumption brewing: 1500 W

General specifications

- Adjustable spout height: 85-145 mm
- Milk solution: LatteGo
- Dishwasher-safe parts: Drip tray, LatteGo
- Ease of cleaning and maintenance: AquaClean filter compatible
- User interface: Coloured touch display

Service

- 2 year guarantee

Sustainability

- ECO setting
- Energy label: A-class

* Based on consumer testing in Germany comparing global leading One Touch (Coffee + Milk) Full Automatic Espresso Machines (2023).

** Based on 8 filter replacements as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.



Issue date 2024-01-06

Version: 11.11.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com