



Philips
Professional LCD TV

81 cm (32") System
LCD
HD Ready

32HFL5530

The ultimate Hospitality TV

Experience brilliant performance with High Definition displays. Combined with a powerful Pixel Plus 2HD engine, HD Natural Motion and full Hotel System functionality, this is truly the ultimate in-room Hospitality solution.

Best total cost of ownership

- Wireless SmartLoader for fast cloning
- External loudspeaker connector
- SmartPower for energy saving

System ready and future proof

- SmartPlug Xpress & Serial Xpress Control interfaces
- Installation menu locking
- Switch On Channel Programming

Differentiating guest experience

- Volume limitation
- Philips Connectivity Panel compatible to enjoy guest devices

Great viewing experience and guest comfort

- Welcome message on screen display
- HDTV for Hospitality
- Swivel stand with anti-theft provision

PHILIPS

Highlights

Connectivity Panel compatible

This TV work seamlessly with Philips Connectivity Panels. The guest can easily connect and enjoy media from a PC, MP3 player, DVD player, camcorder and various other devices. With autosensing the Connectivity Panel and the TV will automatically switch to display the content from the connected guest device.

External loudspeaker connector

Amplified audio connector for easy installation of external speakers (like for bathrooms), eliminating the need for investments in external equipment

HDTV for Hospitality

There are many ways you may choose to offer HDTV to your guests, but regardless of the source, Philips Hospitality televisions will always deliver the best viewing experience possible to your guests by utilizing the most advanced FlatTV displays and award winning technologies such as Pixel Plus HD.

Installation menu locking

Prevents unauthorized access to installation and configuration settings, to ensure maximum guest convenience and avoid unnecessary reprogramming costs.

SmartPlug & Serial Xpress

The Smartplug interface permits OEM or 3rd party decoders and controllers to interface with the TV.

SmartPower



The backlight intensity can be controlled and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs.

Switch On Channel Programming

Perfect for in-house advertising or information channels as it allows to show a predefined channel when the TV is turned on.

Swivel stand

This LCD TV comes with a swivel stand that allows your guests to adjust the TV so that they can watch TV from any position in the room. The stand can be secured to a table or furniture to provide additional security against theft.

Volume limitation

This feature predefines the volume range with which the TV set is allowed to operate, preventing excessive volume adjustments and avoiding disturbance of next door guests.

Welcome message

A welcome greeting is displayed each time the TV set is switched on.

Wireless SmartLoader

Provides the ability to copy easy and wireless all programming settings from one TV set into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

Specifications

Picture/Display

- Aspect ratio: Widescreen, 16:9
- Diagonal screen size (inch): 32 inch
- Diagonal screen size (metric): 81 cm
- Panel resolution: 1366 x 768p
- Brightness: 500 cd/m²
- Picture enhancement: Pixel Plus 2 HD, 3D Combfiter, Contrast Plus, Digital Noise Reduction, Jagged Line Suppression, Luminance Transient Improver, Progressive scan, HD Natural Motion, Active Control
- Contrast ratio (typical): 1500:1
- Display screen type: LCD WXGA Active Matrix TFT
- Dynamic screen contrast: 33000:1
- Response time (typical): 8.5 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

- Computer formats: 640 x 480, 60, 72, 75, 85Hz, 720 x 400, 70Hz, 800 x 600, 60, 72, 75, 85Hz, 1024 x 768, 60, 70, 75, 85Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz, 1080i, 50, 60Hz, 1080p, 24, 50, 60Hz, 1080p, 24, 25, 30Hz

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, NTSC
- Number of Preset Channels: 99
- Video Playback: NTSC, SECAM, PAL
- Tuner Display: PLL

Convenience

- Ease of Installation: Wireless Smart Loading, Fine Tuning, Program Name, Advanced Hotel Mode, Keyboard lock-out, Security menu access
- Comfort: Hotel Guest features, Sleep timer, Switch on channel, Volume limitation, Welcome message
- Screen Format Adjustments: 4:3, 7 Widescreen Modes
- Remote Control: TV

- Interactive hotel features: Smoovie Pay TV
- Remote control type: RC2887
- Teletext: 1000 page Smart Text
- On-Screen Display languages: English, Simplified Chinese, Malay
- Other convenience: Kensington lock, Convertible to consumer TV

Sound

- Output power (RMS): 2 x 15W
- Sound System: Mono, Stereo, BBE
- Sound Enhancement: Auto Volume Leveler, Incredible Surround, Smart Sound

Loudspeakers

- Built-in speakers: 2

Connectivity

- AV 1: Audio L/R in, YPbPr
- Connectivity Enhancements: External Loudspeaker connector, Digital Volume Control, Extra Power supply 12V/1W, RJ12 SmartPlug connector, RJ45 connector, Aux Audio Headphone connector
- AV 2: Audio L/R in, CVBS
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in, HDMI v1.3
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- Other connections: PC-in VGA + Audio L/R in, RS232 Serial, Analog audio Left/Right out, Composite video (CVBS) out, S/PDIF out (coaxial)
- HDMI 3: HDMI v1.3

Power

- Mains power: 100-240V, 50/60Hz
- Ambient temperature: 5 °C to 40 °C
- Power consumption: 140 W
- Standby power consumption: < 1.5W (Low Power Mode)

Green Specifications

- Safety: Flame retardant housing
- Eco Designed
- SmartPower

Accessories


- Included accessories: Tabletop swivel stand, Power cord, Remote Control, Batteries for remote

- control, Warranty Leaflet, User Manual
- Optional accessories: Mounting brackets/ stands, Set up Remote RC2573GR

Dimensions

- Set Width: 819 mm
- Set Height: 518 mm
- Set Depth: 92 mm
- Product weight: 14.5 kg
- Set width (with stand): 819 mm
- Set height (with stand): 579 mm
- Set depth (with stand): 220 mm
- Product weight (+stand): 18 kg
- Box width: 938 mm
- Box height: 646 mm
- Box depth: 255 mm
- Weight incl. Packaging: 21 kg
- Wall mount compatible: 200 x 300 mm

Rear connectors

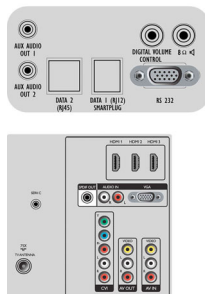

Side



Issue date 2023-07-27

Version: 3.0.1

EAN: 87 12581 46654 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com