

# PHILIPS

## AVENT

### Advanced

#### Video Baby Monitor

Private and secure

2.8" color screen, x2 zoom

Lullabies and talkback



SCD881/20



## Stay close to your baby

Private and secure with wireless technology

The Philips Avent SCD881 enables you to maintain a secure and private connection with your baby at all times. Hear your baby with perfect sound quality and also see your baby in crystal clear vision (2.8" LCD ; 7.2cm), day or night.

#### Private and secure

- Energy-saving eco mode with connection indication
- High resolution 2.8" (7.2 cm) screen with night vision
- Hear your baby with clear sound
- Private & secure connection with wireless technology

#### Freedom, flexibility, comforting and soothing

- Choose the best sound level for your surroundings
- Manual camera rotation for a complete view of baby's room
- Talk to your baby remotely
- Excellent operating time for overnight monitoring
- Range up to 300 metres\*
- Comforting lullabies to calm your little one

# Highlights

## Private & secure connection




Unique handset pairing for a private, secure connection to your baby with a 2.4GHz wireless connection technology for minimal interference.

## 2.8" color screen with 2x zoom




See your baby, day and night, with crystal clear infra-red night vision that automatically switches on in the dark. Enjoy your baby sleeping with the high resolution, extra large 2.8" color screen. With 2x digital zoom and pan for extra reassurance so you can see everything your baby is up to.

## Crystal clear sound video

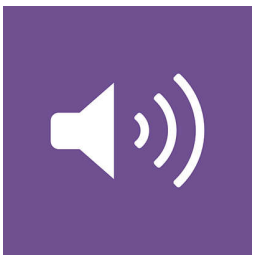


Hear every tiny giggle, gurgle and hic-up with perfect clarity. Not only see but also hear your baby any time with high-quality, crystal-clear sound.

## ECO mode

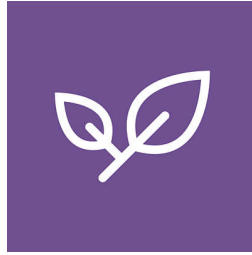

Switch on the ECO mode to reduce power consumption during quiet times in the baby's room, safe in the knowledge that you are still connected to your baby via the unique link indication. The ECO mode switches off the audio/video transmissions and the units only connect when the baby makes a sound.

## 300m Range

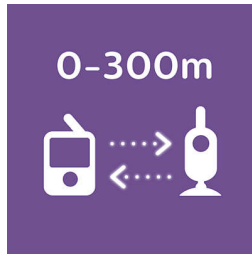

Indoor range up to 50 metres\*, Outdoor range up to 300 metres\*

## Operating time up to 12 hours\*\*




The convenient rechargeable parent unit will give you the freedom of cordless monitoring for up to 12 hours\*\* before recharging is required.

## Talk back



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

## 6 Lullabies and white noises

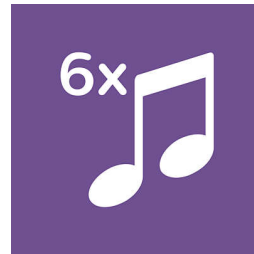

There's nothing like a gentle lullaby to calm a restless baby. From any room in the house you can select one of 6 relaxing tunes to help your baby drift off to sleep in no time.

## Sensitivity control



It allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what level of noise is picked up by the baby unit, e.g. you might want to hear when your baby cries, but you may be less interested in his or her babbling.

# Specifications

## Tuner/Reception/Transmission

Frequency band: 2.4GHz

## Convenience

Power on indication  
Auto out-of-range warning  
Battery low indication  
Battery charging indication  
Volume control  
Sensitivity settings  
Wall mountable

## Power

Power supply: 100-240V/50-60Hz

## Features

Digital Video Technology  
Adjustable viewing angle  
Auto infrared night vision  
Battery and mains operated baby unit: Mains only  
Battery back-up function baby unit: No  
Battery operating time parent unit: Superior up to 12 hours\*\*  
Belt Clip  
Brightness control  
Menu Style: Icons & text  
Digital zoom and pan: Yes, 2x  
Voice activation screen: Yes, VOX mode  
Energy saving Eco mode: Eco mode with link indication

Hand held and rechargeable: Yes, parent unit  
Indoor range up to: 50m  
Linked and in range indication  
Low batt/lost connection alert  
Lullabies: Yes, 4 and 2 white noises  
Outdoor range up to: 300m  
Private and secure: Yes, wireless connection technology  
Talkback function  
Adjustable sound and sensitivity Video LCD  
Screen: 2.8" color, 7.2cm  
Android, IOS, Tablet compatible: No  
Time display  
Audio mode  
USB Type-C

