



Philips 9000 series
4K UHD Android TV -
Bowers & Wilkins Sound

Sound by Bowers & Wilkins
108 cm (43") Ambilight TV
Major HDR formats supported
P5 Perfect Picture Engine



43PUS9235

Superb picture. Superb audio.

4K UHD LED Android TV with Ambilight

Half of what you see is what you hear. This Philips LED TV with built-in Bowers & Wilkins speakers envelops you in a lifelike picture and perfectly tuned audio. Ambilight adds colour to the music, HDR streaming series and films you love.

Beautiful light. Beautiful audio.

- Phillips 4K UHD TV. Vibrant HDR picture.
- Sound by Bowers & Wilkins. Widescreen for your ears.
- The magic of Ambilight. Only from Philips.
- Kvadrat speaker cloth. Muirhead leather-backed remote.

Android TV-content at your command

- Android TV. Simply smart.
- Voice control. Google Assistant built-in. Works with Alexa.
- DTS Play-Fi. Multi-room audio.

Incredible picture. Bowers & Wilkins sound.

- Room-filling sound from integrated 2.1 sound system.
- Dolby Vision and Dolby Atmos. Cinematic vision and sound.
- Philips P5 Engine. Whatever the source, always perfection.
- Sub-woofer, tweeters and mid-range drivers
- Major HDR formats. See more of what the director intended.


PHILIPS

4K UHD Android TV - Bowers & Wilkins Sound

Sound by Bowers & Wilkins 108 cm (43") Ambilight TV, Major HDR formats supported, P5 Perfect Picture Engine


Highlights

Bowers & Wilkins sound

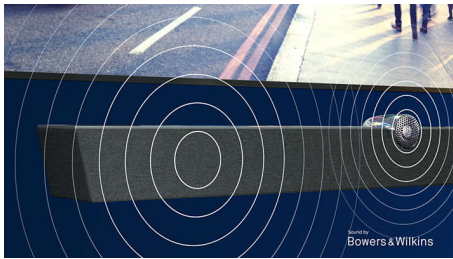


An exclusive speaker design by legendary audio engineers Bowers & Wilkins delivers thrillingly lifelike performance. An integrated sub-woofer, tweeters and full-range drivers produce deep, well-defined bass, pristine dialogue and crystal-clear high frequencies. Even at low volume.

Ambilight 3 sided

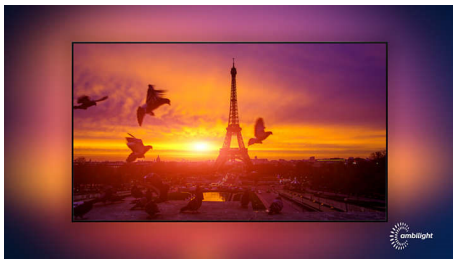

With Philips Ambilight, every moment feels closer. Intelligent LEDs around the edge of the TV respond to the on-screen action and emit an immersive glow that's simply captivating. Experience it once and wonder how you enjoyed TV without it.

P5 Perfect Picture Engine

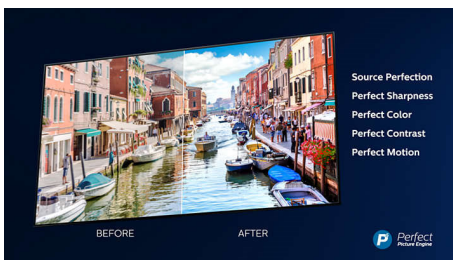

The Philips P5 engine delivers a picture as brilliant as the content you love. Details have noticeably more depth. Colours are vivid,


while skin tones look natural. Contrast is so crisp you'll feel every detail. Motion is perfectly smooth.

4K UHD HDR



Your Philips 4K UHD TV is compatible with all major HDR formats, including HDR10+ and Dolby Vision. Whether it's a must-watch series or the latest video game, shadows will be deeper. Bright surfaces will shine. Colours will be truer.

Dolby Vision and Dolby Atmos

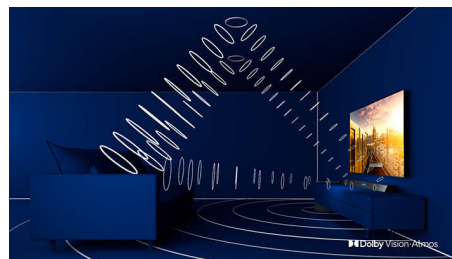

Support for Dolby's premium sound and video formats means the HDR content you watch will look—and sound—gloriously real. Whether it's the latest streaming series or a Blu-Ray disc set, you'll enjoy contrast, brightness and colour that reflect the director's original intentions. And hear spacious sound with clarity, detail and depth.

Design

Premium materials make all the difference to your Philips TV. Kvadrat's acoustically transparent wool-blend speaker fabric allows the sound to flow freely into the room. Responsibly sourced Muirhead leather and backlit keys add a sophisticated finish to the remote control.


43PUS9235/12

Android TV



Your Philips Android TV gives you the content you want—when you want it. You can customise the home screen to display your favourite apps, making it simple to start streaming the movies and shows you love. Or pick up where you left off.

Voice assistant

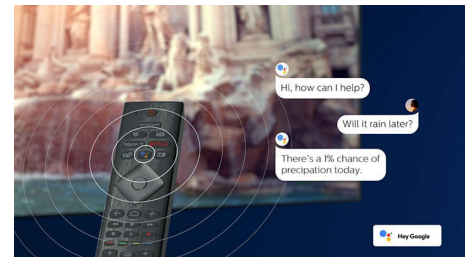

Control your Philips Android TV with your voice. Want to play a game, watch Netflix or find content and apps in the Google Play store? Just tell your TV. You can even command all Google Assistant-compatible smart home devices, like dimming the lights and setting the thermostat on movie night. Without leaving the sofa. The days of searching for the TV remote are over. Now you can use your voice to control your Philips smart TV via Alexa-enabled devices, like Amazon Echo. Turn your TV on, change the channel, switch to your gaming console and more with Alexa.

4K UHD Android TV - Bowers & Wilkins Sound

Sound by Bowers & Wilkins 108 cm (43") Ambilight TV, Major HDR formats supported, P5 Perfect Picture Engine

Specifications

Ambilight

- Ambilight Features: Built-in Ambilight+hue, Ambilight Music, Game Mode, Wall colour adaptive, Lounge mode, AmbiWakeup, AmbiSleep
- Ambilight Version: 3 sided

Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 43 inch
- Diagonal screen size (metric): 108 cm
- Display: 4K Ultra HD LED
- Panel resolution: 3840 x 2160
- Picture engine: P5 Perfect Picture Engine
- Picture enhancement: Wide Colour Gamut 90% DCI/P3, Ultra Resolution, Dolby Vision, HDR10+, 2300 PPI

Supported Display Resolution

- Computer inputs on all HDMI: up to 4K UHD 3840 x 2160 @60 Hz, HDR supported, HDR10/HLG, HDR supported, HDR10+/HLG
- Video inputs on all HDMI: up to 4K UHD 3840 x 2160 @60 Hz, HDR supported, HDR10/HLG (Hybrid Log Gamma), HDR10+/Dolby Vision

Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/T2-HD/C/S/S2
- Video Playback: PAL, SECAM
- MPEG Support: MPEG2, MPEG4
- TV Programme guide*: 8-day Electronic Programme Guide
- Signal strength indication
- Teletext: 1000 page Hypertext
- HEVC support

Android TV

- OS: Android TV™ 9 (Pie)
- Pre-installed apps: Google Play Movies*, Google Play Music*, Google Search, YouTube, Amazon instant video, BBC iPlayer, Netflix
- Memory size (Flash): 16 GB*

Smart TV Features

- User Interaction: SimplyShare
- Interactive TV: HbbTV
- Programme: Pause TV, USB recording*
- Ease of Installation: Auto detect Philips devices, Device connection wizard, Network installation wizard, Settings assistant wizard
- Ease of Use: One-stop smart menu button, On-screen user manual
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade
- Screen Format Adjustments: Basic - Fill Screen, Fit to screen, Advance - Shift, Zoom, stretch, Wide screen
- Remote Control: with Voice, with Key light, with

Muirhead leather

- Voice assistant*: Google Assistant built in, RC with Mic, Works with Alexa

Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1, HEVC (H.265), VP9
- Music Playback Formats: AAC, MP3, WAV, WMA (v2 up to v9.2), WMA-PRO (v9 and v10)
- Subtitles Formats Support: .SRT, .SUB, .TXT, .SMI
- Picture Playback Formats: JPEG, BMP, GIF, PNG, 360 photo, HEIF

Processing

- Processing Power: Quad Core

Sound

- Audio: Sound by Bowers & Wilkins, 2.1 Channel, Output power: 40 watts (RMS)
- Speaker configuration: 2 x 10 W mid-high speaker, 20 W woofer
- Codec: AC-4, Dolby Atmos®, Dolby Digital MS12 V2.3, DTS-HD(M6)
- Sound Enhancement: 5 Band Equalizer, A.I. Sound, Clear Dialogue, Night mode, Dolby Atmos®, Auto Volume Leveller, Bass Enhancement

Connectivity

- Number of HDMI connections: 4
- HDMI features: 4K, Audio Return Channel
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- Number of USBs: 2
- Wireless connection: Bluetooth 4.2, Wi-Fi 802.11ac, 2 x 2, Dual band
- Other connections: Common Interface Plus (CI+), Digital audio out (optical), Satellite Connector, Ethernet-LAN RJ-45, Headphone out, Service connector
- RD-2.3: Yes on all HDMI

EU Energy card

- EPREL registration numbers: 356135
- Diagonal screen size (inch): 43
- Diagonal screen size (metric): 108
- Energy class for SDR: G
- On mode power demand for SDR: 63 kWh/1000h
- Energy class for HDR: G
- On mode power demand for HDR: 123 kWh/1000h
- Off mode power consumption: n.a.
- Networked standby mode: <2.0 W
- Panel technology used: LED LCD

Power

- Mains power: AC 220 - 240 V 50/60 Hz

43PUS9235/12

- Ambient temperature: 5°C to 35°C
- Standby power consumption: <0.3 W
- Power Saving Features: Auto switch-off timer, Light sensor, Picture mute (for radio), Eco mode
- Off mode power consumption: N/A
- Presence of lead: Yes*

Accessories

- Included Accessories: Legal and safety brochure, Power cord, Quick start guide (x 1), Remote Control, 2 x AAA Batteries, Stand with sound solution

Design

- Colours of TV: Metal brushed mid silver bezel
- Stand design: Dark chrome sound solution


Dimensions

- Set Width: 962.2 mm
- Set Height: 564.0 mm
- Set Depth: 41.9 mm
- Product weight: 11.2 kg
- Set width (with stand): 962.2 mm
- Set height (with stand): 647.6 mm
- Set depth (with stand): 232.3 mm
- Product weight (+stand): 14.1 kg
- Box width: 1070.0 mm
- Box height: 759.0 mm
- Box depth: 306.0 mm
- Weight incl. Packaging: 25.6 kg
- Stand width: 440.0 mm
- Stand height: 83.6 mm
- Stand depth: 232.3 mm




Connections

Side

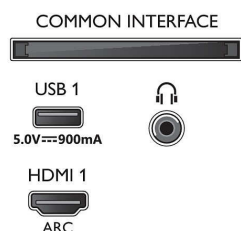

Bottom

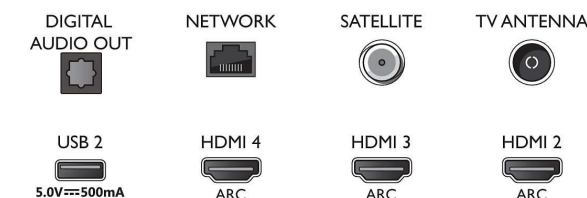

Issue date 2023-07-30

Version: 8.1.1

EAN: 87 18863 02406 5

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* EPG and actual visibility (up to 8 days) is country- and operator-dependent.

* Android App offerings vary per country. For more details please visit your local Google Play Store.

* Energy consumption in kWh per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

* Philips TV Remote app and related functionalities vary per TV model, operator and country, as well as smart device model and OS. For more details please visit: www.philips.com/TVRemoteapp.

* Smart TV app availability varies per TV model and country. For more details please visit: www.philips.com/smartv.

* USB recording for digital channels only, recordings may be limited by broadcast copy protection (CI+). Country and channel restrictions may apply.

* Please note that your Amazon Apps may not always be available in your country. (Currently Amazon apps works only in the UK, Germany and Austria)

* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.

* Cloud Gaming offering depends on game providers.

* *Memory size (Flash): 16 GB (the actual available disk space may differ depending on e.g. (pre-)installed apps, installed operating system etc.)

* HDMI connection is required for soundbar, speaker and other audio device.