



Philips
Flat TV

20"
LCD

20PF4110



Turn up your viewing experience

with Crystal Clear

Here is an LCD TV that not only enhances the decor of your home with its European styling and slim design, but also provides a great audio-visual experience with Crystal Clear and Virtual Dolby Surround.

Superb sound reproduction

- Virtual Dolby Surround for a cinema-like audio experience

Better quality images that reveal more detail

- Enhanced-definition LCD VGA display, 640 x 480p
- Crystal Clear improves picture depth
- Active Control optimises picture quality whatever the source

Stylish design

- Compact design

Multi-purpose convenience

- Smart Picture provides personalised image settings
- Smart Sound optimises audio settings
- 10 page Smart Text for fast access to teletext.
- PC input lets you also use your TV as a PC monitor

PHILIPS

Specifications

Picture/Display

- Aspect ratio: 4:3
- Diagonal screen size (inch): 20 inch
- Diagonal screen size (metric): 51 cm
- Panel resolution: 640 x 480p
- Brightness: 450 cd/m²
- Picture enhancement: Crystal Clear, Progressive scan, Active Control, Sharpness Adjustment, Colour Temperature Adjustment
- Contrast ratio (typical): 350:1
- Display screen type: LCD VGA Active Matrix TFT
- Response time (typical): 25 ms
- Viewing angle (horizontal): 176 degree
- Viewing angle (vertical): 176 degree
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

- Computer formats: 640 x 480, 60, 67, 72, 75 Hz
- Video Formats: 640 x 480i - 1Fh, 640 x 480p - 2Fh, 720 x 576i - 1Fh

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL, PAL B/G, PAL D/K, PAL I, SECAM, SECAM B/G, SECAM D/K, SECAM L/L'
- Number of Pre-set Channels: 100
- Video Playback: NTSC, PAL, SECAM
- Tuner Display: PLL

Convenience

- Ease of Installation: Auto Programme Naming, Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug and Play, Programme Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), Menu Control, On-Screen Display, Programme List, Smart Picture, Smart Sound
- Clock: Sleep Timer
- Screen Format Adjustments: 16:9 compress, 4:3, 4:3 expand

- Remote Control: TV
- Remote control type: RCFE05ZAU00
- Teletext: 10-page Smart Text

Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 5 W
- Sound System: Mono, Nicam Stereo, Virtual Dolby Surround
- Sound Enhancement: Dynamic Bass Enhancement

Connectivity

- Number of Scarts: 1
- Front/Side connections: Audio in, CVBS in, Headphones Out, S-video in
- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Other connections: Antenna IEC75, DVI-D, PC Audio in

Power

- Power supply: AC 90-240
- Ambient temperature: 5°C to 40°C
- Power consumption: 55 W
- Standby power consumption: 1.5 W

Accessories

- Included accessories: Power cord, Quick start guide, Registration card, Remote Control, Tabletop stand, User Manual

Dimensions

- Set Width: 583 mm
- Set Height: 386 mm
- Set Depth: 87 mm
- Product weight: 8.8 kg
- Box width: 659 mm
- Box height: 564 mm
- Box depth: 210 mm
- Weight incl. Packaging: 12.03 kg
- Width (with base): 583 mm
- Height (with base): 433 mm
- Depth (with base): 217 mm
- Set weight: 8.8 kg



Highlights

LCD VGA display, 640 x 480p

This VGA display with state-of-the-art LCD screen technology has an enhanced resolution of 640 x 480p.

Crystal Clear

Combining picture enhancements like Contrast plus and colour improvement, Crystal Clear improves picture depth.

Active Control

Active Control ensures that noise and sharpness improvements are continuously made at a rate of 60 times per second. By continually adjusting the picture setting over 3000 times per minute, Active Control Plus ensures that the viewing experience is optimised.

Virtual Dolby Surround

Virtual Dolby Surround is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic without the necessity of additional rear speakers. You become totally immersed in your television experience.


Compact design

Compact design

PC input

With PC input you can connect your TV to a computer and use the TV as a PC monitor.

Smart Picture

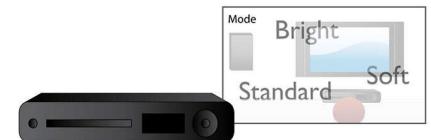

Smart Picture provides the optimum picture settings for colour, brightness, saturation, contrast, sharpness and so on, to enhance your overall viewing experience at all times.

Smart Sound



Smart Sound provides the optimal sound settings for ultra bass, bass, treble and balance so that you can get the best entertainment experience.

10-page Smart Text

Teletext is a common system transmitted by most broadcasters. The 10-page smart text feature gives you fast access to information when changing pages.



Issue date 2023-07-30

Version: 14.0.17

EAN: 87 10895 87559 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com