

Philips Azur Performer
Plus
Steam iron

Steam 45g/min;190g steam boost

SteamGlide Plus soleplate
Auto shut-off + Anti-calc
2400 Watts

GC4517/20



Faster*, Easier and Smarter

More effective calc clean with calc container

The Philips steam iron Azur Performer Plus combines powerful performance with ease of use. The Built-In calc container for effective calc removal for long lasting steam performance, Auto steam control and SteamGlide Plus soleplate .

Comfortable ironing

- Auto Steam Control for the right steam for each garment
- Optimal weight for easier manoeuvrability over your garments
- Triple precision tip for optimal control and visibility
- Electronic shut-off when iron is left unattended

Easy gliding on all fabrics

- SteamGlide Plus soleplate: Our best gliding, faster ironing

Fast and powerful performance

- Steam output of up to 45 g/min for better crease removal
- 2400W for quick iron heat up
- Steam boost up to 190g

Calc solution

- Built-In calc container collects calc during ironing
- Self-Clean for effective calc removal

PHILIPS

Highlights

2400W for quick heat up



With the 2400W the Azur Performer Plus steam iron will heat up quickly and give a powerful performance to deliver super ironing results.

Steam up to 45 g/min



Continuous steam output of up to 45 g/min gives you the perfect amount of steam to efficiently remove all creases.

SteamGlide Plus soleplate



Our best gliding SteamGlide Plus soleplate to whizz through your ironing. The carefully designed vents secure a well balanced steam distribution.

Built-In calc container



Our specially designed and built-in calc container collects calc particles during ironing. The Self Clean process flushes the calc out of the iron to maintain consistent ironing performance day after day.

Self-Clean




In addition to the built-in calc container, the self-clean function of your soleplate will remove the most stubborn calc. A clean soleplate will improve your steam performance and ironing results.

Auto Steam Control



Auto Steam Control takes away your worry for selecting the amount of steam you need. Just select the temperature for the garments you're ironing and off you go.

Triple Precision Tip

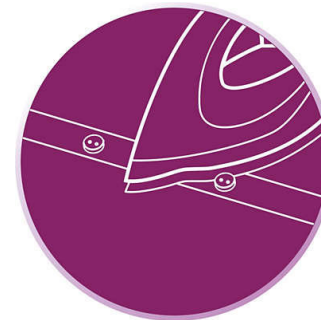

The pointed tip on the Philips Azur Performer is very precise in 3 ways: it has a pointed tip, button groove and a sleek design of the nose. The Triple Precision tip enables you to reach even into the most tricky areas, e.g. around the buttons or between the pleats.

Optimal weight



The iron has the optimal weight to move easily over any garment, making ironing less of a hassle and easy to constantly place the iron on the board and back to its heel rest.

Steam boost up to 190g



Steam boost up to 190g for fast removal of even the most stubborn creases.

Steam iron

Steam 45g/min;190g steam boost SteamGlide Plus soleplate, Auto shut-off + Anti-calc, 2400 Watts

GC4517/20

Specifications

Easy to use

- Water tank capacity: 300 ml
- Soleplate name: SteamGlide Plus
- Drip stop
- Power cord length: 2 m
- Auto shut-off

Fast crease removal

- Power: 2400 W
- Continuous steam: 45 g/min
- Steam boost: 190 g
- Water spray

Scale management

- Descaling and cleaning: Built-in calc container, Self clean

Size and weight

- Packaging dimensions (WxHxL): 34,1*30*36 cm
- Product dimensions (WxHxL): 16*32*14 cm
- Total weight with packaging: 1,75 kg
- Weight of iron + base: 1,52 kg



Issue date 2023-08-19

Version: 1.1.2

EAN: 87 10103 79871 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com