

Philips Cineos
LCD TV

119 cm (47")
integrated digital

47PFL9703D



Be part of the action

Experience superb performance with a breathtaking Full HD, 100Hz display. Combined with the powerful Perfect Pixel engine, Perfect Natural Motion, Perfect Colors and 30 Watt invisible sound, this TV ensures you're part of the action

Easy to connect and enjoy

- DLNA PC network link to browse PC and Home network content
- 4 HDMI inputs with Easylink for a full HD connection
- PC-input allows you to use your TV as a PC monitor

Ready for digital

- Integrated Digital Tuner for DVB-T reception

Perfect LCD Picture

- Perfect Pixel HD Engine for unrivalled sharpness and clarity
- HD ready 1080p for highest quality display of Full HD images
- Perfect Natural Motion for ultra smooth Full HD movies
- Wide Color Gamut LCD display for brilliant colors
- 100Hz Clear LCD, 2ms performance for superb motion sharpness
- 2250 trillion colors processing
- Dynamic contrast 30000:1 for incredible rich black details

PHILIPS

LCD TV
119 cm (47") integrated digital

Highlights

Perfect Pixel HD Engine



Experience unrivalled sharpness and clarity with Perfect Pixel HD Engine. Each pixel of the picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. The result is a unique combination of sharpness, natural detail, vivid colors superior contrast and smooth natural motion whatever you are watching. Clean and razor sharp images result from artifact and noise detection and reduction in all content sources - from multimedia to standard TV.

Full HD LCD display 1920x1080p

Enjoy the exceptional picture quality of Full High Definition TV signals of HD sources like HDTV broadcast, or Blu-ray DVD. HD ready 1080p is a protected label that offers picture quality far beyond that of ordinary HD Ready. It conforms to strict standards laid out by EICTA to offer a Full HD screen that displays the benefits of resolution and picture quality of a Full HD 1920x1080p High Definition TV signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 1080p progressive signals at 24, 50 and 60Hz.

Perfect Natural Motion



Enjoy the action without any judder. Perfect Natural Motion estimates motion in the picture and corrects juddering movements in both broadcast and pre-recorded movie

material (including 1080p movies and 24p True Cinema on Blu-ray and DVD). The result is even smoother and quieter pictures with excellent sharpness. Enjoy motion performance that surpasses cinema quality!

Wide Color Gamut LCD

x.v.Color ensures realistic color reproduction, accurately capturing every tint, hue and depth in order to offer a wide color range that includes almost twice as many colors as sRGB color space. x.v.Color produces color variations very close to what the human eye can recognize – it even enhances/improves the quality of High Definition video material. Televisions compliant with x.v.Color will reproduce images in almost the same quality as when it was recorded.

100Hz Clear LCD (2ms)



100Hz Clear LCD creates extreme motion sharpness. The Double Frame Rate Insertion increases the sharpness of motion reproduction to more than twice that of conventional LCD, resulting in a performance with a response time of 2 milliseconds. Now you can enjoy clear images even with fast on-screen motion.

2250 trillion color processing

Vibrant and natural images from most advanced color processing. The 17 bit color booster optimises each of the 3 color channels (RGB), a total processing power of 2250 trillion colors. It produces more vibrant colors while retaining excellent sharpness. The advanced algorithms detect skin tones and subtle color shades, and processes these to give most natural colors.

Dynamic contrast ratio 30000:1

You want the LCD flat display with the highest contrast and most vibrant images. Philips

47PFL9703D/79

advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. Dynamic Contrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

DLNA PC network link

The PC-Network link provides easy access to personal Photo and Music content on your PC or Home Network. It uses the Ethernet (LAN) connection with DLNA protocol that assures that DLNA certified products will work together seamless. By connecting your TV to your home network you will be able to access information from all DLNA certified devices. Browse your PC collection of digital photographs, and music files via your home LAN network. The intuitive user interface of the TV makes it available at the push of a button

4 HDMI inputs with EasyLink

EasyLink uses the HDMI CEC industry standard protocol to share functionality between connected devices and the TV. With Easylink only one remote control is needed to operate main functionalities on your TV and connected devices. HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI uses HDCP copy protection. With 3 HDMI inputs on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and Game Console or Digital Camcorder.

PC input (VGA)

With PC input you can connect your TV to a computer by a VGA cable and use the TV as a PC monitor.

Specifications

Picture/Display

- Aspect ratio: Widescreen
- Diagonal screen size (inch): 47 inch
- Diagonal screen size (metric): 119 cm
- Color cabinet: Black glass decofront with black backcover
- Panel resolution: 1920x1080p
- Brightness: 500 cd/m²
- Picture enhancement: Perfect Pixel HD Engine, Perfect Natural Motion, Perfect Contrast, Perfect Colors, Wide color gamut display, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, 100Hz Clear LCD, Jagged Line Suppression, Progressive scan, 1080p 24/25/30Hz processing, 1080p 50/60Hz processing

- Display screen type: LCD Full HD W-UXGA Act. matrix
- Dynamic screen contrast: 30000:1
- Response time (typical): 2 (BEW equiv.) ms
- Viewing angle: 176° (H) / 176° (V)
- Screen enhancement: Anti-Reflection coated screen
- Color processing: 2250 trillion colors 17bit RGB

Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1360 x 768, 60Hz, 1920 x 1080i, 60Hz, 1920 x 1080p, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 576i, 50Hz,


576p, 50Hz, 720p, 50, 60Hz, 1080i, 50, 60Hz, 1080p, 24, 50, 60Hz, 1080p, 24, 25, 30Hz

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: DVB COFDM 2K/8K
- Digital TV: DVB Terrestrial *
- Video Playback: NTSC, SECAM, PAL

Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures, MPEG1, MPEG2

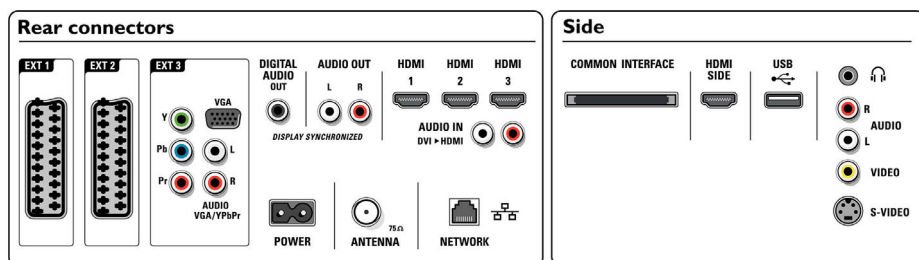

Specifications

Convenience

- Child Protection: Child Lock+Parental Control
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug & Play
- Ease of Use: 4 favorite lists, Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On Screen Display, Program List, Settings assistant Wizard, Side Control
- Screen Format Adjustments: 4:3, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle and Heading Shift, Super Zoom, Widescreen, unscaled (1080p dot by dot)
- Multimedia: Digital media reader (browser), USB autobreak-in
- Electronic Program Guide: Now + Next EPG
- Remote Control: Universal
- Remote control type: RC4492
- Teletext: 1200 page Hypertext
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB
- Picture in Picture: Text dual screen
- Teletext enhancements: Habit Watch, Program information Line
- Smart mode: Game, Movie, Personal, Energy saving, Standard, Vivid

Sound

- Output power (RMS): 2 x 15W
- Sound System: Virtual Dolby Digital, BBE
- Sound Enhancement: Auto Volume Leveler, Digital Signal Processing, Dynamic Bass Enhancement, Graphic Equaliser, Smart Sound

Loudspeakers

- Built-in speakers: 2
- Loudspeaker types: 2 integrated subwoofers, Dome tweeter

Connectivity

- EasyLink (HDMI-CEC): One touch play, System audio control, System standby
- Front / Side connections: HDMI v1.3, S-video in, CVBS in, Audio L/R in, Headphone Out, USB
- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, RGB
- Other connections: Analog audio Left/Right out, S/PDIF out (coaxial), Common Interface
- PC network link: DLNA 1.0 certified
- Ext 3: YPbPr, Audio L/R in, VGA PC-in
- Ext 4: HDMI v1.3
- Ext 5: HDMI v1.3
- Ext 6: HDMI v1.3

Power

- Mains power: AC 220 - 240 V +/- 10%
- Ambient temperature: 5 °C to 35 °C
- Power consumption: 278 W
- Standby power consumption: 0,15 W
- Power (Energy saving mode): 190 W

Accessories

- Included accessories: RF antenna cable, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control

Dimensions

- Set Width: 1170 mm
- Set Height: 736 mm
- Set Depth: 125 mm
- Product weight: 45 kg
- Set height (with stand): 801 mm
- Set depth (with stand): 297 mm
- Product weight (+stand): 50 kg
- Box width: 1274 mm
- Box height: 943 mm
- Box depth: 331 mm
- Weight incl. Packaging: 50 kg
- Stand width: 650 mm
- Wall mount compatible: 400 x 400 mm



Issue date 2023-08-21

Version: 2.0.8

EAN: 87 12581 43551 6

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com