



Philips  
Flat TV

51 cm (20")  
LCD

20PFL4122



## Turn up your viewing experience

with Digital Crystal Clear

Here is a new TV that not only gives you great picture and sound but also modern styling and quality finish. It features Digital Crystal Clear for better quality images that reveal more detail and Incredible Surround™ for superb audio.

### **Vivid, natural and razor sharp images**

- Enhanced-definition LCD VGA display, 640 x 480p
- Digital Crystal Clear provides vivid cinema-like images
- Progressive Scan component video for optimized image quality

### **Slim, stylish design to complement your interior**

- Compact and slim design that fits in every room

### **Designed for your convenience**

- Smart Picture and Smart Sound to personalize your viewing
- 1000 page Hypertext for instant fast access to teletext
- PC input lets you also use your TV as a PC monitor

### **Exciting and lifelike sound**

- Incredible Surround™ for enhanced audio enjoyment

### **For advanced performance**

- DVI-D provides the best digital picture

# PHILIPS

# Highlights


## LCD VGA display, 640 x 480p

This VGA display with state-of-the-art LCD screen technology has an enhanced resolution of 640 x 480p.

## Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimizes picture quality to optimal contrast, color and sharpness levels. It's like watching vivid cinema-like images.

## Progressive Scan

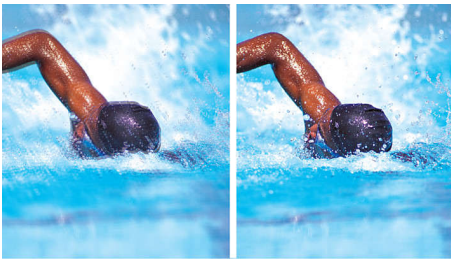

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first,

followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## Incredible Surround™

Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

## Compact and slim design

This design style emphasizes a slim, compact look that saves space and fits in anywhere.

## Smart Picture and Smart Sound

Philips preset modes for Smart Picture and Smart Sound provide you with direct access via a single key on the remote control. You can select optimized picture and sound settings for the various picture and sound modes.

## 1000 page Hypertext

The teletext is a common system transmitted by most broadcasters. The 1000 page smart text feature gives you extremely fast access to information when changing pages.

## DVI-D input

A DVI-D input makes an uncompressed digital RGB connection from source to screen. By eliminating the conversion of the digital signal to analog, it delivers an unblemished image. Thanks to the non-degraded signal, you get less flicker and a clearer picture. The DVI input is fully backward compatible with HDMI sources, and also uses HDCP copy protection.

## PC input

With PC input you can connect your TV to a computer and use the TV as a PC monitor.

# Specifications

## Picture/Display

- Aspect ratio: 4:3
- Diagonal screen size (inch): 20 inch
- Diagonal screen size (metric): 51 cm
- Color cabinet: Silver, high gloss black
- Panel resolution: 640 x 480p
- Brightness: 400 cd/m<sup>2</sup>
- Contrast ratio (typical): 500:1
- Picture enhancement: Digital Crystal Clear, 2D Combfilter, Blue stretch, Green enhancement, Color Temperature Adjustment, Progressive scan, Sharpness Adjustment, Automatic skin tone correction
- Display screen type: LCD VGA Active Matrix TFT
- Response time (typical): 8 ms
- Viewing angle (horizontal): 170 degree
- Viewing angle (vertical): 170 degree
- Screen enhancement: Anti-Reflection coated screen

## Supported Display Resolution

- Computer formats: 640 x 480, 60, 67, 72, 75Hz
- Video Formats: 640 x 480i - 1Fh, 640 x 480p - 2Fh, 720 x 576i - 1Fh, 720 x 576p - 2Fh, 1280 x 720p - 3Fh, 1920 x 1080i - 2Fh, 1920 x 1080p -

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL I, PAL B/G, SECAM B/G, SECAM D/K
- Video Playback: NTSC, PAL
- Tuner Display: PLL

## Convenience

- Child Protection: Child Lock+Parental Control
- Ease of Installation: Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Sorting
- Ease of Use: Auto Volume Leveller (AVL), On Screen Display, Program List, Smart Picture, Smart Sound, Top Controls
- Clock: Sleep Timer
- Screen Format Adjustments: 16:9 compress, 4:3, 4:3 expand, 4:3 HD
- Remote Control: TV

- Remote control type: RC2023611/01B
- Teletext: 1000 page Smart Text
- Teletext enhancements: Program information Line

## Sound

- Output power (RMS): 2 x 3W
- Sound System: Mono, Nicam Stereo, Stereo
- Sound Enhancement: Incredible Surround

## Loudspeakers

- Built-in speakers: 2

## Connectivity

- AV 1: Audio L/R in, YPbPr
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in
- Other connections: DVI-D, PC Audio in, PC-In VGA

## Power


- Mains power: 100-240V, 60-50 Hz
- Ambient temperature: 5 °C to 40 °C
- Power consumption: 70 W
- Standby power consumption: <math>\leq 2</math> W

## Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Warranty certificate, Remote Control, Batteries for remote control

## Dimensions

- Set Width: 497 mm
- Set Height: 428 mm
- Set Depth: 80 mm
- Product weight: 7.5 kg
- Set width (with stand): 497 mm
- Set height (with stand): 472 mm
- Set depth (with stand): 218 mm
- Product weight (+stand): 8.55 kg
- Box width: 548 mm
- Box height: 566 mm
- Box depth: 222 mm
- Weight incl. Packaging: 10.4 kg
- Wall mount compatible: 100 x 100 mm

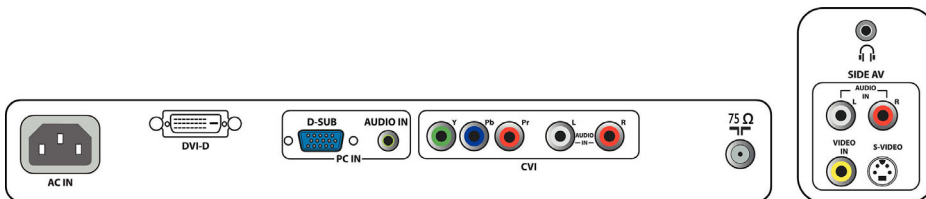

Issue date 2023-08-21

Version: 2.1.16

EAN: 87 12581 31811 6

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)