

Philips Cineos
Flat TV

107cm (42")
LCD
HD Ready

42PFL9532



Turn up your viewing experience

with Perfect Pixel HD and Ambilight

Enjoy the ultimate viewing experience of this Philips Cineos Flat TV with Perfect Pixel HD Engine, Ambilight 2 Channel, a Full HD Display and 100 Hz Clear LCD technology. The USB connector gives you full access to multimedia content.

True beauty lies in the details

- Matching design swivel stand included

Immersive viewing experience

- Full HD LCD display, with a 1920x1080p resolution
- HD Ready for the highest quality display of HD signals
- Perfect Pixel HD Engine for unrivalled sharpness and clarity
- 100Hz Clear LCD for superb motion sharpness (3ms)
- 2-channel active Ambilight enhances the viewing experience
- HD Natural Motion for ultra smooth motion in Full HD movies

For advanced performance

- 3 HDMI inputs for full digital HD connection in one cable

Perfect picture quality from your digital photos

- USB Connector for easy, instant multimedia playing

PHILIPS

Flat TV
107cm (42") LCD, HD Ready

Highlights

Full HD LCD display 1920x1080p




The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

HD Ready



Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV settop box or Blu-ray disc. HD Ready is a protected label that offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer a HD screen that displays the benefits of resolution and picture quality of a High Definition signal. It has a universal connection for both analog YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60Hz.

Perfect Pixel HD Engine

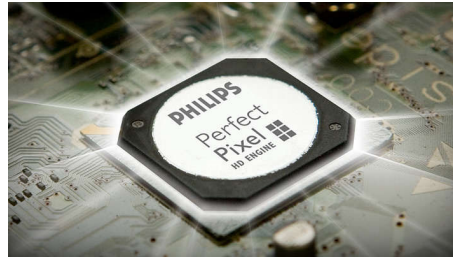

Experience unrivalled sharpness and clarity with Perfect Pixel HD Engine. Each pixel of the picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. The result is a unique combination of sharpness, natural detail, vivid colors superior contrast and smooth natural motion whatever you are watching. Clean and razor sharp images result from artifact and noise detection and reduction in all content sources - from multimedia to standard TV.

100Hz Clear LCD



100Hz Clear LCD creates extreme motion sharpness for clear and vibrant images even with fast on-screen motion. The Double Frame Rate Insertion works with a high 100Hz refresh rate. It increases the sharpness of motion reproduction to more than twice that of conventional LCD, resulting in a response time of 3 milliseconds (measured in Perceived Blur-Edge-Width; BEW). This unique Philips technology brings motion sharpness of LCD displays to an unprecedented level.

42PFL9532/98

Ambilight 2 channel



Ambilight makes an impressive contribution to the overall viewing experience by producing the ambient light to complement the colors and light intensity of the on-screen image. It adds a new dimension to the viewing experience, completely immersing you into the content you are watching. It creates ambiance, stimulates more relaxed viewing, and improves perceived picture detail, contrast and color. Ambilight automatically and independently adapts its colors according to the changing content on the screen.

HD Natural Motion



Philips invented HD Natural Motion to minimize juddering effects that are visible with movie based picture content. The award winning algorithm estimates motion in the picture and corrects juddering movements in both broadcast and recorded movie material (such as DVD and Blu-ray Disc). The resulting smooth motion reproduction and excellent sharpness take the viewing experience to a higher level.

Bypacked swivel stand

For maximum freedom of placement, this high-quality stand is designed specifically for this TV, and allows easy placement of your Flat TV without drilling holes in the wall. Enjoy the best viewing angle with the convenience of the 40 degrees of swivel (20 degrees each side). Invisible cable management is included in the back. This stand fits seamlessly on the matching accessory floorstand.

Specifications

- Viewing angle: 176° (H) / 176° (V)
- Screen enhancement: Anti-Reflection coated screen
- Color processing: 4 trillion colors (14bit RGB)

Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1360 x 768, 60Hz, 1920 x 1080i, 60Hz, 1920 x 1080p, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz, 1080i, 50, 60Hz, 1080p, 24, 25, 30Hz, 1080p, 24, 50, 60Hz

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL I, PAL B/G, SECAM B/G, SECAM D/K
- Video Playback: NTSC, SECAM, PAL

Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures

Convenience

- Child Protection: Child Lock+Parental Control
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, PLL Digital Tuning, Plug & Play
- Ease of Use: 4 favorite lists, Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On Screen Display, Program List, Settings assistant Wizard, Side Control
- Clock: Smart Clock
- Screen Format Adjustments: unscaled (1080p dot by dot), 4:3, 6 Widescreen Modes, Auto Format, Movie expand 14:9, Movie expand 16:9, Subtitle and Heading Shift, Super Zoom, Widescreen
- Multimedia: Digital media reader (browser), USB autobreak-in
- Remote Control: TV
- Remote control type: RC4450
- Teletext: 1200 page Hypertext
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB
- Picture in Picture: Text dual screen
- Teletext enhancements: Habit Watch, Program

information Line

Sound

- Output power (RMS): 2x8W
- Sound System: Virtual Dolby Digital, BBE
- Sound Enhancement: Digital Signal Processing, Graphic Equaliser, Dynamic Bass Enhancement

Loudspeakers

- Built-in speakers: 2
- Loudspeaker types: Front Speakers, Dome tweeter

Connectivity

- AV 1: (1, 2, 3Fh autoranging), Audio L/R in, CVBS in, S-Video, YPbPr
- AV 2: Audio L/R in, CVBS
- AV 3: (1, 2, 3Fh autoranging), Audio L/R in, YPbPr
- AV 4: HDMI, Audio L/R in
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in, USB
- AV 5: HDMI
- AV 6: HDMI
- Other connections: Analog audio Left/Right out, S/PDIF out (coaxial)

Power

- Mains power: AC 220 - 240 V +/- 10%
- Ambient temperature: 5 °C to 35 °C
- Power consumption: 232 W
- Standby power consumption: 0.8 W

Accessories

- Included accessories: Tabletop swivel stand, Wall mounting bracket, RF antenna cable

Dimensions

- Set Width: 1046 mm
- Set Height: 686 mm
- Set Depth: 116 mm
- Product weight: 26.1 kg
- Set height (with stand): 749 mm
- Set depth (with stand): 265 mm
- Product weight (+stand): 33 kg
- Box width: 1166 mm
- Box height: 800 mm
- Box depth: 277 mm
- Weight incl. Packaging: 39.1 kg
- Wall mount compatible: 600 x 400 mm



Issue date 2023-08-21

Version: 7.0.13

EAN: 87 12581 30075 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com