



Philips 7400 series  
Pressurised steam  
generator

Ergonomic

GC7423/02

## Fast and powerful ironing

Two minute quick start, refill any time

Created to speed up ironing from start to finish, the 7400 series is ready to use in 2 minutes. Pressurised steam power speeds up ironing by penetrating deeper into fabric and the large water-filling inlet allows fast and easy refills anytime

### Fast and powerful ironing

- Continuous steam up to 120 g/min
- Up to 4.5 bars of steam pressure for fast ironing
- Vertical steam for crease removal in hanging fabrics
- 150 g steam boost to remove stubborn creases easily

### Easy to use

- Start quickly: less than 2 minutes start-up time
- Refill the water tank at any time, even during ironing
- Permanent anti-calc tablets inside delay scale build up

### Comfortable ironing

- SteamGlide soleplate is Philips premium soleplate
- Lightweight iron for effortless ironing
- Heat-resistant mat: to safely place your hot iron on
- Ergonomic and lightweight 1.2 kg iron

**PHILIPS**

# Highlights

## Up to 4.5 bar



Double your ironing speed with pressurised steam. Pressurised steam penetrates deep into fabrics, making your ironing fast and easy, even on difficult fabrics.

## Steam boost up to 150 g




The iron's 150 g steam boost enables you to easily remove even the most stubborn creases.

## Continuous steam



The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.

## Ergonomic iron

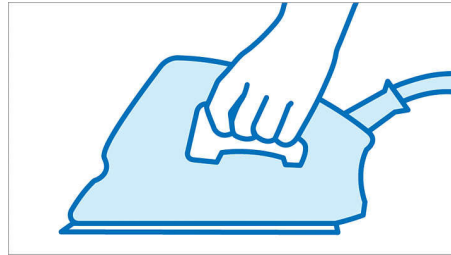

The ergonomic design of the iron facilitates comfortable ironing by putting less strain on the wrist. The upwardly sloping handle ensures a natural position reducing strain during ironing. The iron design also prevents the repetitive movements caused by placing an iron on its heel. The iron is light (1.2 kg) for an easy and comfortable ironing experience.

## Lightweight


The iron is only 1.2 kg making ironing easy and effortless.

## SteamGlide soleplate



The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.


## Iron resting mat

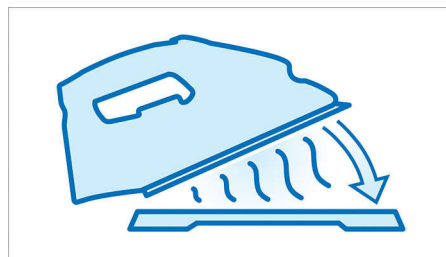

To improve comfort during ironing you can place the iron anywhere with the heat resistant


iron resting mat. As you do not need to put the iron on its heel during intervals, you decrease the straining of your wrist. The resting mat is highly heat resistant, even when a soleplate heated to 250 °C is placed on it.

## Anti-calc Tablets

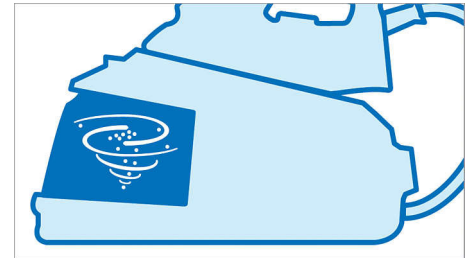

Permanent anti-calc tablets delay the formation of scale build up ensuring better protection for your system iron

## Quick start: < 2 minutes

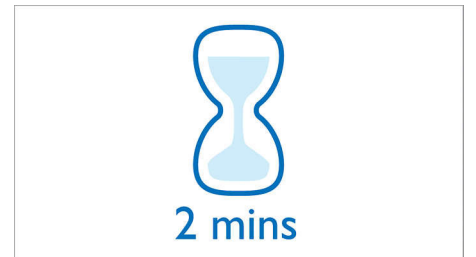

This system iron is ready to use in less than 2 minutes.

## Refill the water tank any time



The separate water tank allows you to re-fill the water tank any time, even during ironing, without waiting.



# Specifications

## Calc management

- Calc clean solution: Anti-calc tablets and rinsing
- Suitable for tap water

## Technical specifications

- Weight of iron + base: 4.5 kg
- Product dimensions: 42.9 x 40 x 20.6 cm
- Voltage: 220 - 240 V
- Weight of iron: 1.2 kg

## Easy to use

- Water tank capacity: 1000 ml
- Refill any time
- Filling and emptying water: Extra-large filling hole
- Heat-up time: 2 min

- Cord freedom (swivel): 180 degree cord freedom
- Power cord length: 1.8 m
- Hose length: 1.7 m
- Hose storage: Hose clip

## Fast and powerful crease removal

- Soleplate: SteamGlide
- Continuous steam output: 120 g/min
- Power: 2400 W
- Steam output
- Pressure: Up to 4.5
- Steam boost: 150 g
- Vertical steaming
- Steam tip



Issue date 2023-08-22

Version: 1.0.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)