

Philips  
digital widescreen flat TV

66 cm (26")  
LCD  
integrated digital

26PF5520D



## Turn up your viewing experience

with Integrated Digital tuner

With this TV enjoy the benefits of digital TV, 8 day Electronic Programme Guide and digital quality content. Also watch superb pictures with Digital Crystal Clear and Active Control.

### **Vivid, natural and razor sharp images**

- HD LCD WXGA display, with a 1366 x 768p resolution
- Integrated Digital Tuner for DVB-T reception
- HD Ready for the highest quality display of HD signals
- Digital Crystal Clear provides vivid cinema-like images
- Built-in Pulse Killer Chip neutralises interferences

### **Leading interface for digital quality audio/video**

- DVI-I provides the best picture and flexible connectivity

### **Superb sound reproduction**

- Virtual Dolby Surround for a cinema-like audio experience

### **Slim, stylish design to complement your interior**

- Compact and slim design that fits in every room

### **Multi-purpose convenience**

- Watch analogue TV while recording a digital programme

# PHILIPS

digital widescreen flat TV  
66 cm (26") LCD, integrated digital

26PF5520D/10

# Highlights

## LCD WXGA display, 1366 x 768p

This WXGA display with state-of-the-art LCD screen technology gives you widescreen HD resolution of 1366 x 768p pixels. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colours. This vibrant and sharp image will provide you with an enhanced viewing experience.

## Integrated Digital DVB-T tuner

The integrated Digital DVB-T tuner lets you receive digital terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

## HD Ready



Enjoy the exceptional picture quality of High Definition pictures and be fully prepared for HD sources like HDTV set-top boxes and Blu-ray discs. HD Ready is a protected label that

offers picture quality beyond that of progressive scan. It conforms to strict standards laid out by EICTA to offer an HD screen that displays the benefits of the resolution and picture quality of a High Definition signal. It has a universal connection for both analogue YPbPr and uncompressed Digital connection of DVI or HDMI, supporting HDCP. It can display 720p, and 1080i signals at 50 and 60 Hz.

## Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimises picture quality to optimal contrast, colour and sharpness levels. It's like watching vivid cinema-like images.

## Pulse Killer Chip

Electrical interferences are neutralised by a built in chip called PKC

## Virtual Dolby Surround

Virtual Dolby Surround is a processing technology for enhancing surround sound effects. It will create the sensation of Dolby Pro Logic without the necessity of additional rear speakers. You become totally immersed in your television experience.

## Compact and slim design

This design style emphasises a slim, compact look that saves space and fits in anywhere.

## Watch analogue, record digital

Watch analogue TV while recording a digital programme

## PC input

With PC input you can connect your TV to a computer and use the TV as a PC monitor.

## DVI-I Input

A DVI-I input connects the non-compressed high-bandwidth digital RGB signal from source to screen. By eliminating the conversion of the digital signals to analogue, it delivers an unblemished and noise-free image that is clear and flicker-free. The DVI input supports HDCP copy protection that allows viewing of copy protected programmes from Digital Set-top boxes, DVD players and HD recorders. DVI-I is future proof as it can be connected to all HDMI devices (a converter cable is required). The DVI-I input also supports analogue PC-VGA signals.

# Specifications

## Picture/Display

- Aspect ratio: Widescreen, 16:9
- Diagonal screen size (inch): 26 inch
- Diagonal screen size (metric): 66 cm
- Colour cabinet: Silver Frost
- Panel resolution: 1366 x 768p
- Brightness: 450 cd/m<sup>2</sup>
- Picture enhancement: Digital Crystal Clear, Progressive scan, 3D Combfilter, 3/2 - 2/2 motion pull down, Digital Noise Reduction, Jagged Line Suppression, Sharpness Adjustment, Pulse Killer Chip, Active Control + Light sensor, Contrast Plus
- Contrast ratio (typical): 600:1
- Display screen type: LCD WXGA Active Matrix TFT
- Response time (typical): 16 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Screen enhancement: Anti-Reflection coated screen

## Supported Display Resolution

- Computer formats: 640 x 480, 60, 67, 72, 75 Hz, 1024 x 768, 60, 70, 75 Hz, 800 x 600, 56, 60, 72, 75 Hz
- Video Formats: 640 x 480i - 1Fh, 640 x 480p - 2Fh, 720 x 576i - 1Fh, 720 x 576p - 2Fh, 1280 x 720p - 3Fh, 1920 x 1080i - 2Fh

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL, SECAM
- Digital TV: DVB Terrestrial\*
- Number of Pre-set Channels: 100
- Video Playback: NTSC, PAL, SECAM
- Tuner Display: PLL

## Convenience

- Ease of Installation: Auto Programme Naming, Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug and Play, Programme Name, Sorting
- Ease of Use: Auto Volume Leveller (AVL), Easy toggle Dig/Analogue modes, Graphical User Interface, Programme List, Smart Picture, Smart Sound, Watch analogue/record digital
- Clock: Sleep Timer

- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Remote Control: Amp, DVD, Multi-functional, TV
- Remote control type: RCFE05SLS05
- User Interface: 7-day Electronic programme Guide
- Teletext: 10-page Smart Text
- VESA Mount: 100 x 100 mm
- Picture in Picture: Picture in graphics, Twin page text
- Teletext enhancements: Programme information Line

## Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 5 W
- Sound System: Virtual Dolby Surround, Stereo
- Sound Enhancement: Dynamic Bass Enhancement

## Connectivity

- Audio Output - Digital: AC3 over S/PDIF (Optical)
- Number of Scarts: 2
- AV 3: Audio-in mini jack 3.5 mm, DVI-I with HDCP
- Front/Side connections: Audio in, CVBS in, Headphones Out, S-video in
- Ext 1 Scart: Audio L/R, CVBS in/out, RGB
- Ext 2 Scart: Audio L/R, CVBS in/out, S-video in
- Other connections: Antenna IEC75, DVI-I, Common Interface

## Power


- Power supply: AC 90-240
- Ambient temperature: 5°C to 45°C
- Power consumption: 110w Normal W
- Standby power consumption: <math>\leq 1</math> W

## Accessories

- Cables: DVI-I to YPbPr cable
- Included accessories: Power cord, Quick start guide, Registration card, Remote Control, User Manual, Batteries for remote control, Tabletop stand

## Dimensions

- Set Width: 804.5 mm
- Set Height: 436 mm
- Set Depth: 114 mm
- Product weight: 16 kg
- Box width: 876 mm

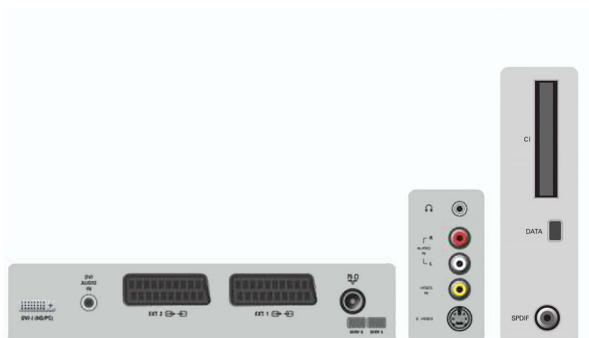

Issue date 2023-08-22

Version: 13.0.17

EAN: 87 10895 87564 6

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)