



Philips PerfectCare Expert
Steam generator iron

Max 6.5-bar pressure

Up to 340 g steam boost
Carry lock
1.5 l detachable water tank

GC9241/02

Ultra fast ironing

with no temperature adjustment required

Iron any ironable garment from silk, to linen, to cotton, to cashmere...in any order, without having to adjust. Your Philips PerfectCare iron delivers fast results without risk of burn or shine for all your garments. Truly simple ironing.

Fast and powerful ironing

- Ready to use in 2 minutes with unlimited refill
- Descale your appliance effectively and easily to prolong its lifespan
- New SteamGlide soleplate is Philips premium soleplate
- Automatically turned off for safety and energy saving
- 1.5 L detachable water tank, up to 2 hours of ironing
- Lock your iron securely to the base station
- Up to 6.5 bar pressure
- Steam boost of up to 340 g


Carefree ironing, no temperature setting required

- Iron everything from jeans to silk with no temperature setting required
- Safe to leave the hot soleplate on the ironing board

PHILIPS

Highlights

Steam ready in 2 minutes

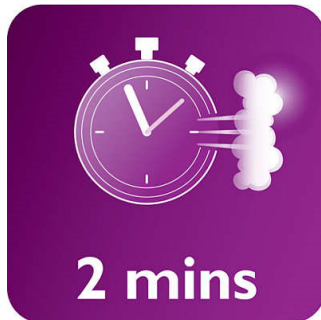

Steam is ready to use in 2 minutes and can be refilled at any time during ironing.

Up to 6.5 bar pressure



The more steam, the faster the ironing. Consistent powerful steam is generated which penetrates deep inside the garments making ironing both faster and better. Steam power can be regulated to suit your needs.

Easy De-calc



Ultra-long-lasting steam performance: Philips' exclusive Easy De-Calc function provides the ideal way to get rid of limescale and extend the lifetime of your steam generator iron. Your iron will remind you to de-calc with light and sound. When your appliance is cold, simply


open the Easy De-Calc knob and collect the dirty water and limescale in a cup.

New SteamGlide soleplate



The new SteamGlide soleplate is the best Philips soleplate. Is extremely scratch resistant, glides excellently and is easy to clean.

Automatic shut-off

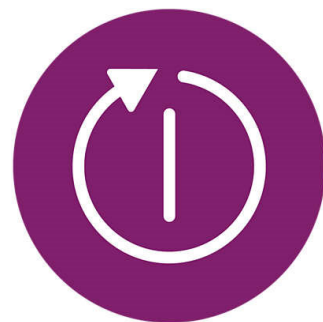

The safety auto off function automatically switches off the appliance if it has not been used for a few minutes, also saving energy.

1.5 L detachable water tank



The water tank can be removed to be refilled easily under the tap. The large filling hole makes refilling fast. Thanks to the 1.5 L water tank capacity, you can iron up to 2 hours continuously without any refills.

OptimalTEMP technology



Now you can iron everything from jeans to silk with no temperature setting required. Guaranteed no burn on all ironable fabrics. Revolutionary technology with both the Advanced Smart Control Processor, which precisely controls the soleplate temperature so that you don't need to, and the powerful cyclonic steam chamber, which delivers consistent, powerful steam, making ironing easier and faster.

Safe rest



The innovative Philips OptimalTEMP technology guarantees no burns on all ironable fabrics. During ironing, there is no need to put your iron back on the base station; just leave the hot iron soleplate directly on the garments or cotton ironing board cover without an additional resting accessory. It will not damage any of your ironable garments, or the board. This makes your ironing easier, with less wrist effort.

Specifications

Calc management

- Calc clean solution: Easy De-calc
- Suitable for tap water
- Calc clean reminder

Technical specifications

- Weight of iron + base: 5 kg
- Weight of iron: 1.2 kg
- Product dimensions: 28.3 x 26.3 x 42.4 cm
- Packaging dimensions: 30.5 x 33.5 x 49.1 cm

Easy to use

- Refill any time
- Water tank capacity: 1500 ml
- Heat-up time: 2 min
- Filling and emptying water: Detachable water tank, Extra-large filling hole
- Safe for all fabrics: Even for delicates such as silks

- Safety auto off
- Storage solution: Carry lock
- Cord freedom (swivel): 180 degree cord freedom
- Cord storage: Cord storage compartment
- Power cord length: 1.8 m
- Hose length: 1.7 m
- Hose storage: Hose storage compartment

Fast and powerful crease removal

- Soleplate: SteamGlide
- OptimalTEMP technology
- Power: 2400 W
- Safe rest
- Pressure: Up to 6.5
- Steam boost: 340 g
- Vertical steaming
- Steam output control
- Steam tip



Issue date 2023-08-22

Version: 1.0.2

EAN: 87 10103 63159 0

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com