



Saeco Odea
Super-automatic
espresso machine

- Classic Milk Frother
- Silver

RI9755/21

Espresso in a trendy and functional design

Odea standard line

Odea standard line

Authentic Italian coffee perfection

- Delicious milk froth thanks to the classic milk frother
- Coffee without the wait thanks to the quick-heat boiler
- Every bean ground perfectly with our metal grinders

Easy to clean and maintain

- Always a clean machine thanks to automatic circuit cleaning
- Easy cleaning thanks to removable brewing group

Set the beverages to suit your taste

- Save your favourite coffee length and strength

Set the beverages to suit your taste

- Play with the coffee's richness with our adjustable grinders

 **Saeco**



Highlights

Automatic circuit cleaning



Saeco designed this espresso machine to automatically clean its coffee circuit with water when the machine is started up or switched off. This delivers a great, fresh taste with each cup of coffee.

Quick-heat boiler



The Saeco quick-heat boiler technology ensures your machine is always ready. Now you won't have to wait between brewing each espresso, but can prepare coffee after coffee.

Classic milk frother



This Saeco espresso machine comes with the classic milk frother, which baristas call

"Pannarello". It dispenses steam and needs to be immersed in the milk to prepare gorgeous milk foam. Unleash your inner barista by preparing your delicious milk specialities the traditional way!

Metal grinders



Our metal grinders always guarantee impeccable grinding.

Saves coffee length and strength




You will always get a perfect cup of espresso brewed according to your personal preference thanks to our memo function, which allows you to adjust the coffee length and strength to suit your taste. Enjoy a superb coffee drink in your favourite cup at the touch of a button.

5-step adjustable grinders



Different coffee blends require different levels of granularity for the full flavour to unfold. The grind granularity of this espresso machine can be adjusted in 5 settings, from the finest grind, for a full-bodied espresso, to the coarsest, for a lighter café crème.

Removable brewing group

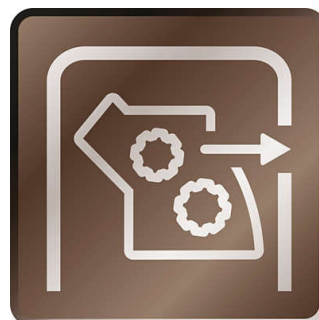

The brewing group, a Saeco invention, is the heart of our espresso machines, ensuring automation. The brewing group is, depending on the model, easily accessible from the front or side. It can be removed effortlessly for easy cleaning by rinsing under the tap, ensuring maximum hygiene.

Specifications

Weight and dimensions

- Product dimensions (L x D x H): 292 x 381 x 368 mm
- Product weight: 8.5 kg
- Coffee bean capacity: 180 g
- Waste container capacity: 14 serv
- Water tank capacity: 1.5 L

Technical specifications

- Cord length: 80 cm
- Boiler material: Stainless steel (Inox)
- Voltage: 230 V
- Supported coffee types: Whole coffee beans
- Power: 1400 W
- Country of origin: Designed in Italy, Made in Europe
- Frequency: 50 Hz

- Water pressure in pump: 15 bar (perfect espresso)
- Number of water boilers: 1 boiler
- Removable brewing group

Perfect Espresso

- Espresso technology: Saeco adapting system, Aroma-system: pre-brewing

Service

- 2-year worldwide guarantee

Technical data

- Power: 1400 W
- Voltage: 230 V
- Pump Pressure: 15 bar
- Frequency: 50 Hz