



Philips PowerLife
Steam iron

2400 W

40 g/min continuous steam
150 g steam boost
SteamGlide soleplate



GC2996/26

Built to perform, day after day

4 x longer life with SteamGlide soleplate*

For great results day after day, you want a steam iron that never lets you down. With its anti-scratch SteamGlide soleplate, consistent high steam output and integrated calc-clean, this high-quality iron gives you performance that lasts.

Comfortable ironing

- Automatic shut-off when iron is left unattended
- Comfortable, textured handle for easy grip
- Drip stop keeps garments spotless while ironing

Fast and powerful crease removal

- 2400 W to heat up quickly
- Steam output up to 40 g/min for strong, steady performance
- Up to 150 g steam boost blasts stubborn creases
- Vertical steaming for hanging fabrics

Long-lasting performance

- Built-in calc-clean slider, long-lasting steam performance
- Tested cord for maximum durability and safety
- Scratch-resistant SteamGlide soleplate provides good gliding

PHILIPS

Highlights

2400 W to heat up quickly



Delivers a fast warm-up and powerful performance.

Steam boost up to 150 g




Penetrates deeper into fabrics to easily remove stubborn creases.

Continuous steam up to 40 g/min



Strong and consistent steam output to remove creases faster.

Vertical steam

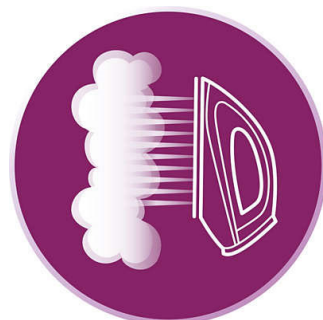

The vertical steam function lets you refresh garments right on the hanger and remove creases from curtains as they hang. No ironing board required.

SteamGlide soleplate



Our special SteamGlide soleplate smoothly glides over any fabric. It's also non stick, scratch resistant and easy to clean.

Built-in calc-clean slider




This iron operates with ordinary tap water. Calc-clean is a built-in cleaning function to remove calcium build-up, or lime scale, and maintain peak performance.

Quality-tested cord



All our steam iron cables are rigorously tested for maximum safety and durability.

Automatic shut-off

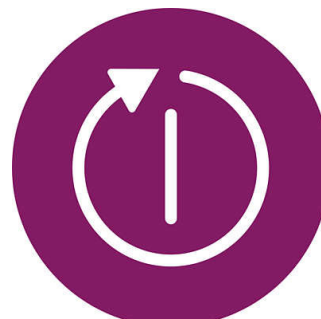

The iron shuts itself off if you leave it standing still. On its heel rest, it will automatically switch off in 8 minutes. Lying flat, it shuts down after 30 motionless seconds.

No more messy dripping



Our Drip Stop system lets you iron delicate fabrics at low temperatures with confidence. There's no need to worry about water droplets causing stains.

Specifications

Easy to use

- Water tank capacity: 320 ml
- Safety auto off
- Soleplate name: SteamGlide
- Tap water suitable
- Drip Stop
- Extra-stable heel rest
- Extra-large filling hole

Guarantee

- 2 year worldwide guarantee

Fast crease removal

- Power: 2400 W
- Continuous steam: 40 g/min

- Steam boost: 150 g
- Water spray

Green efficiency

- User manual: 100% recycled paper

Scale management

- Descaling and cleaning: Built-in Calc-Clean Slider

Size and weight

- Packaging dimensions (W x H x D): 33.2 x 16.7 x 13.7 cm
- Weight of iron: 1.255 kg
- Product dimensions (W x H x D): 31.2 x 14.7 x 12.7 cm



Issue date 2023-08-22

Version: 1.0.1

EAN: 87 10103 83662 9

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Tested vs. Philips non-stick soleplate