



Philips PowerLife
Steam iron

2200 W

35 g/min steam
110 g steam boost

GC2965/02

Built for powerful ironing

Iron with electronic safety shut-off

For great results day after day, you want an iron that never lets you down. With its new SteamGlide soleplate, constant high steam output and Calc buster pill, this practical Philips Steam iron gives you value for money that lasts!

Powerful performance

- Powerful steam for fast ironing

Comfortable ironing

- Vertical steam for crease removal in hanging fabrics
- Cord freedom with the 360-degree swivel solution

Easy gliding on all fabrics

- SteamGlide soleplate is Philips premium soleplate

Safe ironing

- 3 types of automatic shut-off

Easily removes creases

- Continuous steam output up to 35 g/min
- 110-g steam boost to remove stubborn creases easily

PHILIPS

Highlights

2200 Watt

2200 W
max

This powerful iron heats up quickly and maintains very stable temperatures during ironing, making it easier to remove creases properly.

Steam output up to 35 g/min




Continuous steam output of up to 35 g/min gives you the perfect amount of steam to efficiently remove all creases.

Steam boost up to 110 g



The iron's 110 g steam boost enables you to easily remove even the most stubborn creases.

Vertical steam

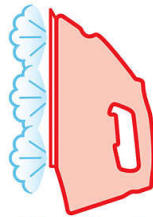

Vertical
shot of steam

This Philips iron has a vertical steam function, for crease removal in hanging fabrics.

SteamGlide soleplate



The SteamGlide soleplate is the best Philips soleplate for your steam iron. It has great scratch resistance, glides excellently and is easy to clean.

Cord freedom

Cord freedom with the 360-degree swivel solution

Automatic shut-off

Safety
auto
off

Iron shuts off automatically when the iron is held still for 30s on its soleplate, lying on its side for 30s or standing on its heel rest for 8 minutes.

Specifications

Calc management

- Calc clean solution: Double active calc clean
- Suitable for tap water

Technical specifications

- Voltage: 220-240 V
- Power Global: 2200 W

Weight and dimensions

- Product weight: 1.2 kg
- Product dimensions: 29.5 x 11.6 x 19.5

Easy to use

- Water tank capacity: 300 ml
- Safety auto off
- Drip-stop
- Cord freedom (swivel): 360 degree cord freedom
- Extra stability: Rubber bumper
- Power cord length: 2 m

Crease removal

- Continuous steam: Up to 35 gr/min
- Steam Boost: Up to 110 gr/min

Fast and powerful crease removal

- Soleplate: SteamGlide
- Spray
- Vertical steaming
- Variable steam settings



Issue date 2023-08-22

Version: 1.0.1

EAN: 87 10103 58753 8

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com