



Philips  
6000 series Smart Ultra  
HDTV

75" class/po  
4K UHD 2160p

75PFL6601



## Smart 4K UltraHDTV

Your favorite online content in UltraHD

Enjoy Smart 4K Ultra HD performance with HEVC and VP9 decoders for Netflix and YouTube 4K streaming, HDMI 2.0 with HDCP 2.2 and a built-in 4K upscaling engine.

### Enjoy the beauty of 4K Ultra HD

- 240 Perfect Motion Rate gives you smooth images
- An intelligent dimming backlight for dynamic contrast
- Expanding the possibilities of visual perception
- The beauty of 4K UltraHD TV is in savoring every detail

### Complete digital TV connectivity made simple.

- HDMI 2.0 with HDCP 2.2 for 4K on all HDMI ports
- Wireless LAN 802.11ac with MIMO for seamless streaming of 4K
- Play HEVC, H.264, AAC, MP3, JPEG and more formats on USB
- NetTV with Wireless access to online services on your TV
- Wirelessly mirror the screen of smart device on your TV

### Authentic and clear sound experience.

- 20 Watts RMS of rich surround sound to complement 4K images
- Immersive sound with clear voice designed by sonic emotion
- Dolby Audio for the ultimate movie experience

# PHILIPS

# Highlights

## 4K UltraHD



4 times the resolution of Full HD brings your viewing experience to the whole new level. Enjoy every detail and the breathtaking beauty of the pictures.

## High Dynamic Range



High Dynamic Range is a technology lets you experience more detail and captivating colors for an even more engaging television experience. More perceivable shades of blacks, whites and all other colors. This boils down to greater perceived brightness and contrast with darker shadows creating a breathtaking image.

## Macro dimming



Using a proprietary video processing algorithm which measures average luminance level of each video frame, Philips' Macro Dimming intelligent backlight dims the backlight to match every video frame to ensure you have a strain-free life-like viewing experience with bright whites, vivid colors and dark blacks.

## 20 Watts RMS

20 Watts RMS of rich surround sound to complement 4K images

## Sonic Emotion Premium



Immersive sound with clear voice designed by sonic emotion. Absolute3D sound fills your surroundings with the right ambience, clarifies voice, and details the sound stage, making your experience more immersive and enjoyable.

## Dolby Audio

Dolby Audio for the ultimate movie experience

## Wireless LAN 802.11ac w/ MIMO



Wireless LAN 802.11ac with MIMO antennas for seamless streaming of online 4K content.

## Wireless Screencasting



Watch and surf anything and everything wirelessly from your smart phone, tablet or PC to your Philips TV. Imagine the ability to have

unlimited access to every web destination like shopping, email, videos, social networking, as well as your favorite TV shows and sporting events. With Wireless Screencasting your source device screen is wirelessly projected on your TV, so sharing content and surfing the internet on your TV has truly become limitless.

## HDMI 2.0 with HDCP 2.2 for 4K

HDMI 2.0 with HDCP 2.2 for 4K on all HDMI ports

## USB multimedia playback



The USB connector allows access to HEVC, H.264, AAC, MP3, JPEG and more formats files of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your videos, photos and music.

## NetTV



Experience a rich selection of online services with Net TV wirelessly. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Wirelessly navigate and select what you want to watch with the TV remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen.

# Specifications

## Picture/Display

- Aspect ratio: Widescreen(16:9)
- Contrast ratio (typical): 1200:1
- Response time (typical): 8 ms
- Diagonal screen size (inch): 75 inch
- Diagonal screen size (metric): 190.5 cm
- Panel resolution: 3840x2160p
- Picture enhancement: Black stretch, Digital Noise Reduction, MPEG artifact reduction, Pixel Plus UltraHD, Color Enhancement, Dynamic contrast, Gamma, Macro Dimming, 240Hz Perfect Motion Rate
- Visible screen diagonal (inch): 74.5 inch
- Display screen type: LED UltraHD Display
- Viewing angle: 178° (H) / 178° (V)

## Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 720 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1440 x 900, 60 Hz, 1920 x 1080, 60Hz, 1680 x 1050, 60Hz, 1400 x 1050, 60Hz, 3840 x 2160, 60Hz, 4096 x 2160, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz, 1080p, 24,30,60Hz, 2160p, 24, 30, 60Hz

## Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 10W
- Sound System: Sonic Emotion Premium, Stereo, SAP, Dolby Audio

## Loudspeakers

- Built-in speakers: 2

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer
- Ease of Use: AutoPicture, AutoSound, Settings assistant Wizard, Auto Volume Leveling
- Remote Control: TV
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Super Zoom, Widescreen, unscaled (1080p dot by dot), Full, Automatic
- Ease of Installation: Autostore
- Multimedia: auto slideshow, USB media browser

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: MP3, JPEG Still pictures, MPEG1, MPEG2, H.264/MPEG-4 AVC, MPEG 4 SP/ASP, H.265/HEVC, AAC, WAVE

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Tuner bands: UHF, VHF

## Connectivity

- Other connections: Ethernet, Headphone out, PC-In VGA, Wireless LAN 802.11ac MIMO
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), Remote control pass-through, System audio control, System standby
- Audio Output - Digital: Optical (TOSLINK)
- AV 1: Shared audio L/R in, CVBS/YpPr
- USB: USB
- HDMI 1: Shared audio L/R in, HDMI (Audio Return Channel)
- HDMI 2: HDMI, Shared audio L/R in
- HDMI 3: HDMI, Shared audio L/R in
- HDMI 4: HDMI, Shared audio L/R in

## Power


- Mains power: 120V/60Hz
- Power consumption: 340 W
- Standby power consumption: <math>\leq 0.5W</math>
- Ambient temperature: 5°C to 40°C (41°F to 104°F)

## Dimensions


- Product weight (lb): 71.88 lb
- Box height (inch): 44.9 inch
- Box width (inch): 72.9 inch
- Box depth (inch): 12.8 inch
- Wall mount compatible: 400 x 400 mm
- Set Width (inch): 66.2 inch
- Set Height (inch): 39.0 inch
- Set Depth (inch): 2.7 inch
- Set width (with stand) (inch): 66.2 inch
- Set depth (with stand) (inch): 12.0 inch
- Set height (with stand) (inch): 40.9 inch
- Product weight (+stand) (lb): 72.76 lb
- Weight incl. Packaging (lb): 98.11

## Connections

### Bottom Rear

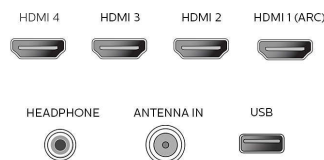

### Side

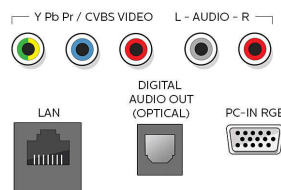

Issue date 2023-12-11

Version: 6.1.1

UPC: 6 09585 24977 6

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

## Accessories

- Included accessories: Table top stand, Quick start guide, User Manual, Remote Control, Batteries for remote control, Screws
- Power cord: 59.05 inch

## Network Services

- NetTV Apps: Netflix, Pandora, Vudu, YouTube, Cinema Now, Hotlist, Samba, Xumo
- Network Features: Home Network, Wireless Screencasting

\* This product was produced prior to FCC Enhanced Accessibility rule going into effect, older production may not have Enhanced Accessibility features. Please look for the "Enhanced Accessibility" logo on the packaging of the product before purchasing if you need Enhanced Accessibility features.