

Philips  
DVD player



DVP3620



## Enjoy it all - from DVD or USB

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### Bring audio and video to life

- Progressive Scan component video for optimized image quality
- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input
- Screen Fit for optimal viewing every time
- Smart Picture provides personalized image settings

### Play all your movies and music

- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos
- ProReader Drive for smooth playback on virtually any disc


### Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

# PHILIPS

# Highlights

## Progressive Scan

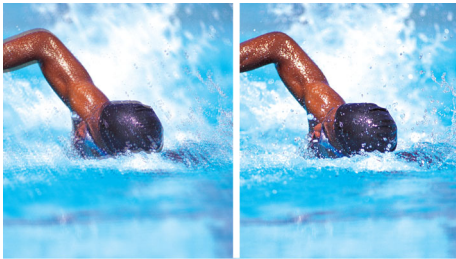

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any

video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

## USB Media Link



The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.



# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video Upscaling(720p, 1080i/p)

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: > 100 dB
- Distortion and Noise (1kHz): > 85 dB
- Crosstalk (1kHz): > 100 dB
- Dynamic Range (1kHz): > 90 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow, Slideshow with MP3 playback

## Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3
- Multimedia connections: USB memory class device

## Connectivity

- Rear Connections: Analog audio Left/Right out, ComponentVideo out Progressive, Composite video (CVBS) output, Digital coaxial out
- Front / Side connections: USB

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Canadian French, Mexican Spanish

## Power

- Power consumption: < 11 W

- Power supply: 120V, 60Hz
- Standby power consumption: < 1 W

## Accessories

- Included accessories: Remote Control, User Manual, Audio/Video cable, Power cord, Warranty Leaflet, AAA Battery (x1)

## Dimensions

- Packaging dimensions (W x H x D): 360 x 80 x 282 mm
- Set dimensions (W x H x D): 310 x 39 x 203 mm
- Set weight: 1.252 kg
- Weight incl. Packaging: 1.678 kg

## Product dimensions

- Product dimensions (W x H x D): 12.2 x 1.5 x 8.0 inch
- Product dimensions (W x H x D): 31 x 3.9 x 20.37 cm
- Weight: 2.447 lb
- Weight: 1.11 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 36 x 28.2 x 8 cm
- Packaging dimensions (W x H x D): 14.2 x 11.1 x 3.1 inch
- Gross weight: 1.686 kg
- Gross weight: 3.717 lb
- Nett weight: 2.941 lb
- Nett weight: 1.334 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.776 lb
- Tare weight: 0.352 kg
- Type of shelf placement: Laying
- UPC: 6 09585 22218 2

## Outer Carton

- Gross weight: 1.686 kg
- Gross weight: 3.717 lb
- Outer carton (L x W x H): 14.2 x 11.1 x 3.1 inch
- Outer carton (L x W x H): 36 x 28.2 x 8 cm
- Nett weight: 1.334 kg
- Nett weight: 2.941 lb
- Number of consumer packagings: 1
- Tare weight: 0.776 lb
- Tare weight: 0.352 kg
- UPC: 6 09585 22218 2



Issue date 2015-03-24

Version: 7.3.5

12 NC: 8670 000 85582  
UPC: 6 09585 22218 2

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)