

Philips  
DVD player

DVP3620



## Enjoy it all - from DVD or USB

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input
- Progressive Scan component video for optimized image quality
- Screen Fit for optimal viewing every time
- Smart Picture provides personalized image settings

### Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives


### Play all your movies and music

- ProReader Drive for smooth playback on virtually any disc
- Plays MP3, WMA and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW

# PHILIPS

# Highlights

## Progressive Scan

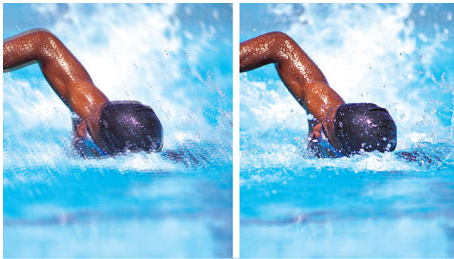

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.


## ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any

video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

## USB Media Link

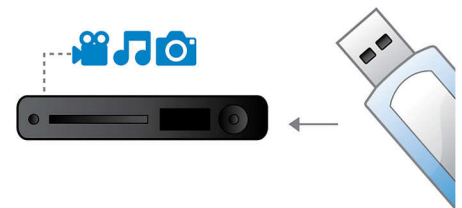

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.



# Specifications

## Picture/Display

- Picture enhancement: Progressive scan, Video Upscaling(720p, 1080i/p)
- D/A converter: 12 bit, 108 MHz

## Sound

- Sound System: Dolby Digital
- Crosstalk (1kHz): > 100 dB
- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Distortion and Noise (1kHz): > 85 dB
- Signal to noise ratio: > 100 dB
- Dynamic Range (1kHz): > 90 dB

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Canadian French, Mexican Spanish

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: JPEG Still pictures, MP3

## Connectivity

- Front / Side connections: USB
- Rear Connections: Analog audio Left/Right out, Component/Video out Progressive, Composite video (CVBS) output, Digital coaxial out

## Power

- Power consumption: < 11 W
- Standby power consumption: < 1 W
- Power supply: 120V, 60Hz

## Dimensions

- Set Height: 39 mm
- Set Width: 310 mm
- Set Depth: 203 mm
- Packaging Depth: 282 mm
- Weight incl. Packaging: 1.678 kg
- Packaging Height: 80 mm
- Packaging Width: 360 mm
- Set weight: 1.252 kg

## Accessories

- Included accessories: Remote Control, User Manual, Audio/Video cable, Power cord, Warranty Leaflet, AAA Battery (x1)

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

## Audio Playback

- Compression format: MP3, Dolby Digital, PCM, WMA
- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow, Slideshow with MP3 playback

## Product dimensions

- Height: 3.9 cm
- Width: 31 cm
- Depth: 20.37 cm
- Width: 12.2 inch
- Height: 1.5 inch
- Depth: 8.0 inch
- Weight: 1.11 kg
- Weight: 2.447 lb

## Packaging dimensions

- Height: 28.2 cm
- Packaging type: Carton
- Width: 36 cm
- Height: 11.1 inch
- Number of products included: 1
- Depth: 8 cm
- Type of shelf placement: Laying
- Width: 14.2 inch
- Depth: 3.1 inch
- Nett weight: 1.334 kg
- Nett weight: 2.941 lb
- Gross weight: 1.686 kg
- Gross weight: 3.717 lb
- Tare weight: 0.352 kg
- Tare weight: 0.776 lb
- UPC: 6 09585 22218 2

## Outer Carton

- Length: 36 cm
- Number of consumer packagings: 1
- Length: 14.2 inch
- Width: 28.2 cm
- Height: 8 cm
- Width: 11.1 inch
- Height: 3.1 inch
- Nett weight: 1.334 kg
- Gross weight: 1.686 kg
- Nett weight: 2.941 lb
- Gross weight: 3.717 lb
- Tare weight: 0.352 kg
- Tare weight: 0.776 lb
- UPC: 6 09585 22218 2



Issue date 2024-08-10

Version: 8.8.6

UPC: 6 09585 22218 2

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)