

Philips
Blu-ray Disc/ DVD player

3D playback

BDP2980



Enjoy the 3D experience at home

Stunning 3D effects in picture depth and action that both leaps off the screen, and draws you deep into the experience. Enjoy the best of internet on your TV with Netflix, Vudu and YouTube.

See more

- DVD video upscaling to 1080p via HDMI for near-HD images
- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- Netflix-Streaming TV Episodes and Movies over the Internet
- Watch YouTube videos directly on your big screen TV*

Hear more

- Dolby TrueHD for high fidelity sound

Engage more

- EasyLink to control all HDMI CEC devices via a single remote
- Direct remote access to Netflix and Vudu movie services
- USB 2.0 plays video/music from USB flash/hard disk drive
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- WiFi-n Ready* for faster, wider wireless performance

PHILIPS

Blu-ray Disc/ DVD player
3D playback


Highlights

Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

Dolby TrueHD

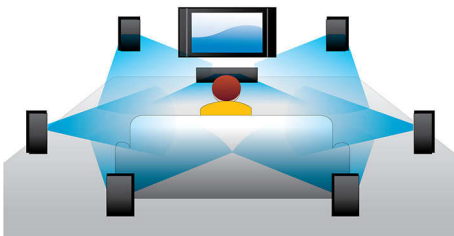

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

Netflix

NETFLIX

Instantly watch TV episodes and movies as often as you want on your Philips TV. All you need is an internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming, and you are ready to go.

Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

YouTube videos



Get YouTube videos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn your computer on. Simply ensure that your Blu-ray

BDP2980/F7

player or Home theater system is connected to the Internet, either wirelessly* or through cables - then sit back and enjoy the best of YouTube.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

WiFi-n Ready



WiFi-n Ready* for faster, wider wireless performance



NETFLIX

YouTube



easy
LINK



Specifications

Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12Bit/148MHz

Sound

- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out
- Sound Enhancement: Night Mode

Convenience

- Child Protection: Parental Control
- BD-Live(1GB USB memory needed)
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- On-Screen Display languages: English, Mexican Spanish
- Online services: Netflix, Vudu, YouTube
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

Connectivity

- Front Connections: USB 2.0/Wi-Fi dongle slot
- Rear Connections: Digital coaxial out, Ethernet, HDMI output
- Network connections: Wi-Fi Ready (802.11 g/n)*

Power

- Power consumption: 11 W
- Standby power consumption: < 1W
- Power supply: 110V, 60Hz

Dimensions

- Weight incl. Packaging: 2.0 kg
- Packaging (W x H x D): 420 x 90 x 303 mm
- Product (W x H x D): 310 x 40 x 203 mm
- Product weight: 1.25 kg

Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish
- Compatible accessories: WUB1110 Wi-Fi USB Adaptor

Video Playback

- BD Region Code: A
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, MPEG4, XviD
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Color, x.v. Color
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 1

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg
- Picture: GIF, JPEG, JPG



Issue date 2024-08-16

Version: 5.5.2

UPC: 6 09585 22855 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Philips Wi-Fi USB adaptor WUB1110 required (sold separately)