

PHILIPS

Lever lock

7000 series

Handle lever usage

Touch-sensor waking system

Auto locking function

DDL173LCGCB



Stable performance

With quick unlock by fingerprint

With the fingerprint sensor integrated into the handle, unlocking is conveniently in one grip. Its dual verification and hidden PIN code functions enhance home entry security. 4 smart unlocking methods and auto-locking makes life easier.

Extraordinary design brings outstanding experience

- With a single grip

Multiple protection in one for overall home safety

- Protect home security at all time
- Security is assured
- Effectively reminds security risks
- Protects your PIN code security in real-time
- Higher lock reliability and better home security
- Eliminates tempering risk while away

Life is more than convenient

- Eliminating the hassle of repetitive locking
- Enjoy the reassurance whenever door is closed

Highlights

Enjoy easy unlock



The fingerprint sensor is integrated in the handle lever so that when you hold the handle, your fingertip will naturally fall on the sensor. Upon successful authentication, you can press down the handle and unlock the door swiftly.

Multiple alerting function




Philips 7300 has been featured with an all-round alert function. It improves the anti-theft level of your home, safeguards your family in real-time, and reminds you of the door lock status.

Dual verification mode



With any two combinations of fingerprint, PIN code, and key tag verification under dual verification mode, you can unlock the door, which provides double protection for home security.

Outside forced locking

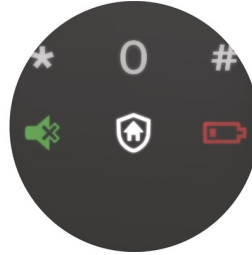

Before leaving home, you can touch the outside forced lock button to enable the function. In this mode, opening the door from inside will trigger an alert. This feature can effectively remind you of security risks and upgrade the level of home security.

Hidden PIN code



Feature with hidden PIN code technology, Philips smart lock allows you to enter any random number combinations to successfully get identified as long as there is a consecutive input of the real password. This feature can effectively prevent peeping and safeguard your real password.

C-grade lock cylinder




The lock cylinder is the key component that controls the opening of the lock. The C-grade lock cylinder employs multiple anti-theft technologies with a unique design of pin tumbler and vane structure, it can provide high deterrence against technical lock-picking.

Safe handle function



You can enable the safe handle function before leaving home. After the door is locked, the indoor handle will be locked up to ensure that nobody could open the door by pushing the indoor handle. This feature can effectively prevent unlocking from inside through the door viewer, thus eliminating security risks and improves anti-theft performance.

Auto mortise

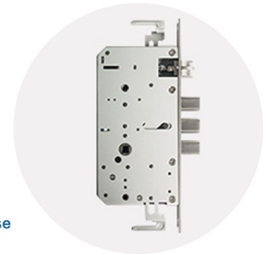

Feature with automatic locking function, the Philips 7300 lever lock reduces the security risks associated with forgetting to close the door.

Auto locking



Philips 7300 utilizes automatic mortise. Without the need for any additional action, the deadbolt will spontaneously pop up after you close the door. If the door is not locked properly, the lock will sound an alert to remind you of the door lock status.

Specifications

Accessory Parts

Accessorial Battery: 4 AA alkaline batteries
Certificate
Cleaning Pad
Drilling Template
Installation Accessories
Mechanical Key: 2 keys
Mortise
Mounting Plate
Smart Key Tag: 2 cards
User Manual
Warranty Card

Design & Appearance

Color: Red copper
Fingerprint Sensor: Semiconductor
Handle: Lever handle
Surface Processing: Electroplating

Easy Operation

Indicator: Door locks status prompt, Low battery prompt, Mute status prompt, Outside forced lock prompt, System locking prompt
Voice Guide: Human voice guide

Installation

Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening
Door Thickness: 38-60 mm, 60-90 mm, 90-120 mm, Other range*

Lock Capacity

Card/Key Tag: Up to 100
Fingerprint: Up to 100
Master PIN Code: 1
One-time PIN Code: 1
User PIN Code: Up to 10

Power Specification

Battery Type: Alkaline Batteries
Emergency Power Supply: 5V power bank
Maximum Batteries Capacity: 8 batteries
Power Supply: 4 AA batteries
Time of Use: 10 months*
Working Voltage: 4.5-6V

Access Solution

Card/Key Tag
Fingerprint
Mechanical Key
Password/PIN Code

Mode

Operation Mode: Auto mode, Manual mode
System Setup Mode: Dual verification mode, Normal mode

Smart Lock Functions

Alarm Function: Abnormal bolt alarm, Anti-dismantle alarm, Anti-prying alarm, Outside forced lock alarm
Locking Function: Indoor deadlock, System locking
Mortise: C grade lock cylinder
Safety Function: Dual verification, Fake PIN code, Outside forced lock function, Safe handle function

