

Philips  
Blu-ray Disc/ DVD player

3D playback

BDP2985



## Wireless Streaming Entertainment

With 3D Blu-ray playback

Stunning 3D effects in picture depth and action that both leaps off the screen, and draws you deep into the experience. Enjoy the best of internet on your TV with Netflix, Vudu and YouTube.

### See more

- DVD video upscaling to 1080p via HDMI for near-HD images
- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- Netflix-Streaming TV Episodes and Movies over the Internet
- Watch YouTube videos directly on your big screen TV\*

### Hear more

- Dolby TrueHD for high fidelity sound

### Engage more

- EasyLink to control all HDMI CEC devices via a single remote
- Direct remote access to Netflix and Vudu movie services
- USB 2.0 plays video/music from USB flash/hard disk drive
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Built-in WiFi-n for faster, wider wireless performance

# PHILIPS

Blu-ray Disc/ DVD player  
3D playback


# Highlights

## Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

## Dolby TrueHD

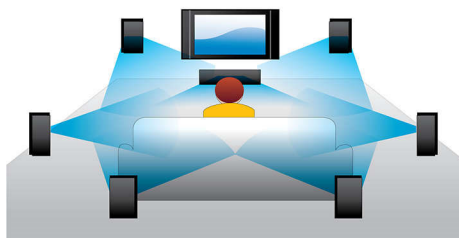

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## Netflix

# NETFLIX

Instantly watch TV episodes and movies as often as you want on your Philips TV. All you need is an internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming, and you are ready to go.

### Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

## YouTube videos



Get YouTube videos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn your computer on. Simply ensure that your Blu-ray player or Home theater system is connected to the Internet, either wirelessly\* or through

BDP2985/F7

cables - then sit back and enjoy the best of YouTube.

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.



NETFLIX

YouTube



easy  
LINK



# Specifications

## Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12Bit/148MHz

## Sound

- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out
- Sound Enhancement: Night Mode

## Convenience

- Child Protection: Parental Control
- BD-Live(1GB USB memory needed)
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- On-Screen Display languages: English, Mexican Spanish
- Online services: Netflix, Vudu, YouTube
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

## Connectivity

- Front Connections: USB 2.0
- Integrated Connections: Wi-Fi
- Rear Connections: Digital coaxial out, HDMI output

## Power

- Power consumption: 11 W
- Standby power consumption: < 1W
- Power supply: 110V, 60Hz

## Dimensions

- Weight incl. Packaging: 2.0 kg
- Packaging (W x H x D): 420 x 90 x 303 mm
- Product (W x H x D): 310 x 40 x 203 mm
- Product weight: 1.25 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish

## Video Playback

- BD Region Code: A
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, MPEG4, XviD
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Color, x.v. Color
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 1

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg
- Picture: GIF, JPEG, JPG



Issue date 2024-08-16

Version: 5.5.5

UPC: 6 09585 22964 8

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)