

Philips
DVD player

DVD
CD audio
Dolby Audio
Enhanced Accessibility

DVP2702



Enjoy your favorite DVDs

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player DVP2702 delivers your movies entertainment experience

Bring audio to life

- Dolby Audio for the ultimate movie experience

Bring video to life

- Progressive Scan component video for optimized image quality

Enhanced Accessibility for ease of use

- Enhanced Accessibility enabled product

PHILIPS

Specifications

Picture/Display

- Aspect ratio: 16:9, 4:3
- Picture enhancement: Color Enhancement

Sound

- Sound System: Dolby Audio

Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, French, Spanish

Multimedia Applications

- Playback Formats: JPEG Still pictures

Connectivity

- Rear Connections: Composite video (CVBS) output, Analog audio Left/Right out, Digital coaxial out

Power

- Power supply: 120V, 60Hz

Dimensions

- Set Height: 50.2 mm
- Set Width: 250 mm
- Set Depth: 187.7 mm
- Product weight (lb): 1.95 lb
- Packaging (W x H x D): 12.6 x 4.1 x 10.3 inch
- Packaging Depth: 260 mm
- Packaging Height: 102 mm
- Packaging Width: 319 mm

- Set Width (inch): 9.9 inch
- Gross Weight: 2.98 lb
- Set Height (inch): 2.0 inch
- Gross weight: 1.35 kg
- Set Depth (inch): 7.4 inch
- Product weight: 0.88 kg

Accessories

- Included accessories: Quick start guide, Remote Control, Audio/Video cable
- User Manual: English, Spanish

Video Playback

- Playback Media: DVD-Video, CD, CD-R/CD-RW, DVD-R/-RW
- Video disc playback system: NTSC
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play
- DVD Region: 1

Audio Playback


- Compression format: Dolby Digital, PCM
- Playback Media: CD, CD-R/RW, DVD-R/-RW, DVD

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW, DVD
- Picture Enhancement: Rotate, Slideshow

Highlights

Progressive Scan

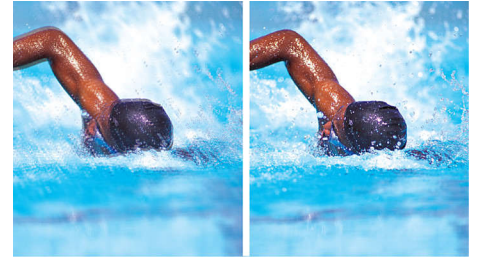


Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Enhanced Accessibility

Enhanced Accessibility enabled products provide a more user friendly experience for visually and hearing impaired people to enjoy Philips televisions and home video players. With features such as a voice guide menu, easy to read and navigate user interface, raised guide dots on key remote control buttons and large format support information so visually impaired people can reach customer care; Philips cares about accessibility and wants everyone to enjoy television.

Dolby Audio

Dolby Audio for the ultimate movie experience

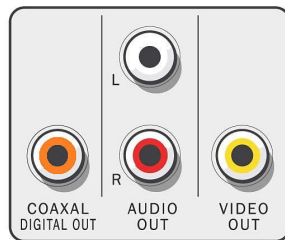

Issue date 2023-12-11

Version: 7.3.1

UPC: 6 09585 25024 6

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com