



Philips
flat HDTV with Perfect
Pixel HD Engine and
Ambilight 2 channel

107cm (42")
LCD
integrated digital

42PFL7432D



Turn up your viewing experience

with Perfect Pixel HD and Ambilight

Enjoy the ultimate viewing experience of this Philips Flat TV with Perfect Pixel HD Engine, Ambilight 2 Channel and Full HD 1080p display. Enjoy your multimedia content with the built in USB.

Immersive viewing experience

- Full HD LCD display, 1920x1080p
- Enjoy HDTV that's truer than anything you've seen before
- Perfect Pixel HD Engine for unrivalled sharpness and clarity

Be an eyewitness

- 2-channel active Ambilight enhances the viewing experience

Perfect picture quality from your digital photos

- USB Connector for easy, instant multimedia playing

For advanced performance

- 3 HDMI inputs for full digital HD connection in one cable

PHILIPS

flat HDTV
107cm (42") LCD, integrated digital

42PFL7432D/37

Highlights

Full HD LCD display 1920x1080p

This display has a resolution that is referred to as Full HD. The state-of-the-art LCD screen technology has the full high-definition widescreen resolution of 1080 progressive lines, each with 1920 pixels. This allows the best possible picture quality for HD input signals with up to 1080 lines. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

HDTV

HDTV delivers exceptional picture quality and real movie-viewing experience that makes television more dynamic, truer than anything you've seen before. It is the latest and best television signal available. It features picture quality more than twice that of traditional analog broadcasts. In order to effectively maximize the HDTV signal, a television must incorporate advanced signal input connectivity and circuitry design.

Perfect Pixel HD Engine

Experience unrivalled sharpness and clarity with Perfect Pixel HD Engine. Each pixel of the picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. The result is a unique combination of sharpness, natural detail, vivid colors superior contrast and smooth natural motion whatever you are watching. Clean and razor sharp images result from artifact and noise detection and reduction in all content sources - from multimedia to standard TV.

Ambilight 2 channel

Ambilight makes an impressive contribution to the overall viewing experience by producing ambient light to complement the colors and light intensity of the on-screen image. It adds a new dimension to the viewing experience, completely immersing you into the content you are watching. It creates ambiance, stimulates more relaxed viewing, and improves perceived picture detail, contrast and color. Ambilight automatically and independently adapts its colors according to the changing content on the screen.

USB Multimedia Connector

The USB connector allows access to multimedia jpg, mp3 and alb files of most USB-sticks and most digital cameras (USB 1.1 memory-class device). Plug the USB into the slot at the side of the TV and access your photos or music files. This makes you easily viewing and sharing your photos and music.

3 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen. By eliminating conversion to an analog signal, it delivers an unblemished image. The non-degraded signal reduces flicker and leads to a clearer picture. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources but includes digital audio. HDMI uses HDCP copy protection. With 3 HDMI inputs you can connect multiple HD sources, for instance an HD settop box, and a Blu-ray player. Your TV is fully prepared for the HD future.

Perfect
Pixel
HD ENGINE



3x
HDMI



Specifications

Picture/Display

- Aspect ratio: 16:9
- Color cabinet: High Gloss Black
- Brightness: 500 cd/m²
- Contrast ratio (typical): 1100:1
- Dynamic screen contrast: 8000:1
- Response time (typical): 5 (BEW equiv.) ms
- Viewing angle: 176° (H) / 176° (V)
- Diagonal screen size (inch): 42 inch
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Panel resolution: 1920x1080p
- Picture enhancement: Perfect Pixel HD Engine, Digital Natural Motion, Dynamic contrast enhancement, 1080p 50/60Hz processing, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Jagged Line Suppression, Progressive scan, Widescreen Plus
- Screen enhancement: Anti-Reflection coated screen

Ambilight

- Ambilight Features: Ambilight 2 Channel, Auto adaptive to video content, Efficient low energy lamp
- Ambilight light system: LED wide color
- Color Settings: Full Multi Color
- Dimming Function: Manual and via Light Sensor
- Preset modes: 4 Active Adaptive modes

Supported Display Resolution

Computer formats

Resolution	Refresh rate
640 x 480	60Hz
800 x 600	60Hz
1024 x 768	60Hz
1280 x 768	60Hz
1360 x 768	60Hz
1920 x 1080i	60Hz
1920 x 1080p	60Hz

Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz

1080p	24, 25, 30Hz
1080p	24, 50, 60Hz

Sound

- Output power (RMS): 2x8W
- Sound Enhancement: Digital Signal Processing, Graphic Equaliser, Dynamic Bass Enhancement
- Sound System: Virtual Dolby Digital

Loudspeakers

- Built-in speakers: 2
- Loudspeaker types: Front Speakers, Dome tweeter

Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Smart Clock
- Ease of Installation: Auto Program Naming, Automatic Tuning System (ATS), Autostore, PLL Digital Tuning, Plug & Play
- Ease of Use: Auto Volume Leveller (AVL), Channel list, Delta Volume per preset, Graphical User Interface, On Screen Display, Side Control, Smart Picture, Smart Sound
- Remote Control: TV
- Remote control type: RC4451
- Screen Format Adjustments: 4:3, 6 Widescreen Modes, Auto Format, Full screen, Movie expand 14:9, Movie expand 16:9, Super Zoom
- Teletext: Closed Captioning Full Text

Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures

Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Cable: Unscrambled Digital Cable QAM

Connectivity

- AV 1: (1, 2, 3Fh autoranging), Audio L/R in, CVBS in, S-Video, YPbPr
- AV 2: Audio L/R in, CVBS
- AV 3: (1, 2, 3Fh autoranging), Audio L/R in, YPbPr
- AV 4: HDMI, Audio L/R in
- AV 5: HDMI

- AV 6: HDMI
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in, USB
- Other connections: Monitor out L/R (Cinch), S/PDIF in (coaxial), S/PDIF out (coaxial)

Power


- Ambient temperature: 5 °C to 35 °C
- Mains power: AC 110 +/- 10%
- Power consumption: 264 W
- Standby power consumption: 0.64 W

Accessories

- Included accessories: Tabletop swivel stand

Dimensions

- Set dimensions in inch (W x H x D): 41.2 x 27.0 x 4.6 inch
- Set dimensions with stand in inch (H x D): 29.5 x 10.4 inch
- Product weight (lb): 60.8 lb lb
- Product weight (+stand) (lb): 76.3 lb
- Box dimensions in inch (W x H x D): 44.3 x 30.7 x 10.9 inch
- Weight incl. Packaging (lb): 89.1 lb
- Wall mount compatible: 600 x 400 mm

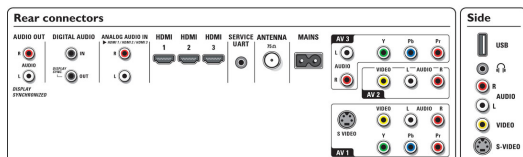

Issue date 2022-07-14

Version: 9.0.23

12 NC: 8670 000 28647
UPC: 6 09585 12939 9

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com