



Philips  
5.1 Home theater

3D Blu-ray



HTS3564

## Powerful cinematic sound with deep bass

### With Blu-ray 3D

Experience Blu-ray 3D in powerful 1000W surround sound at home. Enjoy the best of internet on your TV with Netflix and Vudu, hassle-free with speedy built-in WiFi-n and playback more than ever before with DivX+ HD.

#### **Great listening experience**

- Powerful speakers with double basspipes for great sound
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 1000W RMS power delivers great sound for movies and music

#### **Connect and enjoy all your entertainment**

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- DivX Plus HD Certified for high definition DivX playback
- Direct remote access to Netflix and Vudu movie services
- Built-in WiFi-n for faster, wider wireless performance
- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote

#### **Designed to enhance your living space**

- Modern design to complement your home environment

# PHILIPS

# Highlights

## 1000W RMS power




1000W RMS power delivers great sound for movies and music

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Dolby TrueHD and DTS-HD

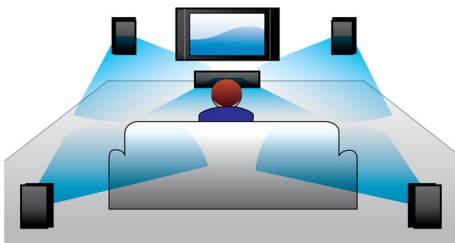

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your

Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## Double bass sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

## Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.



# Specifications

## Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio Essential
- Center speaker output power: 166.66 W
- Satellite speaker output power: 4 x 166.66 W
- Subwoofer output power: 166.66 W
- Total Power RMS @ 10% THD: 1000 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150 - 20k Hz
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Connectivity

- Front Connections: Music iLINK, USB
- Integrated Connections: Wi-Fi
- Network connections: Wi-Fi - 802.11 b/g/n
- Rear Connections: AUX IN 1, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC)

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color
- Online services: Netflix, Vudu

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA

- Lip-sync: up to 200ms
- MP3 bit rates: 32 - 320kbps

## Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 180 W
- Power supply: 110V, 60Hz
- Standby power consumption: < 0.9 W

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.40 kg
- Center Speaker (W x H x D): 161 x 95 x 92 mm
- Center Speaker Weight: 0.77 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 87 x 161 x 95 mm
- Front Speaker Weight: 0.56 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 95 x 161 x 87 mm
- Rear Speaker Weight: 0.5 kg
- Rear Speaker cable length: 7 m
- Subwoofer (W x H x D): 123 x 309 x 369 mm
- Subwoofer cable length: 3 m
- Subwoofer Weight: 3.81 kg
- Packaging (W x H x D): 467 x 361 x 372 mm

## Accessories

- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet

## Product dimensions

- Product dimensions (W x H x D): 36 x 5.8 x 33.5 cm
- Product dimensions (W x H x D): 14.2 x 2.3 x 13.2 inch
- Weight: 2.5 kg
- Weight: 5.512 lb

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 46.8 x 37 x 37.6 cm
- Packaging dimensions (W x H x D): 18.4 x 14.6 x 14.8 inch
- Gross weight: 10.3 kg
- Nett weight: 9.16 kg
- Tare weight: 1.14 kg

- Gross weight: 22.707 lb
- Nett weight: 20.194 lb
- Tare weight: 2.513 lb
- UPC: 6 09585 22882 5

## Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 46.8 x 37.6 x 37 cm
- Outer carton (L x W x H): 18.4 x 14.8 x 14.6 inch
- Gross weight: 10.3 kg
- Nett weight: 9.16 kg
- Tare weight: 1.14 kg
- Gross weight: 22.707 lb
- Nett weight: 20.194 lb
- Tare weight: 2.513 lb
- UPC: 6 09585 22882 5



Issue date 2014-07-15

Version: 5.3.2

12 NC: 8670 000 94108  
UPC: 6 09585 22882 5

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)