



Philips  
6000 series Smart Ultra  
HDTV

50" class/po  
4K UHD 2160p  
BrightPro  
Enhanced Color Gamut

50PFL6602



## Smart 4K UltraHDTV

Your favorite online content in UltraHD

Dolby Vision™ transforms your TV experience with dramatic imaging - incredible brightness, contrast, and color that bring entertainment to life before your eyes.

### Enjoy the beauty of 4K Ultra HD

- 120 Perfect Motion Rate for increased pixel response times
- Enjoy HD content in 4K UHD with a 4K upscaling engine
- An intelligent dimming backlight for dynamic contrast
- Pixel Precise UltraHD for vivid, natural, and real images
- The beauty of 4K UltraHD TV is in savoring every detail
- Dolby Vision for Dramatic Imaging at Home

### Complete digital TV connectivity made simple.

- HDMI 2.0 with HDCP 2.2 for 4K on all HDMI ports
- Wireless LAN 802.11ac with MIMO for seamless streaming of 4K
- Play HEVC, H.264, AAC, MP3, JPEG and more formats on USB
- NetTV with Wireless access to online services on your TV

### Authentic and clear sound experience.

- 20 Watts RMS of rich surround sound to complement 4K images
- Immersive sound with clear voice designed by sonic emotion

# PHILIPS

6000 series Smart Ultra HDTV  
50" class/po 4K UHD 2160p, BrightPro, Enhanced Color Gamut

# Highlights

## 4K UltraHD



4 times the resolution of Full HD brings your viewing experience to the whole new level. Enjoy every detail and the breathtaking beauty of the pictures.

## 120 Perfect Motion Rate



120 Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and vibrant images in fast action movies. The new Philips PMR standard reduces response time of the HDTV to produce faster picture transitions and reduces motion artifacts.

## Macro dimming



Using a proprietary video processing algorithm which measures average luminance level of each video frame, Philips' Macro Dimming intelligent backlight dims the backlight to match every video frame to ensure you have a strain-free life-

like viewing experience with bright whites, vivid colors and dark blacks.

## 4K Upscaling



Your Standard Definition and High Definition videos have never looked better. 4K upscaling processor delivers images that are crystal clear. Movies in standard definition and high definition can now be enjoyed in 4K Ultra HD, ensuring more details and more true-to-life pictures.

## 20 Watts RMS

20 Watts RMS of rich surround sound to complement 4K images

## Sonic Emotion Premium



Immersive sound with clear voice designed by sonic emotion. Absolute3D sound fills your surroundings with the right ambience, clarifies voice, and details the sound stage, making your experience more immersive and enjoyable.

## Dolby Audio

Dolby Audio for the ultimate movie experience

50PFL6602/F7

## Wireless LAN 802.11ac w/ MIMO



Wireless LAN 802.11ac with MIMO antennas for seamless streaming of online 4K content.

## NetTV



Experience a rich selection of online services with Net TV wirelessly. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Wirelessly navigate and select what you want to watch with the TV remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen.

## USB multimedia playback



The USB connector allows access to HEVC, H.264, AAC, MP3, JPEG and more formats files of most USB-sticks (USB memory-class device). Plug the USB into the slot at the side of the TV and access the multimedia content using the easy on screen content browser. You can now view and share your videos, photos and music.



# Specifications

## Picture/Display

- Aspect ratio: Widescreen(16:9)
- Contrast ratio (typical): 5000:1
- Response time (typical): 9.5 ms
- Diagonal screen size (inch): 50 inch
- Diagonal screen size (metric): 127 cm
- Panel resolution: 3840x2160p
- Picture enhancement: Pixel Plus UltraHD, Black stretch, Digital Noise Reduction, MPEG artifact reduction, 120 PMR, Color Enhancement, Dynamic contrast, Gamma, Macro Dimming
- Visible screen diagonal (inch): 49.5 inch
- Display screen type: LED UltraHD Display
- Viewing angle: 178° (H) / 178° (V)

## Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 720 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1440 x 900, 60 Hz, 1920 x 1080, 60Hz, 1680 x 1050, 60Hz, 1400 x 1050, 60Hz, 3840 x 2160, 60Hz, 4096 x 2160, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 720p, 60Hz, 1080i, 60Hz, 1080p, 24,30,60Hz, 2160p, 24, 30, 60Hz

## Sound

- Equalizer: 5-bands
- Output power (RMS): 2 x 10W
- Sound System: Sonic Emotion Premium, Stereo, SAP, Dolby Audio

## Loudspeakers

- Built-in speakers: 2

## Convenience

- Child Protection: Child Lock+Parental Control
- Clock: Sleep Timer
- Ease of Use: AutoPicture, AutoSound, Settings assistant Wizard, Auto Volume Leveling
- Remote Control: TV
- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Super Zoom, Widescreen, unscaled (1080p dot by dot), Full, Automatic

- Ease of Installation: Autostore
- Multimedia: auto slideshow, USB media browser

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: MP3, JPEG Still pictures, MPEG1, MPEG2, H.264/MPEG-4 AVC, H.265/HEVC, AAC, WAVE, AC3, MPEG4

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm F-type
- TV system: ATSC, NTSC
- Video Playback: NTSC
- Tuner bands: UHF, VHF

## Connectivity

- Other connections: Ethernet, Headphone out, Wireless LAN 802.11ac MIMO
- EasyLink (HDMI-CEC): One touch play, Power status, System info (menu language), Remote control pass-through, System audio control, System standby
- Audio Output - Digital: Optical (TOSLINK)
- AV 1: Shared audio L/R in, AV In
- USB: USB
- HDMI 1: Shared audio L/R in, HDMI
- HDMI 2: Shared audio L/R in, HDMI (Audio Return Channel)
- HDMI 3: HDMI, Shared audio L/R in

## Power

- Mains power: 120V/60Hz
- Power consumption: 125 W
- Standby power consumption: < 0.5W
- Ambient temperature: 5°C to 40°C (41°F to 104°F)

## Dimensions


- Product weight (lb): 21.6 lb
- Box height (inch): 29.4 inch
- Box width (inch): 51.2 inch
- Box depth (inch): 6.4 inch
- Wall mount compatible: 300 x 200 mm
- Set Width (inch): 44.2 inch
- Set Height (inch): 26.1 inch
- Set Depth (inch): 3.5 inch
- Set width (with stand) (inch): 44.2 inch

## Connections

### Side



### Rear

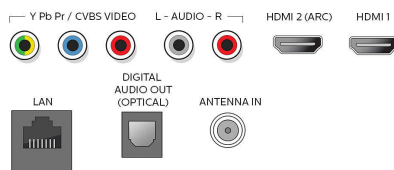

Issue date 2023-12-11

Version: 1.1.1

UPC: 6 09585 25130 4

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)