



Philips
Blu-ray Disc/ DVD player

Netflix & Youtube

USB2.0 Media Link
DivX Plus HD
Built-in WiFi

BDP2305

Blu-ray and DVD with built-in Wi-Fi

with Netflix & YouTube

Incredibly sharp images in full HD 1080p are delivered from Blu-ray discs, and DVD upscaling offers near-HD video quality. Enjoy the best of internet on your TV with Netflix, Vudu and YouTube

Connect and enjoy all your entertainment

- Watch YouTube videos directly on your big screen TV*

See more

- DVD video upscaling to 1080p via HDMI for near-HD images
- Blu-ray Disc playback for sharp images in full HD 1080p
- DivX Plus HD Certified for high definition DivX playback
- Netflix-Streaming TV Episodes and Movies over the Internet

Hear more

- Dolby TrueHD for high fidelity sound
- DTS2.0 Digital Out


Engage more

- Direct remote access to Netflix and Vudu movie services
- USB 2.0 plays video/music from USB flash/hard disk drive
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Built-in WiFi-n for faster, wider wireless performance

PHILIPS

Highlights

Blu-ray Disc playback

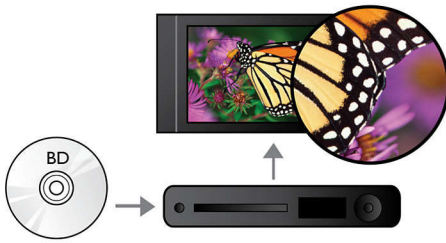

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.


DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up

to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD

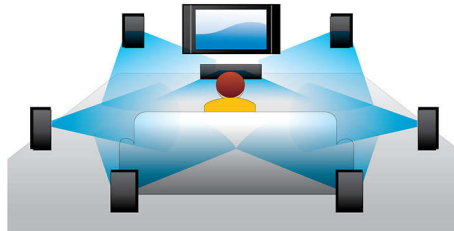

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

WiFi-n



WiFi-n, also known as IEEE 802.11n, is the new wireless network standard. It includes many new options to improve the quality of the wireless link, offering faster speed and wider range compared to previous WiFi standards. WiFi-n also features backward compatibility, which makes it possible for this player to transmit to and receive from routers that operate on older WiFi standards.

Direct remote Netflix and Vudu

To speed up the process, and make it more user-friendly, there are Netflix and VUDU shortcut buttons on remote control that allow you to do the basic commands necessary both for watching your video and for controlling the general interface.

Netflix video streaming

NETFLIX

Instantly watch TV episodes and movies as often as you want on your TV. All you need is an internet connection (either Wi-Fi or Ethernet) and a Netflix membership package that includes streaming*, and you are ready to go.



Specifications

Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Sound

- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out
- Sound Enhancement: Night Mode

Convenience

- Child Protection: Parental Control
- BD-Live(1GB USB memory needed)
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- On-Screen Display languages: English, Mexican Spanish
- Online services: Netflix, Pandora, Vudu, YouTube
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

Connectivity

- Front Connections: USB 2.0
- Integrated Connections: Wi-Fi
- Rear Connections: Digital coaxial out, Ethernet, HDMI output
- Network connections: 802.11 b/g/n, Built-in WiFi

Power

- Power consumption: 11 W
- Standby power consumption: < 1W
- Power supply: 110V, 60Hz

Dimensions

- Weight incl. Packaging: 1.3 kg
- Packaging (W x H x D): 315 x 81 x 259 mm
- Product (W x H x D): 270 x 41 x 199 mm
- Product weight: 1.02 kg

Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish

Video Playback

- BD Region Code: A
- Compression formats: DivX Plus™ HD, H.264, MPEG2, MPEG4 (AVC), XviD, MPEG1
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 1

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Product dimensions

- Height: 4.1 cm
- Width: 27 cm
- Depth: 19.93 cm
- Width: 10.6 inch
- Height: 1.6 inch
- Depth: 7.8 inch
- Weight: 0.91 kg
- Weight: 2.006 lb

Packaging dimensions

- Height: 25.9 cm

- Packaging type: Carton
- Width: 31.5 cm
- Height: 10.2 inch
- Number of products included: 1
- Depth: 8.1 cm
- Type of shelf placement: Laying
- Width: 12.4 inch
- Depth: 3.2 inch
- Nett weight: 1.02 kg
- Nett weight: 2.249 lb
- Gross weight: 1.3 kg
- Gross weight: 2.866 lb
- Tare weight: 0.28 kg
- Tare weight: 0.617 lb
- UPC: 6 09585 24845 8

Outer Carton

- Length: 31.5 cm
- Number of consumer packagings: 1
- Length: 12.4 inch
- Width: 25.9 cm
- Height: 8.1 cm
- Width: 10.2 inch
- Height: 3.2 inch
- Nett weight: 1.02 kg
- Gross weight: 1.3 kg
- Nett weight: 2.249 lb
- Gross weight: 2.866 lb
- Tare weight: 0.28 kg
- Tare weight: 0.617 lb
- UPC: 6 09585 24845 8

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wma
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

Specifications

- Picture: GIF, JPEG, JPG



Issue date 2024-08-16

Version: 4.4.4

UPC: 6 09585 24845 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com