

Philips 2000 series
DVD player

HDMI 1080p
CinemaPlus

DVP2880



Get sharper, clearer pictures

with HDMI 1080p upscaling

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player DVP2880 delivers your movies and music entertainment experience.

Bring audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- CinemaPlus for better, sharper and clearer images
- Screen Fit for optimal viewing every time

Easy to use

- EasyLink to control all HDMI CEC devices via a single remote

Play all your movies and music

- ProReader Drive for smooth playback on virtually any disc
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW


PHILIPS

Highlights

HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

CinemaPlus

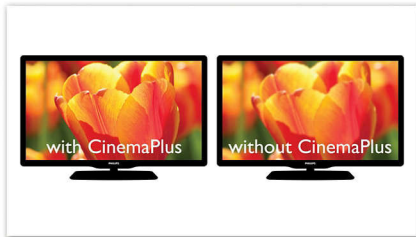

Feast your eyes on images that are razor sharp and a match for reality. An intelligent algorithm, CinemaPlus goes right down to each pixel in each frame, analyzing it before optimizing sharpness and color stability. The results are obvious - you get to see more details, pictures become crystal clear and everything looks superbly natural. Movie nights will never be the same again.

ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.


EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the


HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Plays it all

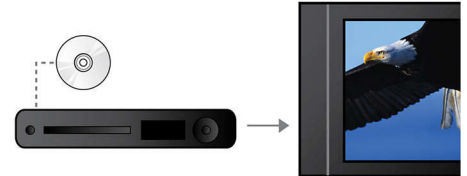

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

Screen Fit

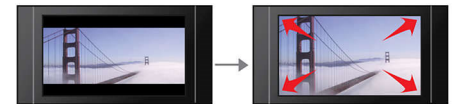

Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen



Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video Upscaling(720p, 1080i/p)
- D/A converter: 12 bit, 108 MHz

Sound

- Sound System: Dolby Digital
- Crosstalk (1kHz): > 100 dB
- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Distortion and Noise (1kHz): > 85 dB
- Signal to noise ratio: > 100 dB
- Dynamic Range (1kHz): > 90 dB

Convenience

- Child Protection: Child Lock, Parental Control

Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, HDMI output

Power

- Power consumption: < 11 W
- Standby power consumption: < 0.5 W
- Power supply: 110-127V, 60Hz

Dimensions

- Weight incl. Packaging: 1.38 kg
- Packaging (W x H x D): 316 x 77 x 280 mm
- Product (W x H x D): 270 x 37.5 x 209 mm
- Product weight: 1 kg

Accessories

- Included accessories: AAA Battery (x1), Remote Control, Warranty Leaflet, World Wide Warranty leaflet, User Manual

Video Playback

- Compression formats: MPEG1, MPEG2, MPEG4
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: Dolby Digital, PCM

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Zoom

Product dimensions

- Height: 21 cm
- Width: 27 cm
- Depth: 3.3 cm
- Width: 10.6 inch
- Height: 8.3 inch
- Depth: 1.3 inch
- Weight: 0.89 kg
- Weight: 1.962 lb

Packaging dimensions

- Height: 31.6 cm
- Packaging type: Carton
- Width: 28 cm
- Height: 12.4 inch
- Number of products included: 1
- Depth: 7.7 cm
- Type of shelf placement: Laying
- Width: 11.0 inch
- Depth: 3.0 inch
- Nett weight: 1 kg
- Nett weight: 2.205 lb
- Gross weight: 1.3 kg
- Gross weight: 2.866 lb
- Tare weight: 0.3 kg
- Tare weight: 0.661 lb
- UPC: 6 09585 23296 9

Outer Carton

- Length: 31.6 cm
- Number of consumer packagings: 1
- Length: 12.4 inch
- Width: 28 cm
- Height: 7.7 cm
- Width: 11.0 inch
- Height: 3.0 inch
- Nett weight: 1 kg
- Gross weight: 1.3 kg
- Nett weight: 2.205 lb
- Gross weight: 2.866 lb
- Tare weight: 0.3 kg
- Tare weight: 0.661 lb
- UPC: 6 09585 23296 9

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

File Format

- Video: avi, mpeg, mpg
- Picture: JPEG



Issue date 2024-08-16

Version: 12.12.9

UPC: 6 09585 23296 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com