

Philips  
Blu-ray Disc/ DVD player

BD/DVD/CD playback  
DVD video upscaling to HD  
Enhanced Accessibility

BDP1305



BDP1305/F7



BDP1305/F7 N

## Enjoy your Blu-ray and DVD movies.

With the Philips BDP1305 Blu-ray player, movies never looked better. Incredibly sharp images in full HD 1080p are delivered from Blu-ray discs, while DVD upscaling offers near HD video quality.

### See more

- 1080p at 24 fps for cinema-like images
- Blu-ray Disc playback for sharp images in full HD 1080p
- DVD video upscaling to 1080p via HDMI for near-HD images

### Hear more

- Dolby TrueHD for high fidelity 7.1 surround sound

### Enhanced Accesibility for ease of use

- Enhanced Accessibility enabled product

### Engage more

- EasyLink to control all HDMI CEC devices via a single remote
- Bonus View with Picture-in-Picture for video & audio choices

# PHILIPS


# Highlights

## 1080p at 24 fps



Bring true cinema experience into your living room with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs - thus giving you sensational cinema-like high definition images that will astound you.

## Blu-ray Disc playback

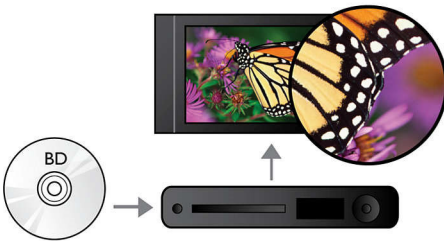


Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

## Bonus View



With Bonus View, you can enjoy picture-in-picture with audio choices. A second smaller window - which runs a separate video sequence, appears over the main picture. You can then choose whether you want to listen to what's going on in the smaller window or in the larger one. This allows you to enjoy many special features that are often included in Blu-ray Disc movies. For example, you can watch and listen to the director's comments in the smaller window, whilst he points to scenes or actors in the main picture.

## Dolby TrueHD

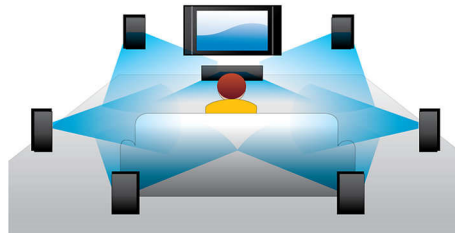

Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

# Specifications

## Picture/Display

- Aspect ratio: 16:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling, Noise Reduction
- D/A converter: 12 bit / 150MHz

## Sound

- Sound System: DTS 2.0 + Digital out, Dolby True HD

## Convenience

- Child Protection: Parental Control
- OSD Languages: English, French, Spanish
- On-Screen Display languages: English, French, Spanish

## Multimedia Applications

- Playback Formats: JPEG Still pictures

## Connectivity

- Front Connections: USB
- Rear Connections: HDMI output

## Power

- Power consumption: 15 W
- Standby power consumption: 0.5W
- Power supply: 120V, 60Hz

## Dimensions

- Set Height: 41 mm
- Set Width: 280 mm
- Set Depth: 201 mm
- Product weight (lb): 2.2 lb
- Packaging (W x H x D): 13.6 x 10.7 x 3.3 inch
- Packaging Depth: 271 mm
- Packaging Height: 83 mm
- Packaging Width: 344 mm

- Set weight: 1.0 kg
- Set Width (inch): 11.1 inch
- Gross Weight: 3.1 lb
- Set Height (inch): 1.7 inch
- Gross weight: 1.4 kg
- Set Depth (inch): 8.3 inch

## Accessories

- Included accessories: Quick start guide, Remote Control, 2 x AAA Batteries
- User Manual: English, French, Spanish

## Video Playback

- Playback Media: CD, CD-R/CD-RW, DVD, DVD-R/-RW, DVD-Video, BD-R/RE 2.0, BD-ROM, BD Video
- Compression formats: H.264, MPEG2, AVCHD
- Video disc playback system: NTSC
- Video Enhancement: Progressive Scan, Video Upscaling
- Disc Playback Modes: Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play
- DVD Region: 1
- Picture Quality Enhancements: Video upscaling
- BD Region: A


## Audio Playback

- Compression format: Dolby Digital, DTS, PCM
- Playback Media: CD, CD-R/RW, DVD-R/-RW
- Multichannel decoding: Dolby Digital


## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, DVD-R/-RW
- Picture Enhancement: High Definition Resolution, Rotate, Slideshow, Zoom

## FRONT/AVANT/FRENTE

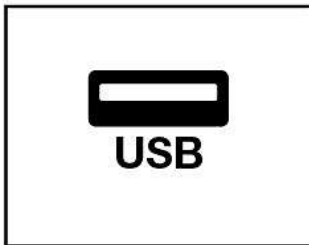

## REAR/ARRIÈRE/POSTERIOR

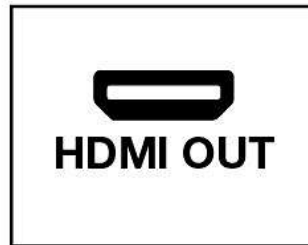

Issue date 2023-12-11

Version: 6.1.1

UPC: 6 09585 24965 3

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)