



Philips
Blu-ray Disc/ DVD player

BDP1200



Enjoy super sharp movies in HD

With BDP1200, movies never looked better. Incredibly sharp images in full HD 1080p are delivered from Blu-ray discs, while DVD upscaling offers near-HD video quality.

See more

- DVD video upscaling to 1080p via HDMI for near-HD images
- Blu-ray Disc playback for sharp images in full HD 1080p

Hear more

- Dolby TrueHD for high fidelity sound


Engage more

- Enjoy all your movies and music from CD and DVD
- EasyLink to control all HDMI CEC devices via a single remote

PHILIPS

Highlights

Blu-ray Disc playback

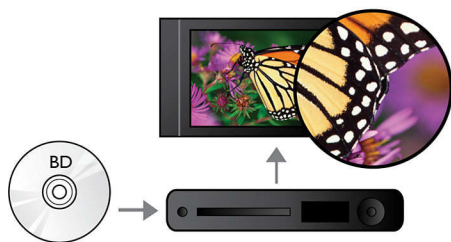

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.


DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition

can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Dolby TrueHD

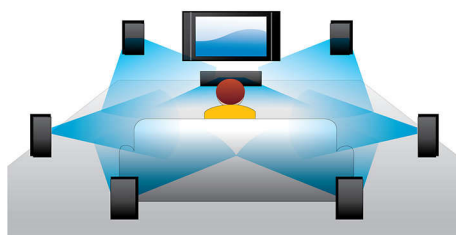

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



Specifications

Sound

- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out
- Sound Enhancement: Night Mode

Convenience

- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- On-Screen Display languages: English, Mexican Spanish
- Firmware upgradeable: Firmware upgradeable via USB

Connectivity

- Rear Connections: Digital coaxial out, HDMI output

Power

- Power consumption: 11 W
- Standby power consumption: < 1W
- Power supply: 110V, 60Hz

Accessories

- Included accessories: 2 x AAA Batteries, Product Registration Card, Quick start guide, Remote Control, User Manual
- User Manual: Canadian French, English, Mexican Spanish

Video Playback

- BD Region Code: A
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- DVD Region Code: 1

Product dimensions

- Height: 4.4 cm
- Width: 31 cm

- Depth: 20.3 cm
- Width: 12.2 inch
- Height: 1.7 inch
- Depth: 8.0 inch
- Weight: 1.08 kg
- Weight: 2.381 lb

Packaging dimensions

- Height: 8.5 cm
- Packaging type: Carton
- Width: 36 cm
- Height: 3.3 inch
- Number of products included: 1
- Depth: 28.5 cm
- Type of shelf placement: Laying
- Width: 14.2 inch
- Depth: 11.2 inch
- Nett weight: 1.18 kg
- Nett weight: 2.601 lb
- Gross weight: 1.53 kg
- Gross weight: 3.373 lb
- Tare weight: 0.35 kg
- Tare weight: 0.772 lb
- UPC: 6 09585 24226 5

Outer Carton

- Length: 36 cm
- Number of consumer packagings: 1
- Length: 14.2 inch
- Width: 28.5 cm
- Height: 8.5 cm
- Width: 11.2 inch
- Height: 3.3 inch
- Nett weight: 1.18 kg
- Gross weight: 1.53 kg
- Nett weight: 2.601 lb
- Gross weight: 3.373 lb
- Tare weight: 0.35 kg
- Tare weight: 0.772 lb
- UPC: 6 09585 24226 5

Optical Playback Media

- Playable Discs: BD, CD, CDDA, DVD, SVCD, VCD



Issue date 2024-08-16

Version: 3.3.8

UPC: 6 09585 24226 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com