

Paper: 200gsm double side printing art paper
Printing colour: 4 process colour + 4 process colour
Coating: One-side (English) side gloss coating

Eng.
Side

360 mm

19PFL connection label Front (English)

1cm high Grue Area

1cm high Grue Area

1cm high Grue Area

Folding Line

Use the **BEST** connection possible for High Definition (HD) TV

- Remember, your TV picture quality for HD viewing is based on the connected signal source.
- Contact your local Cable / Satellite provider for High Definition Signal availability in your area.

Reference Colour

Pantone 1788

Pantone 196

Pantone 110

Pantone 155

Pantone 368

Pantone 372

Pantone 3005

HD Cable / Satellite / DVD / Game Console


BEST

Connection for digital High Definition Video & Audio.


- HDMI is your best digital HD connection.
- Use HDMI input connection for your HD Cable box, HD Satellite signal or Blu-Ray DVD input.



AC IN

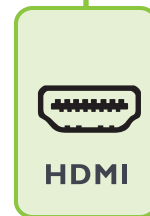

HDMI

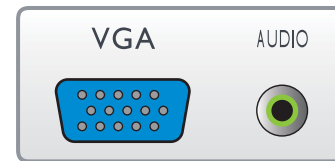


PC IN

HD Cable / Satellite / DVD / Game Console


Better

Connection for products that do not have HDMI outputs.

- Component Video Inputs are excellent digital connections.
- Use the AVI component Video inputs (Y Pb Pr) and Audio input (L&R) for your HD Cable box, HD Satellite signal or Blu-Ray DVD input.

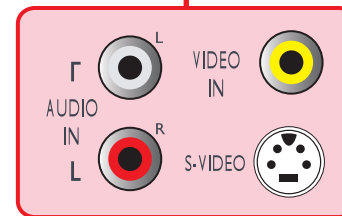

AV2

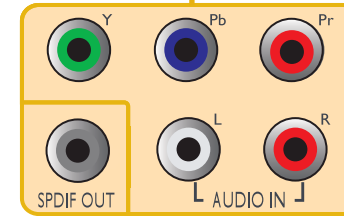

AVI

VCR, Digital Camera / Camcorder

Good

Connection for accessory products:

- Use the Composite Yellow Video input & Audio L&R inputs.
- AV2 and Side AV are available as composite input by using Yellow Video In jack.



If your TV signal is from a 75 ohm Cable or Antenna, you can use this 75 ohm Cable / Antenna connection.

- Refer to the beginning pages of your User Manual for additional connection options.
- Need a cable? Philips has them at: www.shopping.philips.com/cables

Las instrucciones en español se encuentran en la otra cara.

19PFL5402D/27
19PFL5422D/27
19PFL5622D/37

Utilice la **MEJOR** conexión posible para TV de Alta Definición (HD)

- Recuerde, la calidad de imagen de su TV en HD se basa en la fuente de señal conectada.
- Póngase en contacto con su proveedor local de Cable /Satélite para consultar la disponibilidad de Señal de Alta Definición en su zona.

Cable HD / Satélite / DVD / Consola de Juegos


MEJOR

Conexión para Video y Audio digital de Alta Definición.

- HDMI es la mejor conexión HD digital.
- Puede utilizar las entradas HDMI para su receptor de Cable HD, señal de satélite HD o entrada DVD Blu-Ray.



AC IN

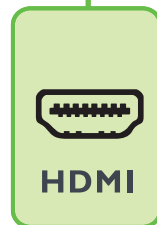

HDMI




PC IN

Cable HD / Satélite / DVD / Consola de Juegos


Mejor

Conexión para productos que no tienen entradas HDMI.

- Las entradas de vídeo en componentes son excelentes conexiones digitales.
- Utilice las entradas de Vídeo en componentes AVI (Y Pb Pr) y la entrada de Audio (L y R) para su receptor de Cable HD, señal de satélite HD o entrada de DVD Blu-Ray.

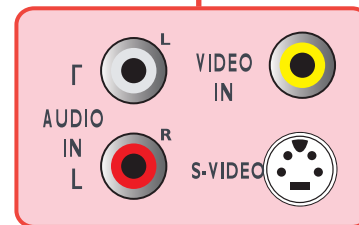

AV2

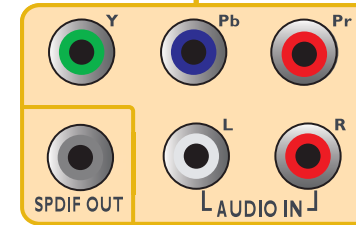

AVI

Reproductor de vídeo, Cámara digital/Cámara de vídeo

Buena

Conexión para productos periféricos:

- Utilice la entrada de vídeo compuesto amarilla y las entradas de audio L y R.
- Los conectores AV2 y AV lateral están disponibles como entrada compuesta utilizando el conector de entrada de vídeo amarillo.



Si su señal de TV proviene de un Cable o Antena de 75 ohmios, puede utilizar esta conexión de Cable/Antena de 75 ohmios.

- Consulte las primeras páginas de su manual de usuario para conocer otras opciones de conexión.
- ¿Necesita un cable? Philips los pone a su disposición en: www.shopping.philips.com/cables

English is at reverse side

I9PFL5402D/27
I9PFL5422D/27
I9PFL5622D/37

Reference Colour

Pantone 1788

Pantone 196

Pantone 110

Pantone 155

Pantone 368

Pantone 372

Pantone 3005

Folding Line